

TOP THUMB!




BUILD GUIDE




60x
2780
Black




2x
60484
Black

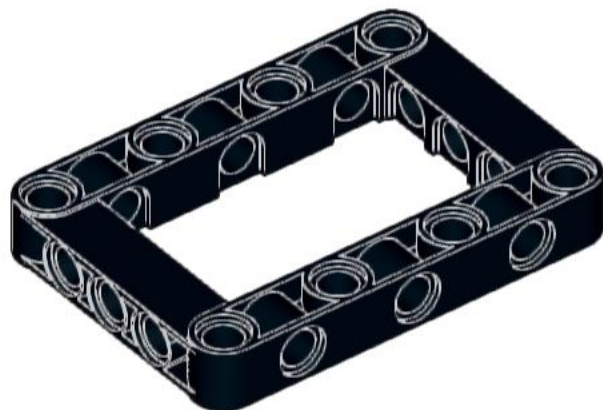

1x
64179
Black

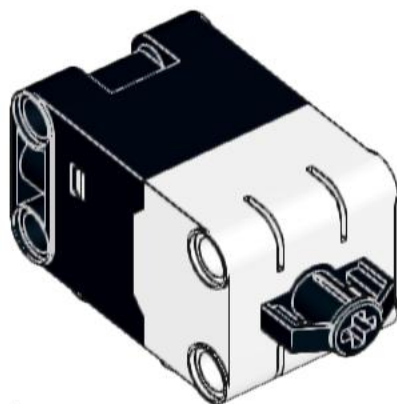


1x
37312c01
Black

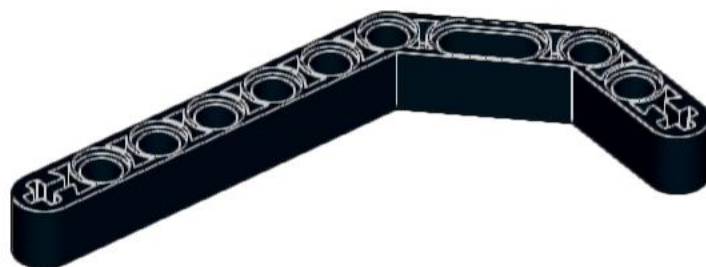


1x
32009
Black



1x
32278
Black

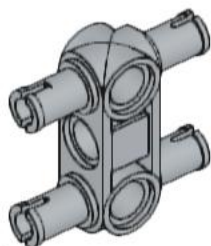


6x
48989
Light Bluish Gray

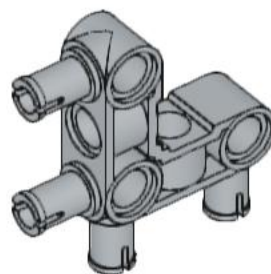


1x
55615
Light Bluish Gray




1x
14769pb209
White

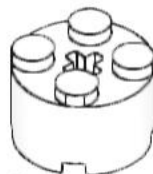


1x
3941
White

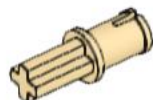


3x
3749
Tan

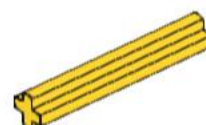


1x
4519
Yellow

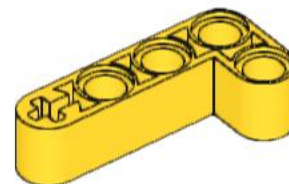


2x
32140
Yellow

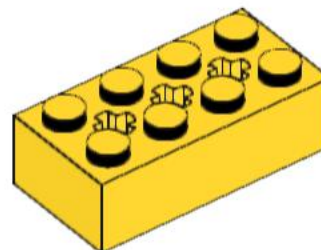


1x
39789
Yellow

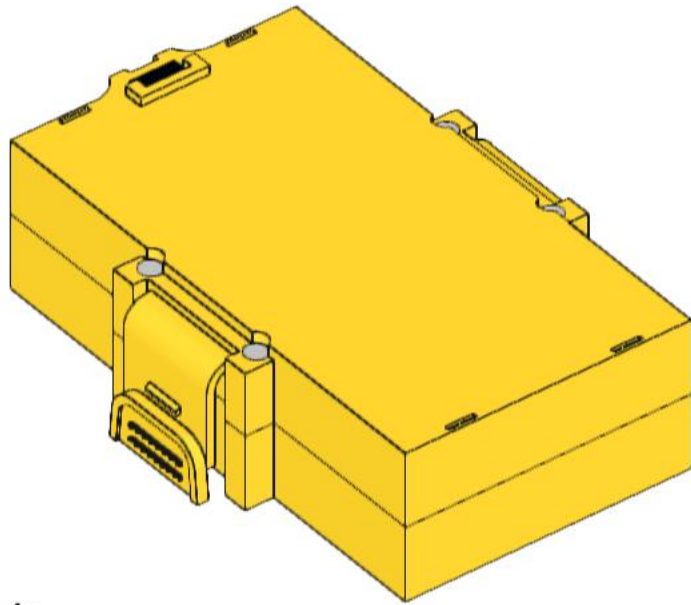


1x
55422c01
Yellow

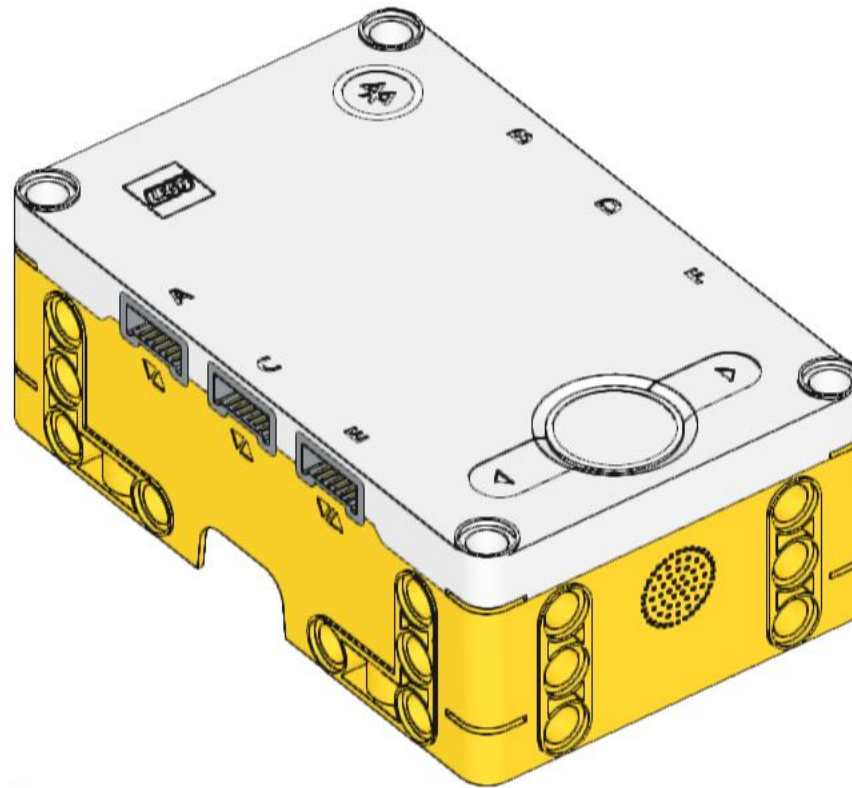


1x
bb1142c01
Yellow

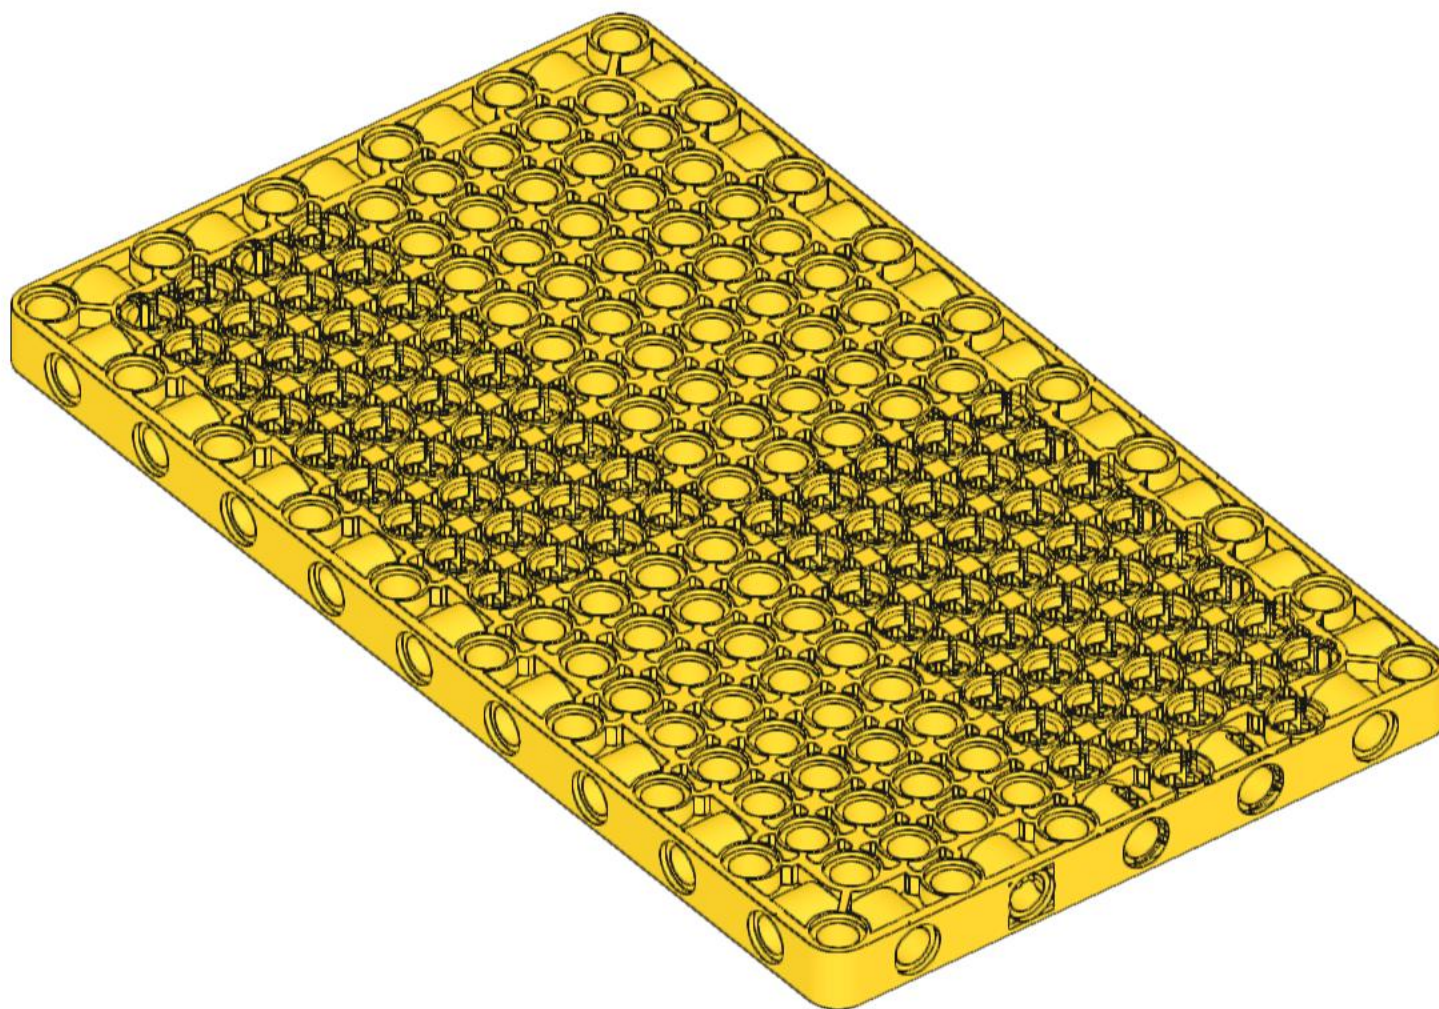


2x
39369
Yellow

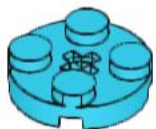


1x
4032
Medium Azure

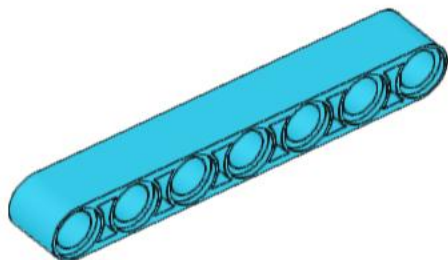


1x
32524
Medium Azure

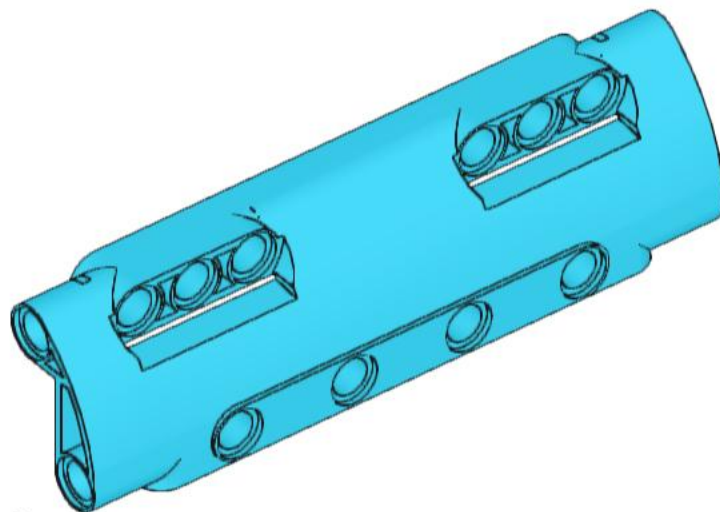



2x
11954
Medium Azure

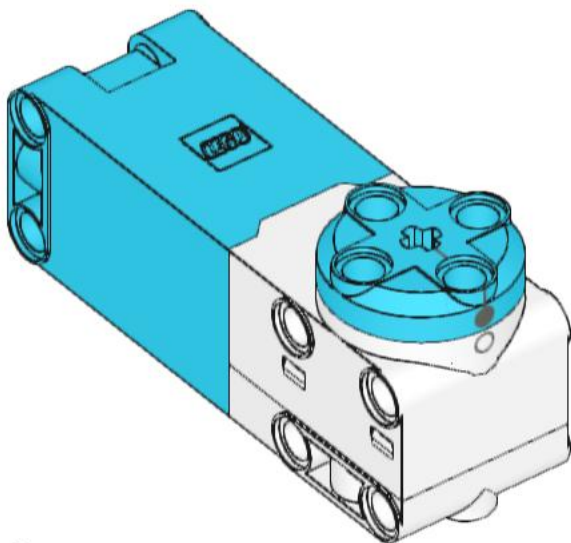


2x
54696c01
Medium Azure

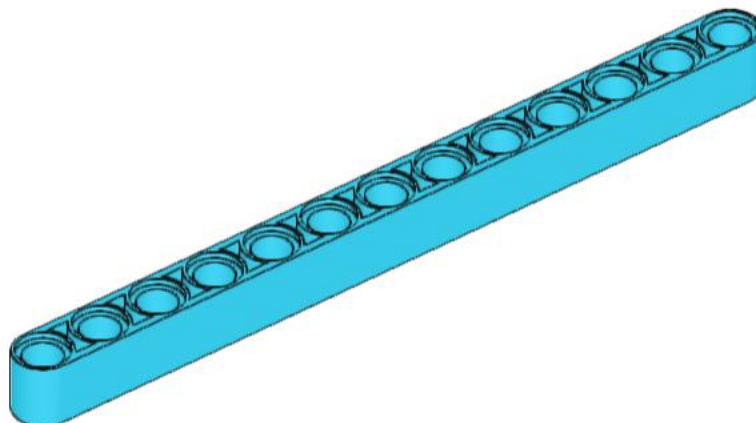


2x
41239
Medium Azure

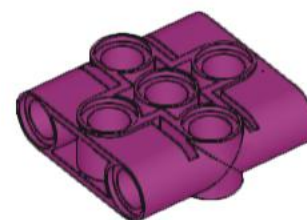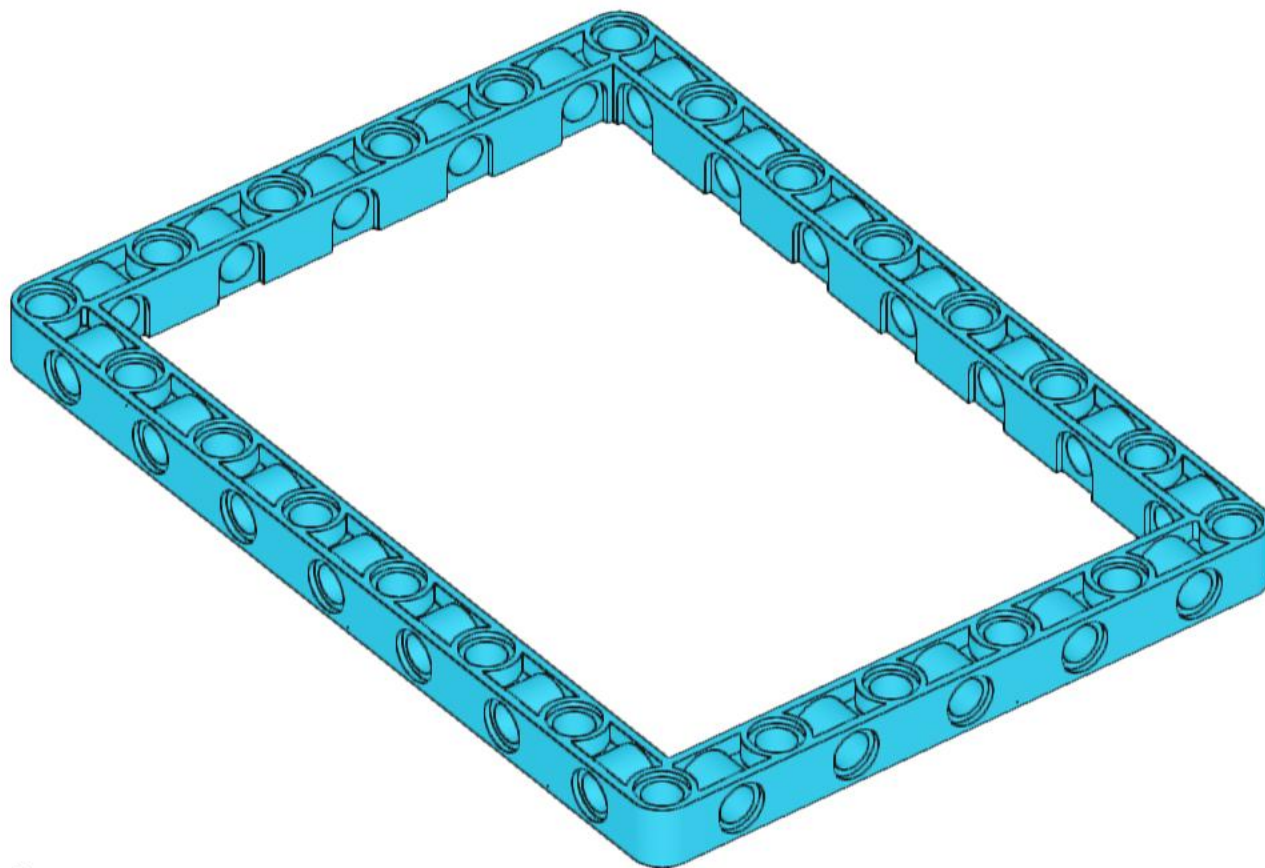

2x
39793
Magenta

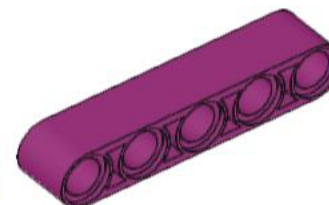

3x
32316
Magenta

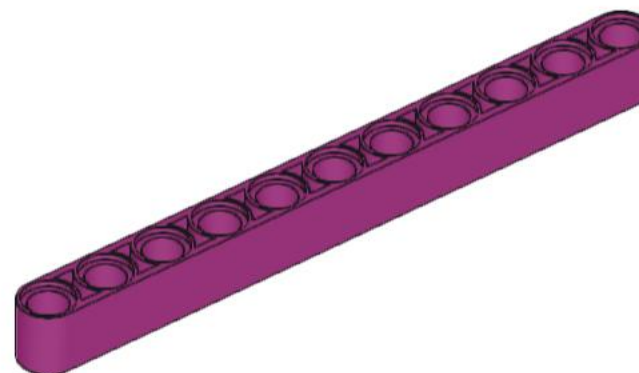




6x
32525
Magenta

2x
39790
Medium Azure





3x
6558
Blue



1

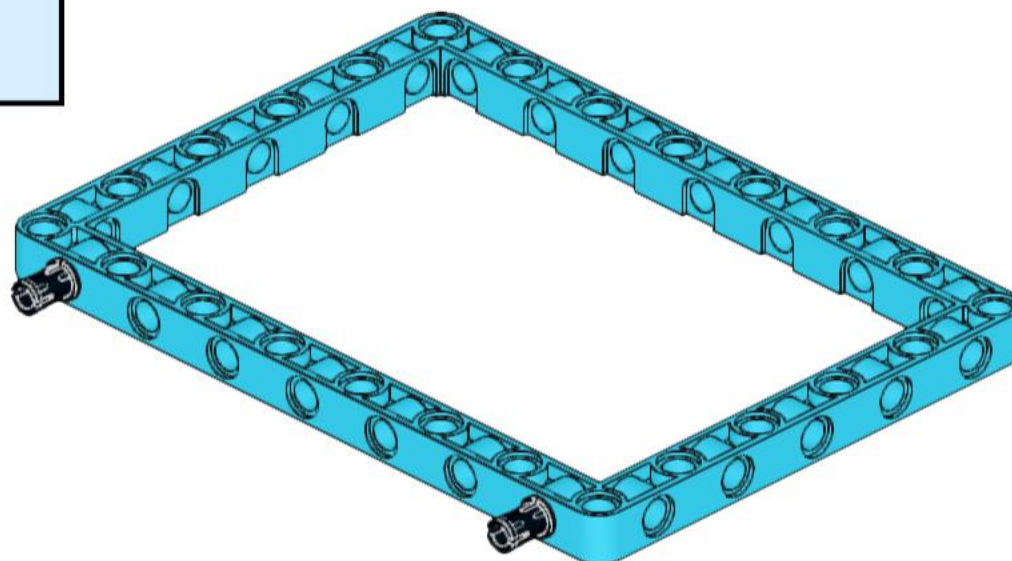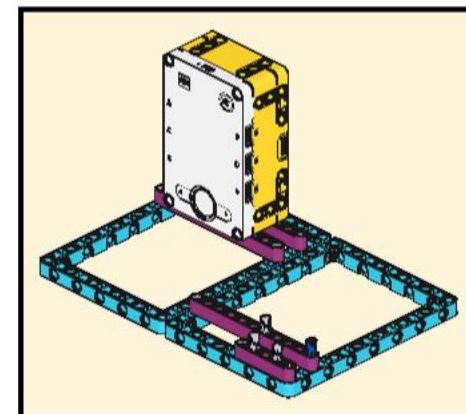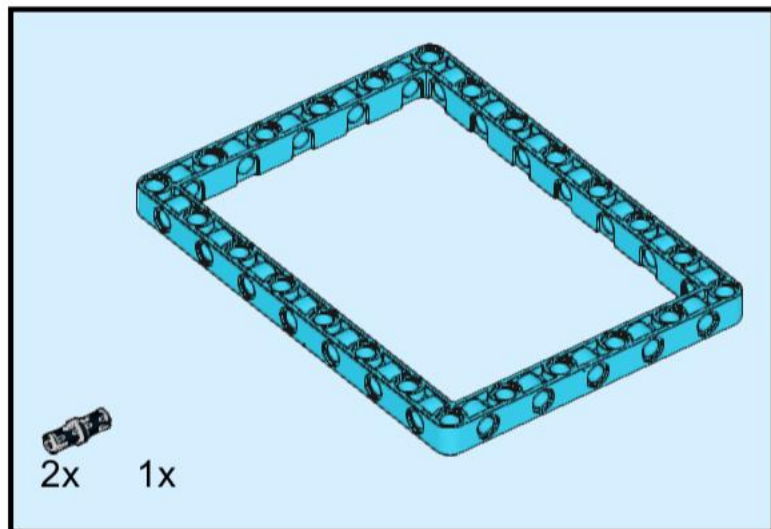




2

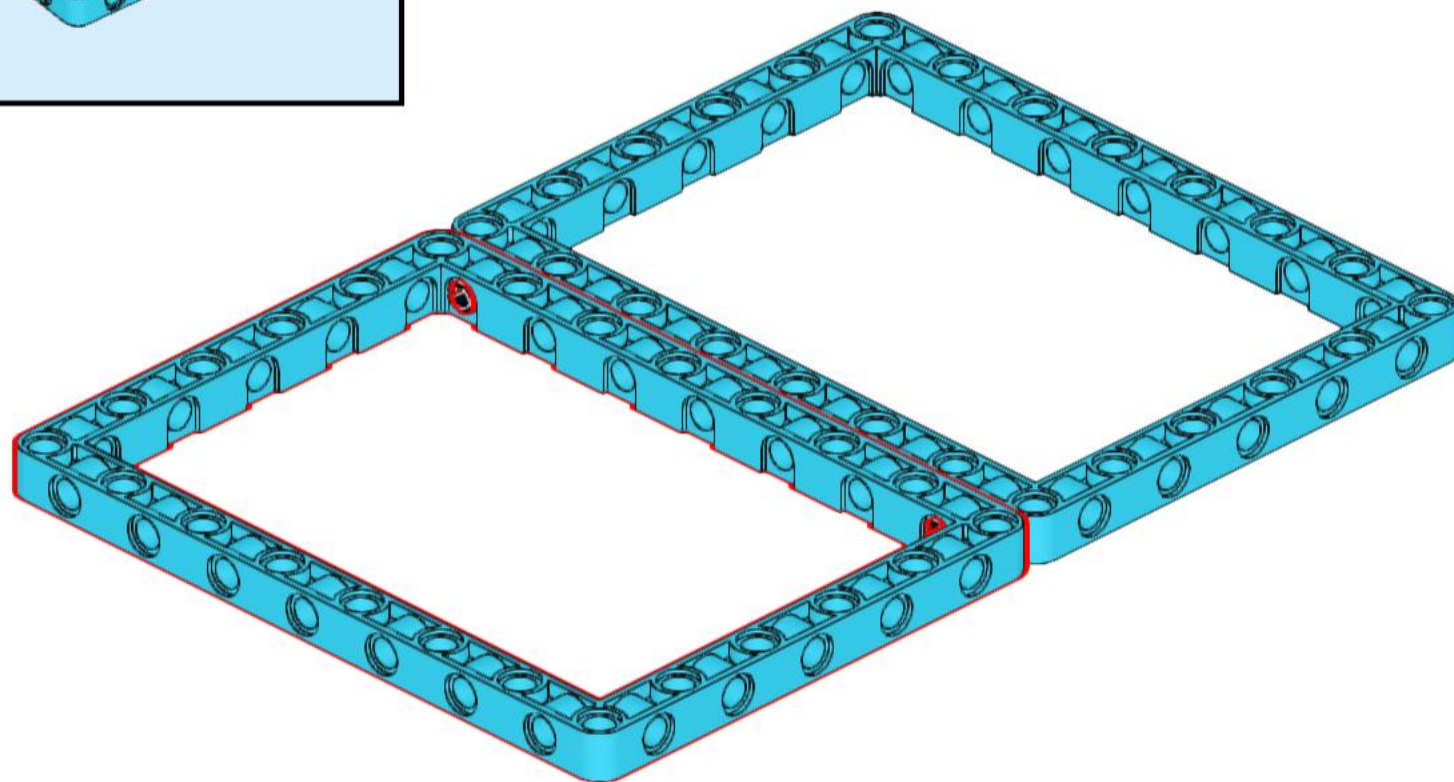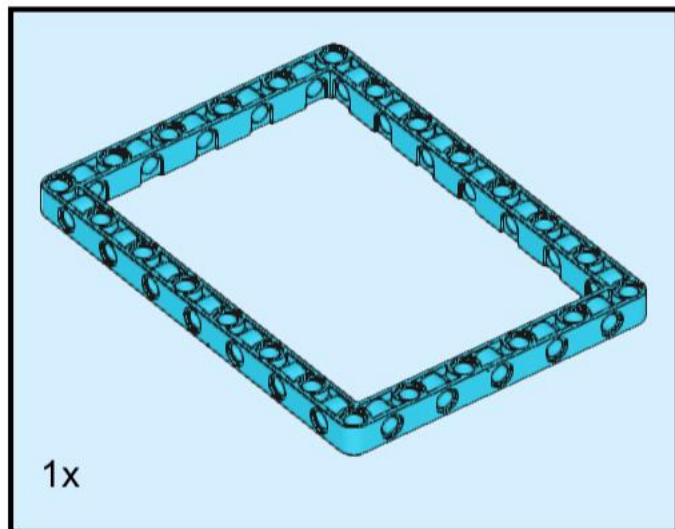


3

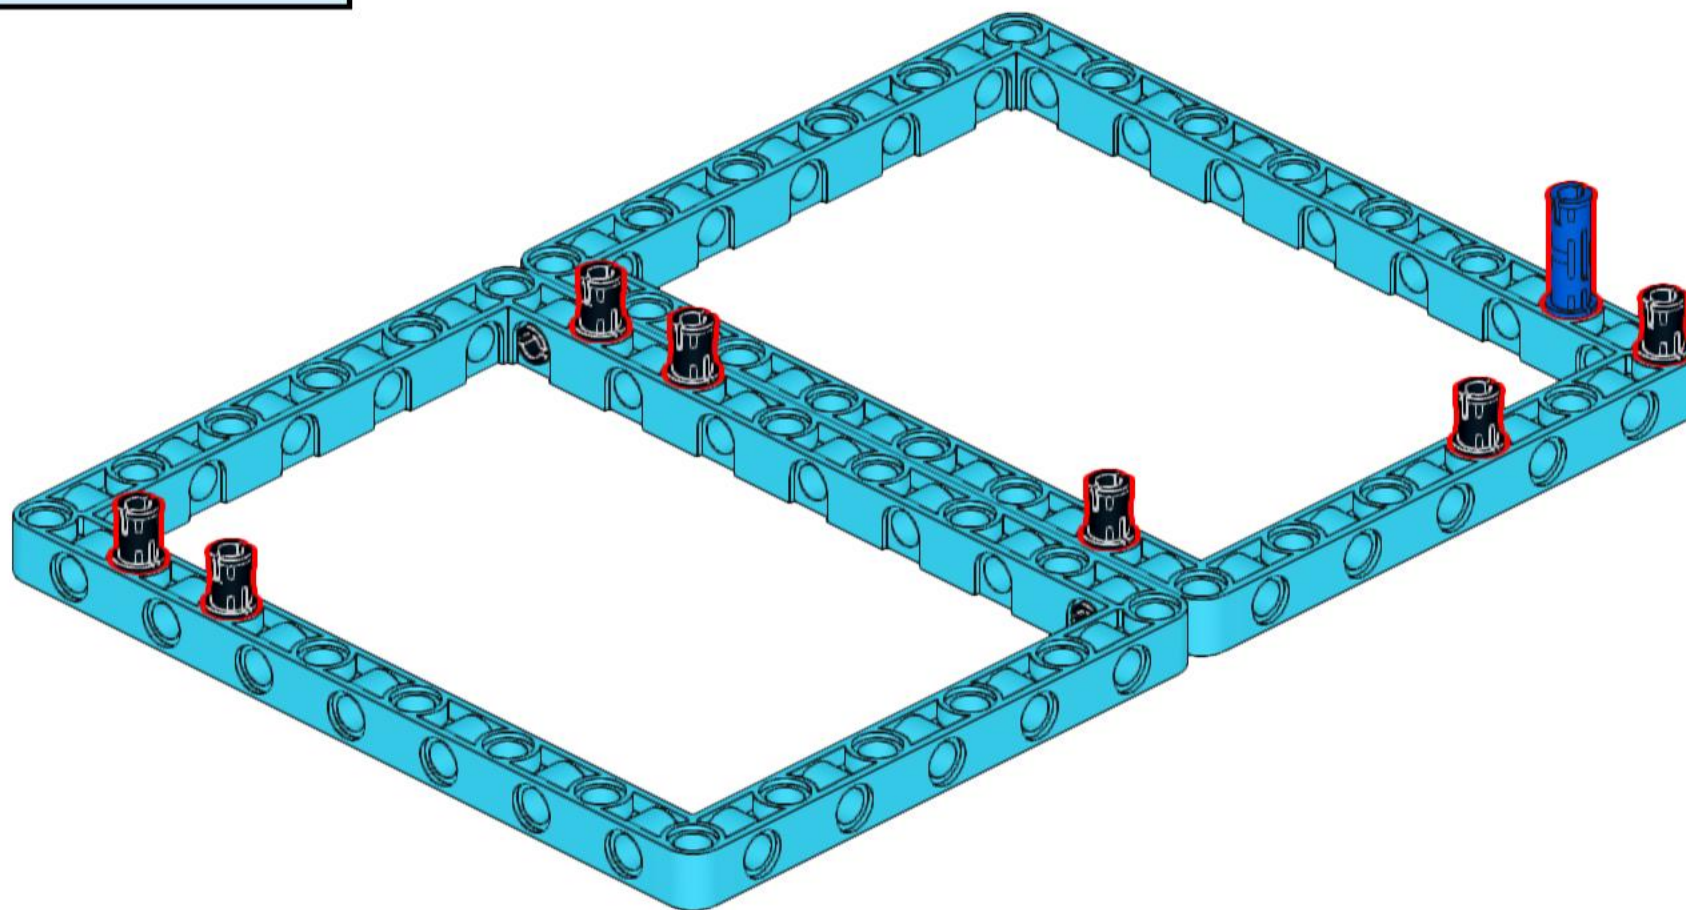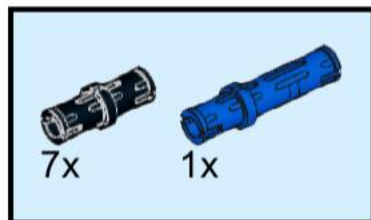



4

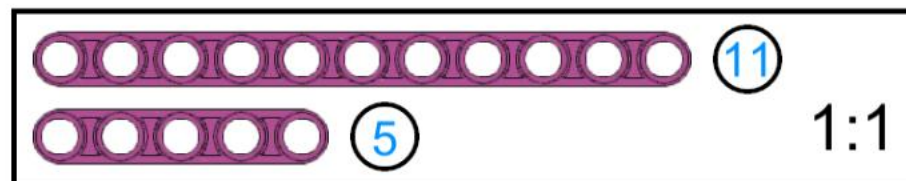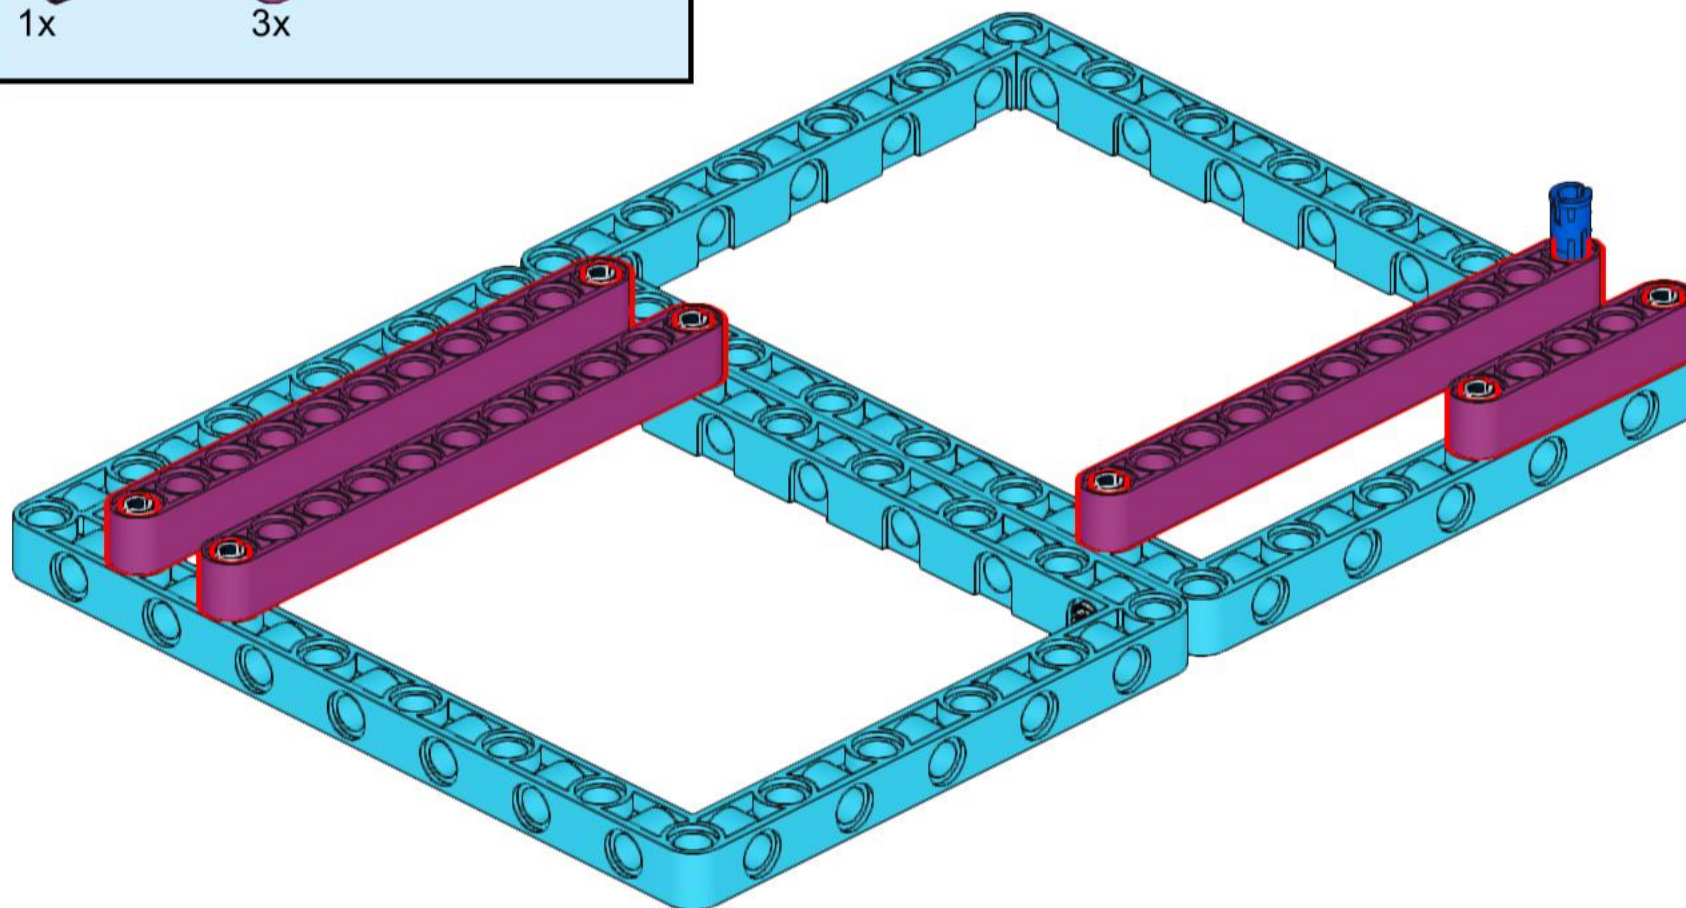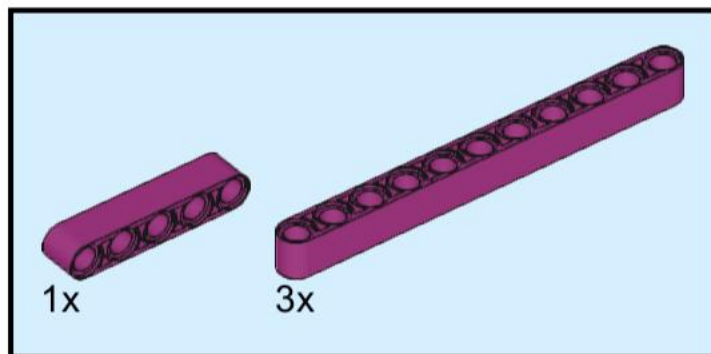


5

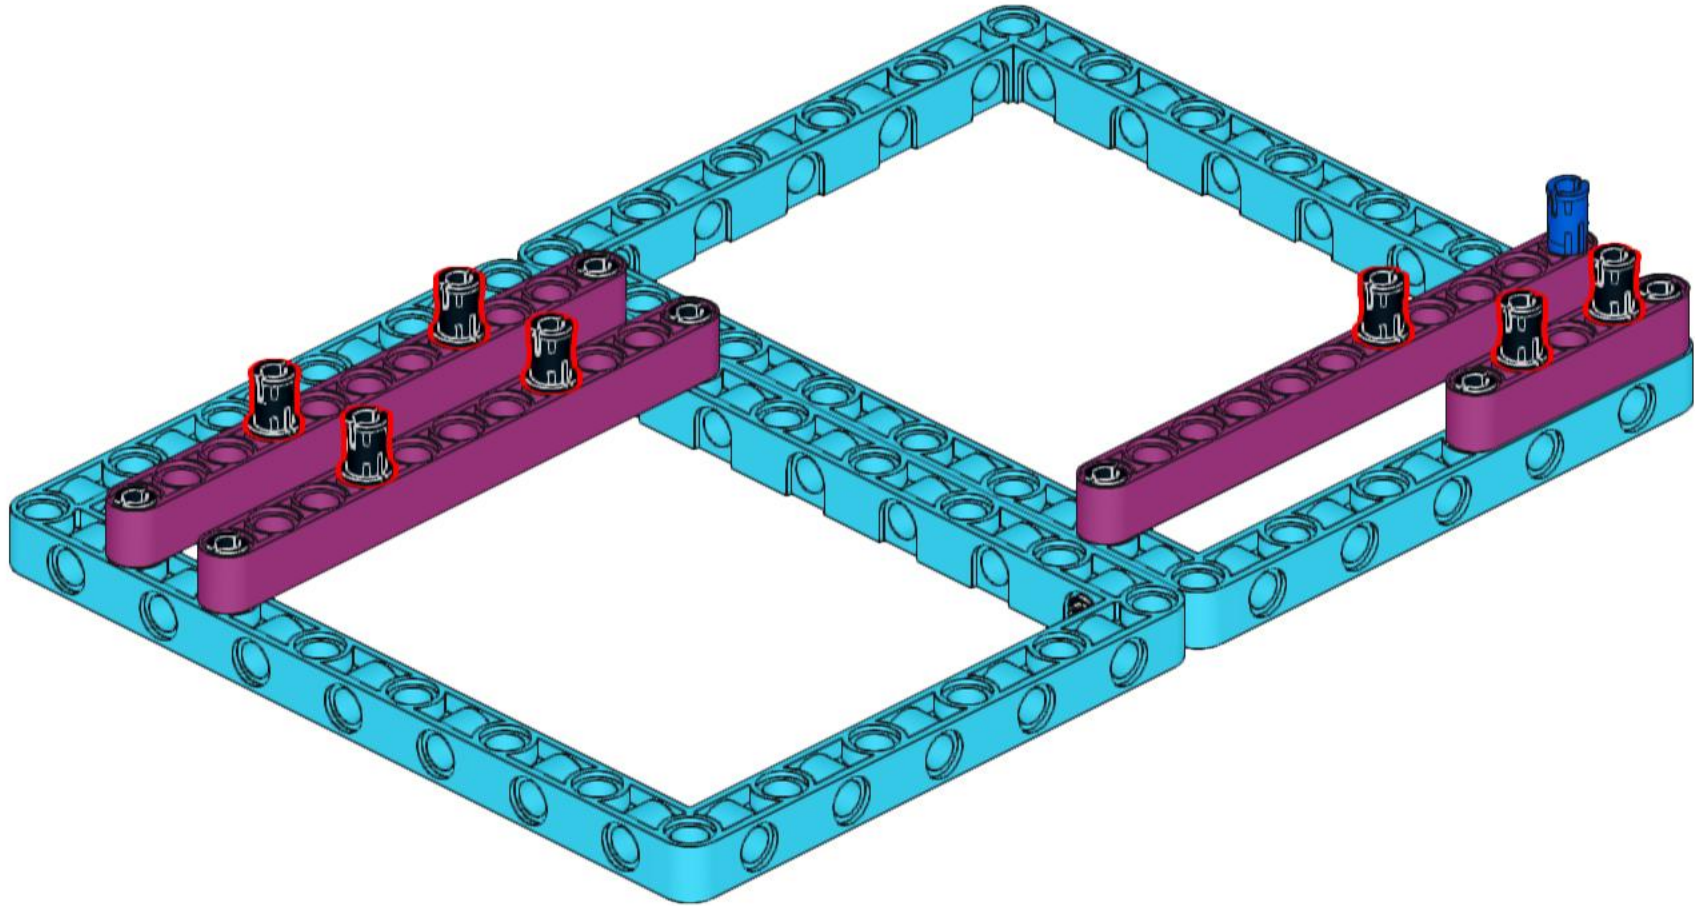




6

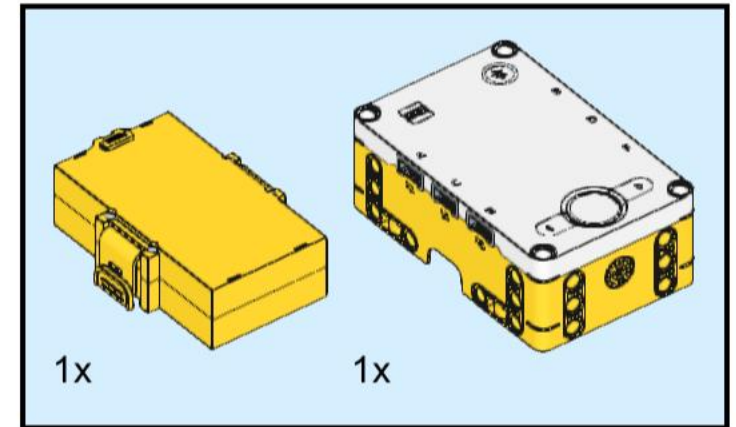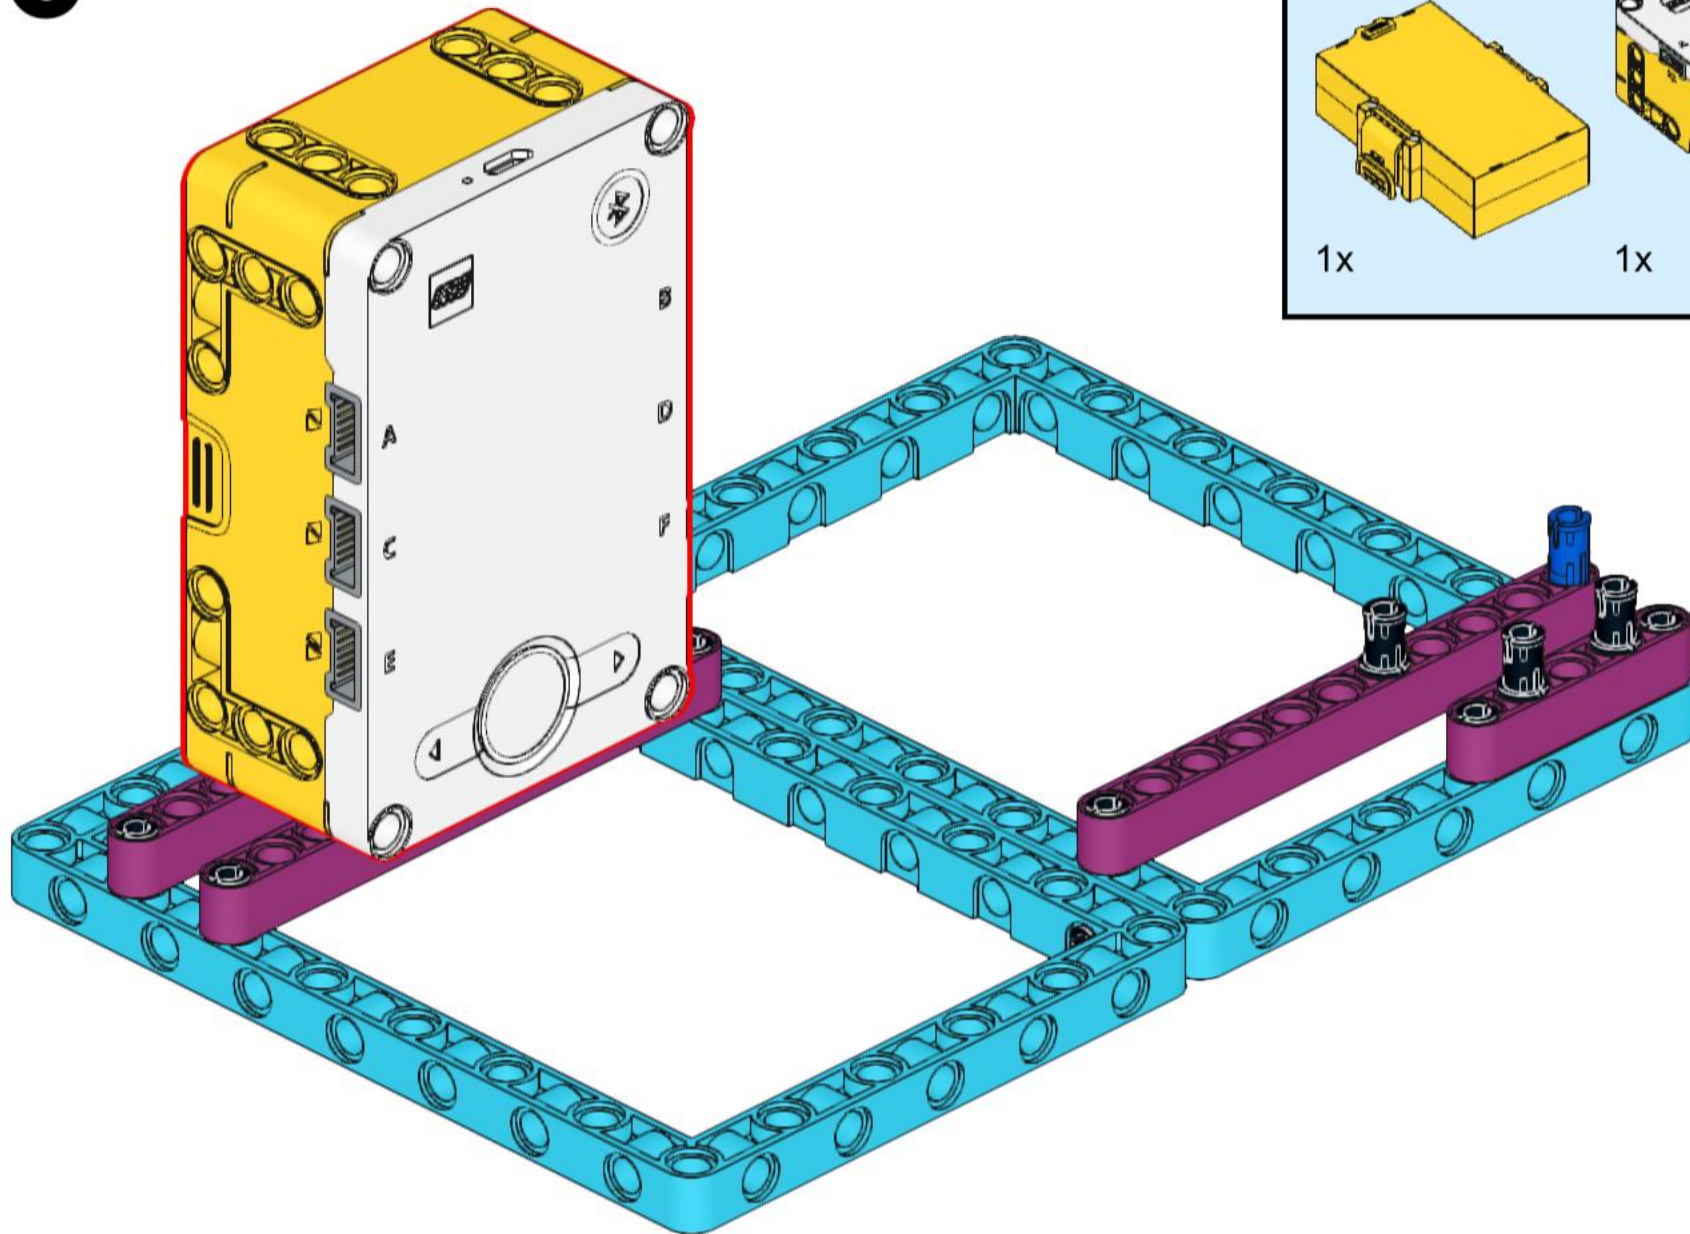



7

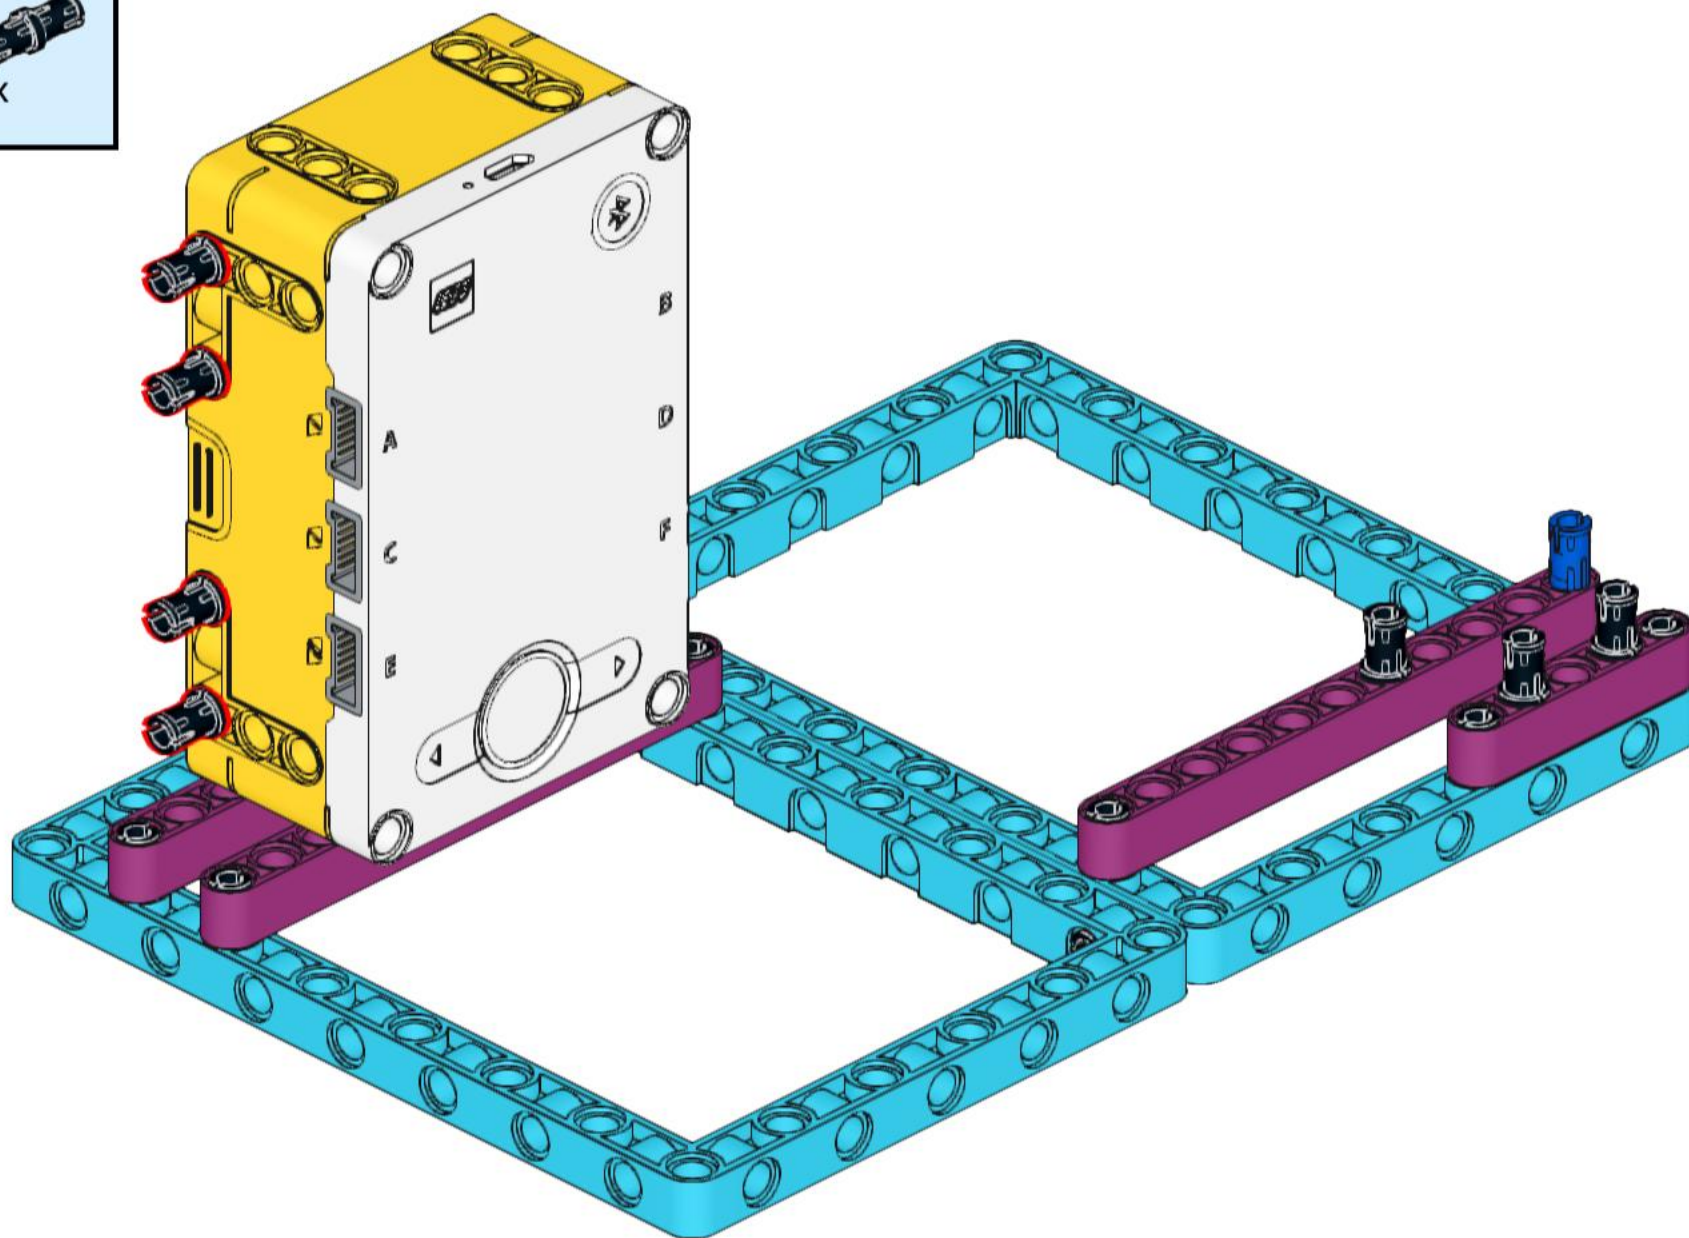



8

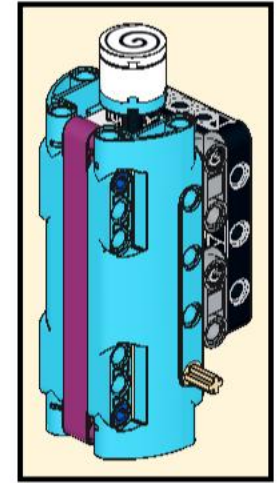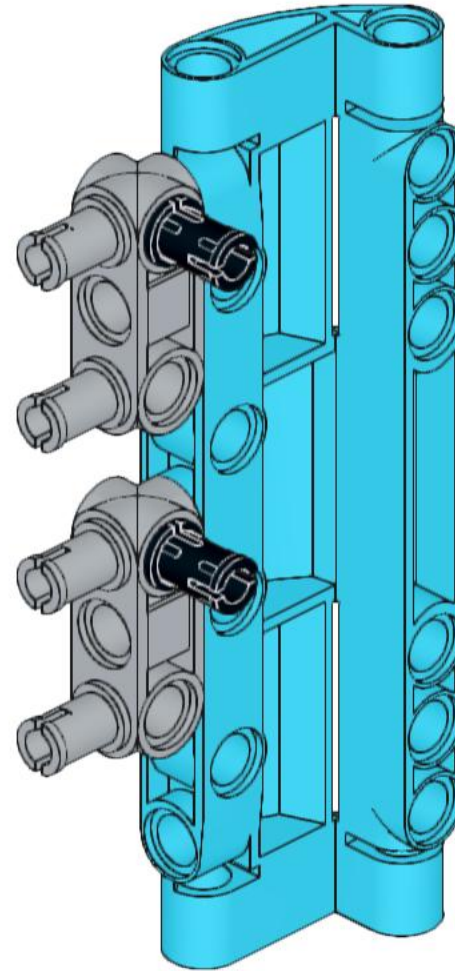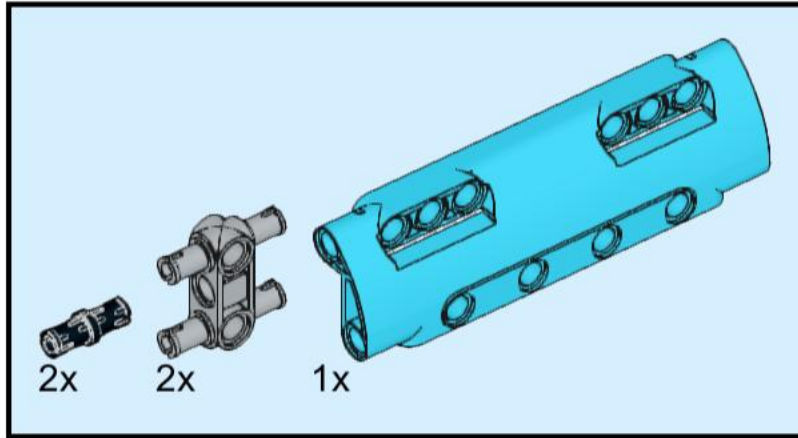




9

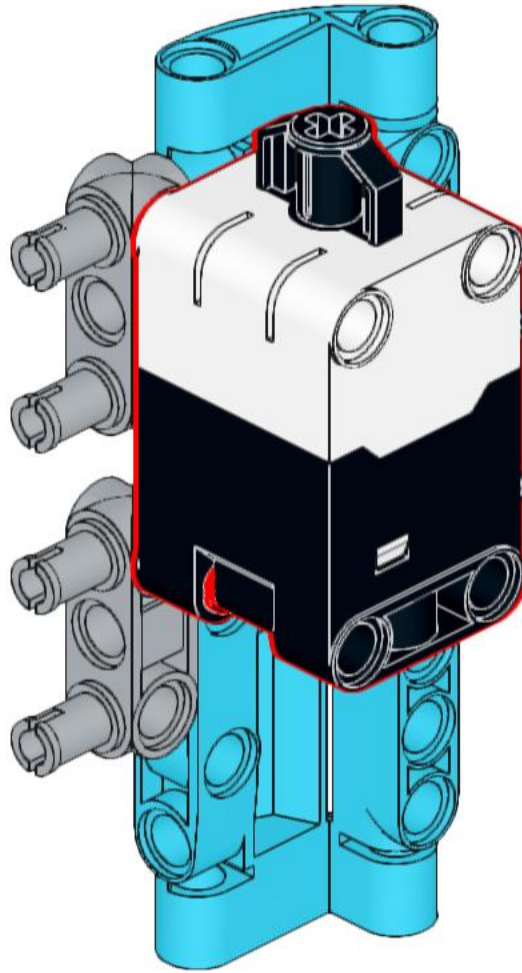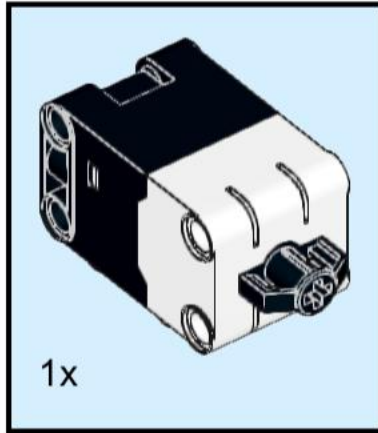




10

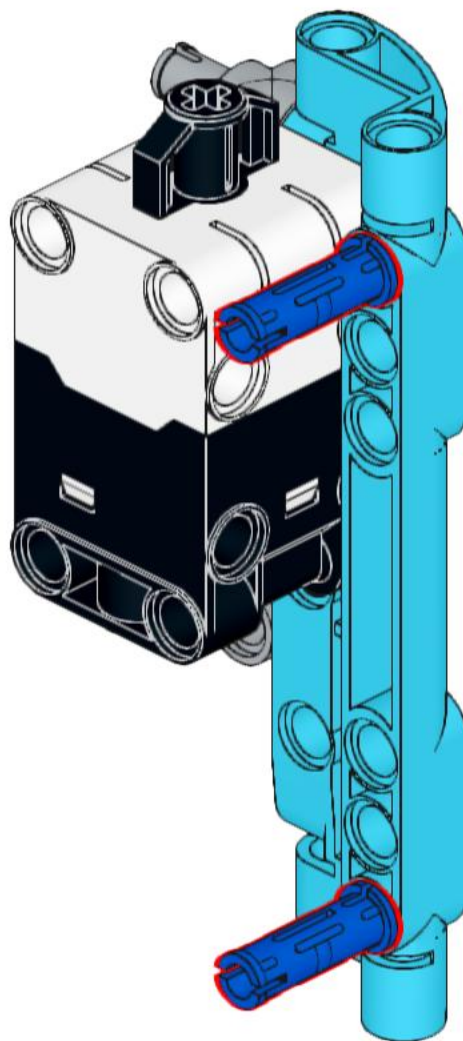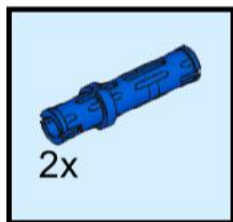


11

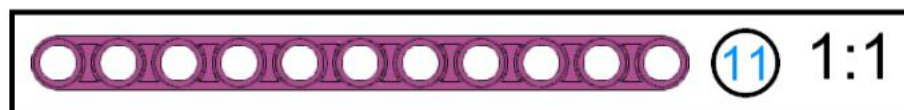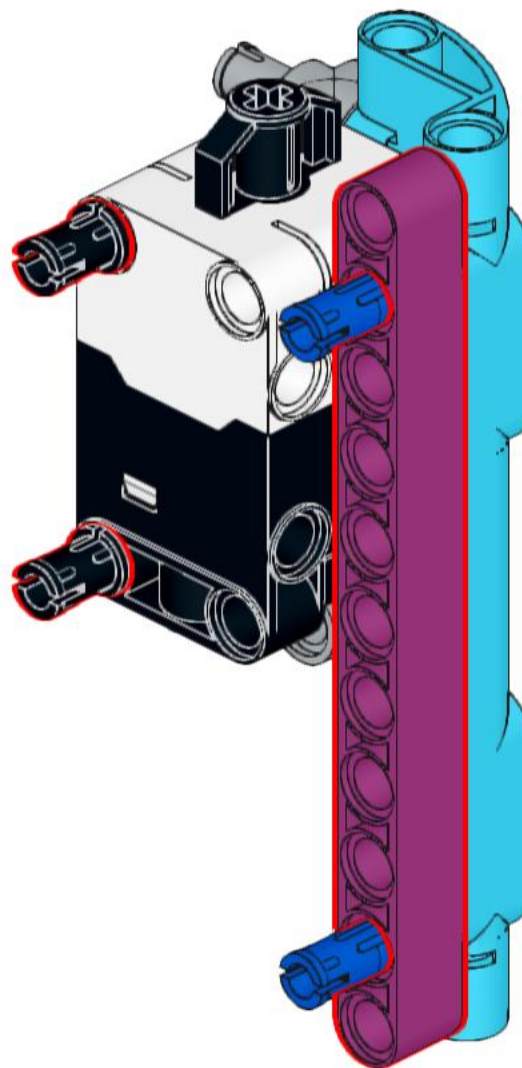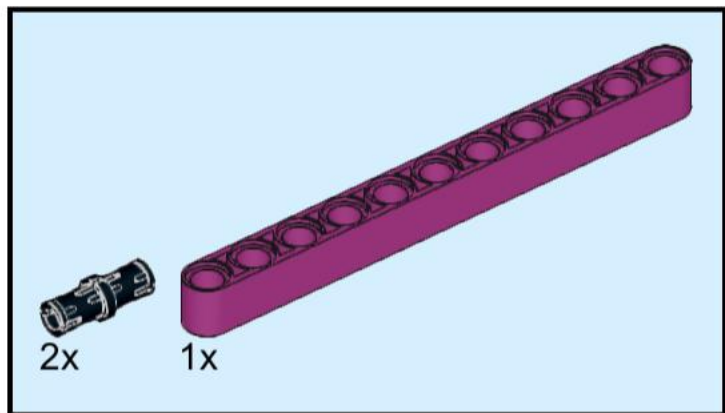



12

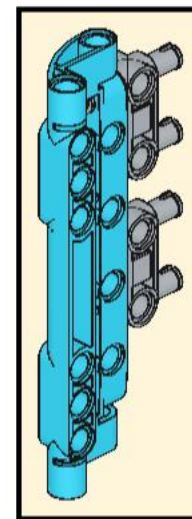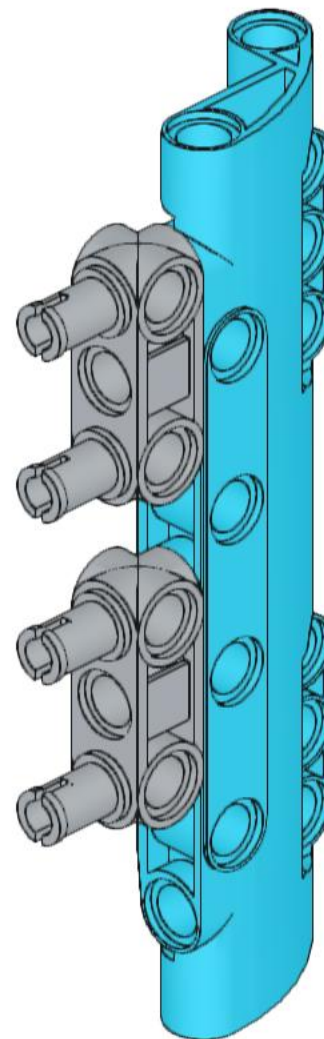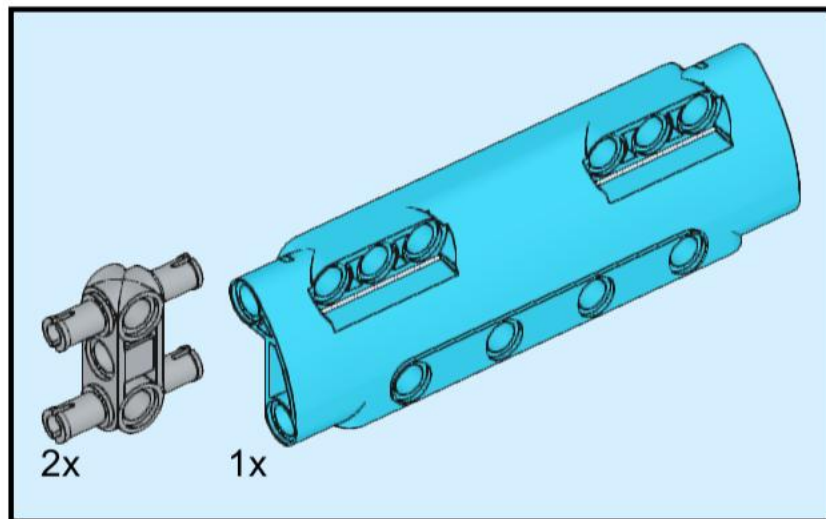




13

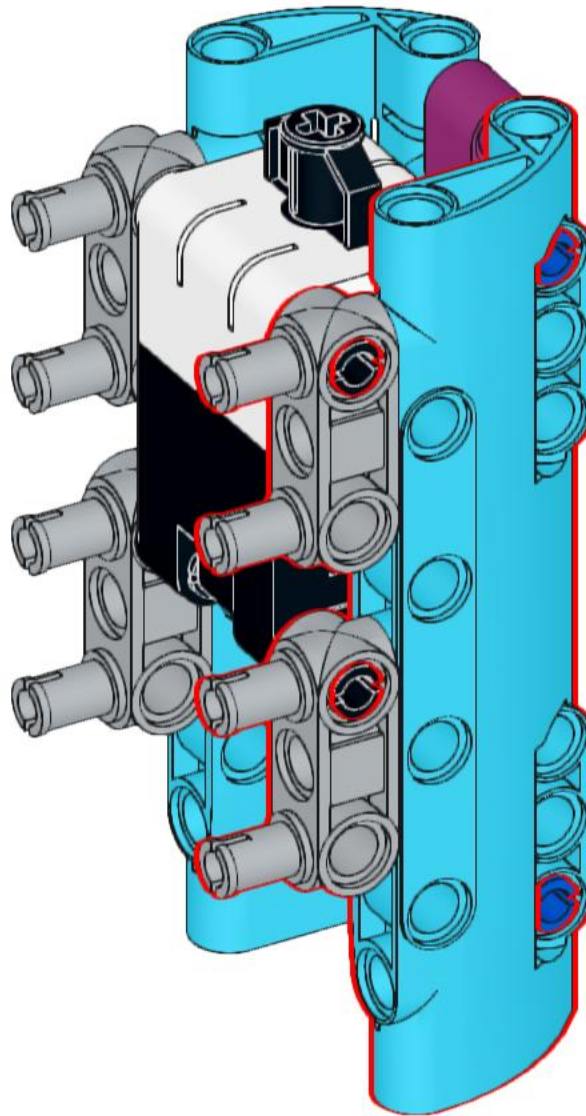



14

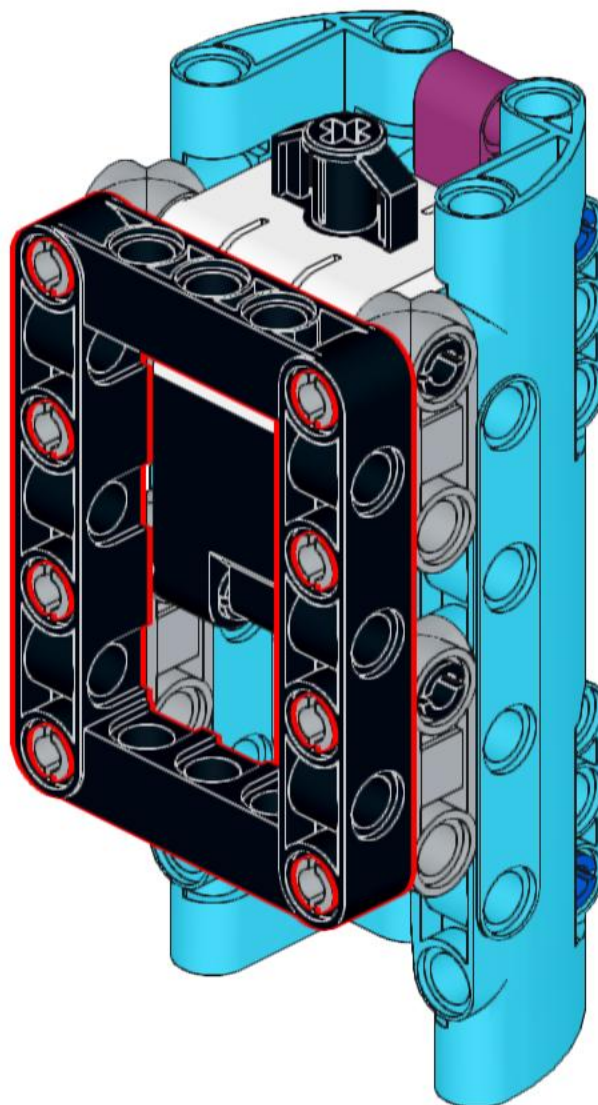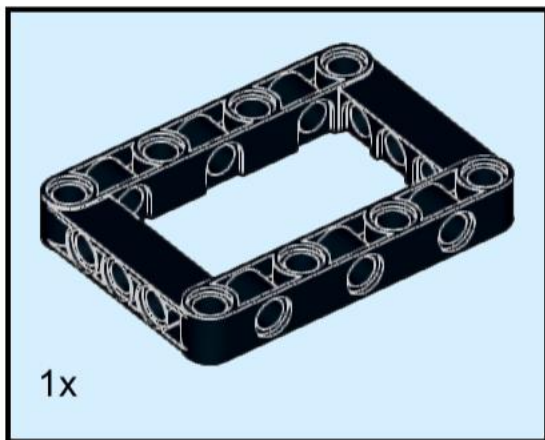



15

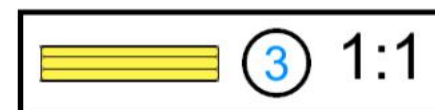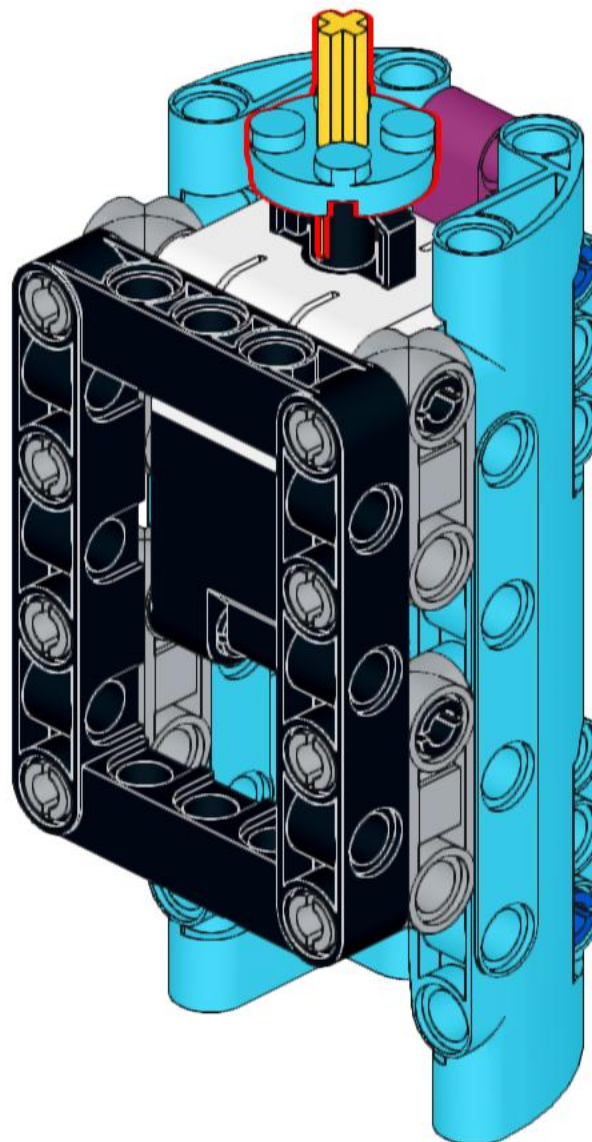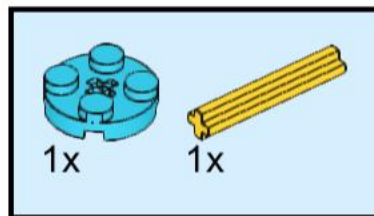


16

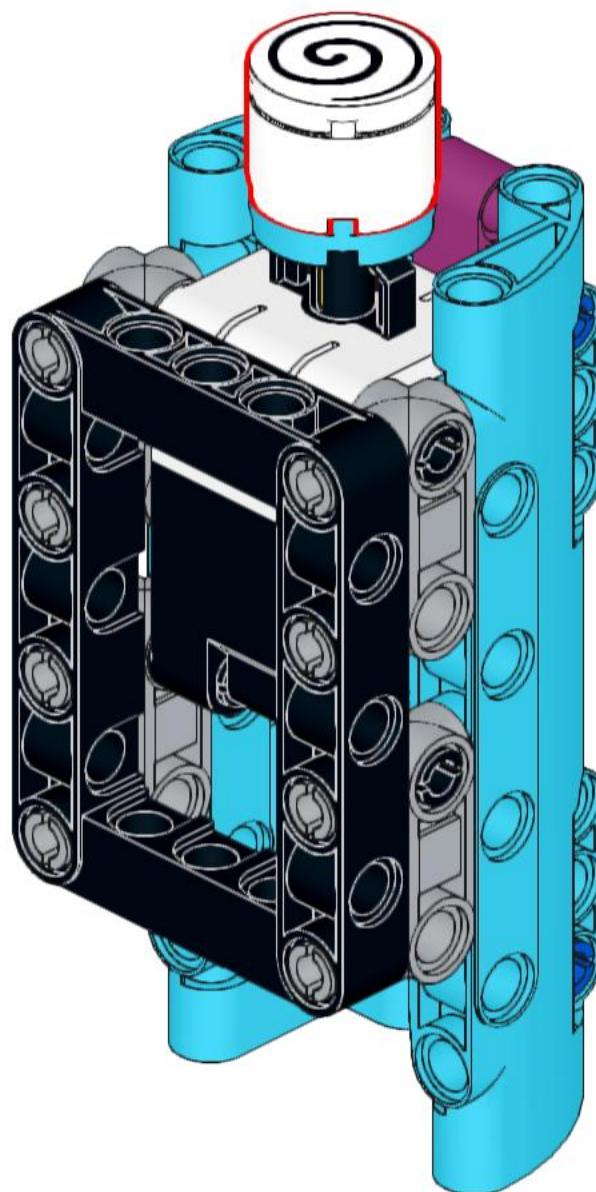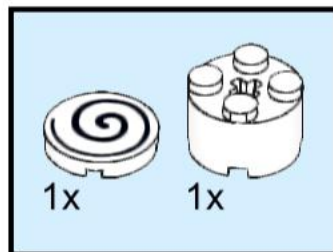

17

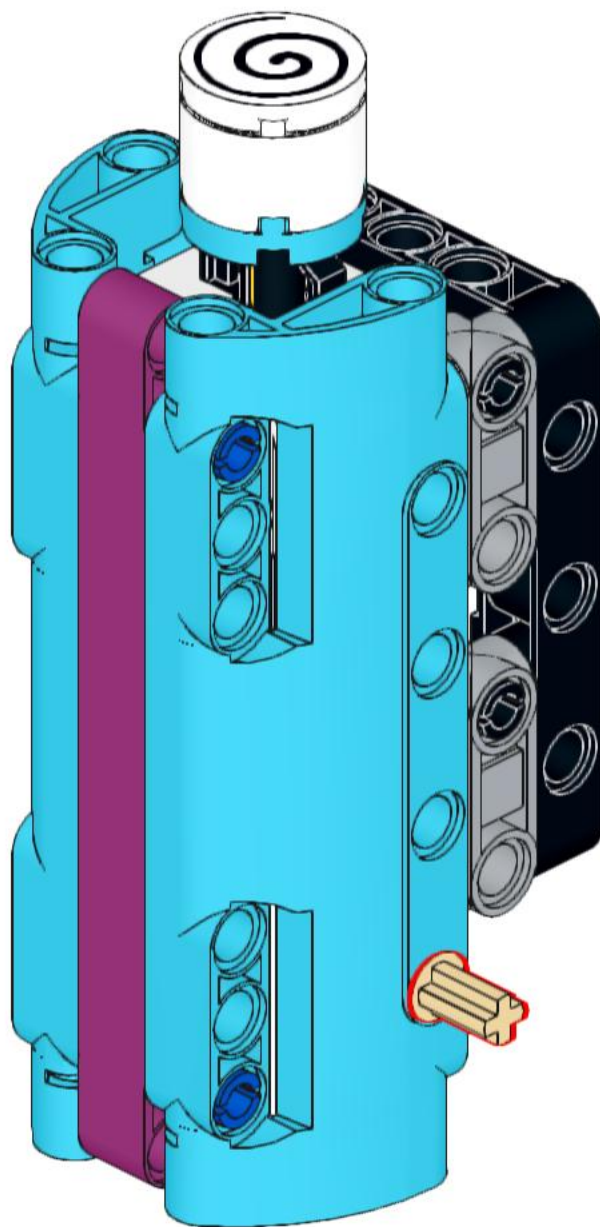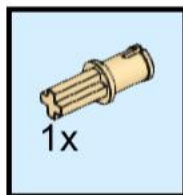


18


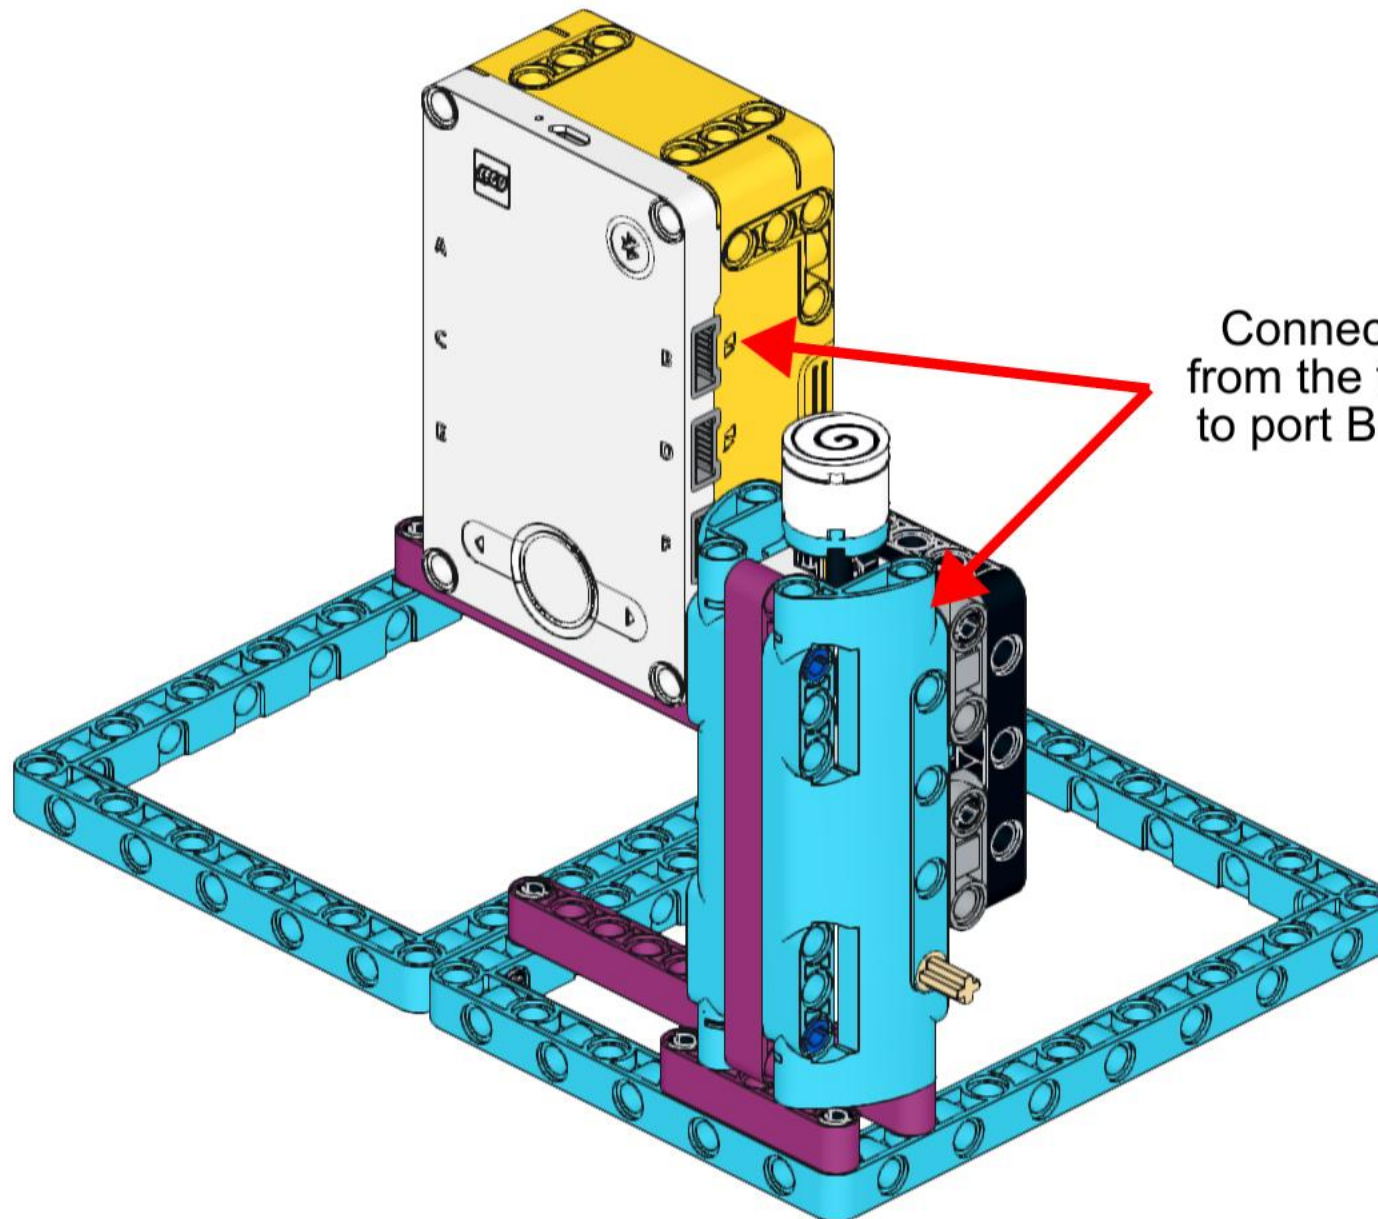


Connect the cable from the force sensor to port B on the hub.




19

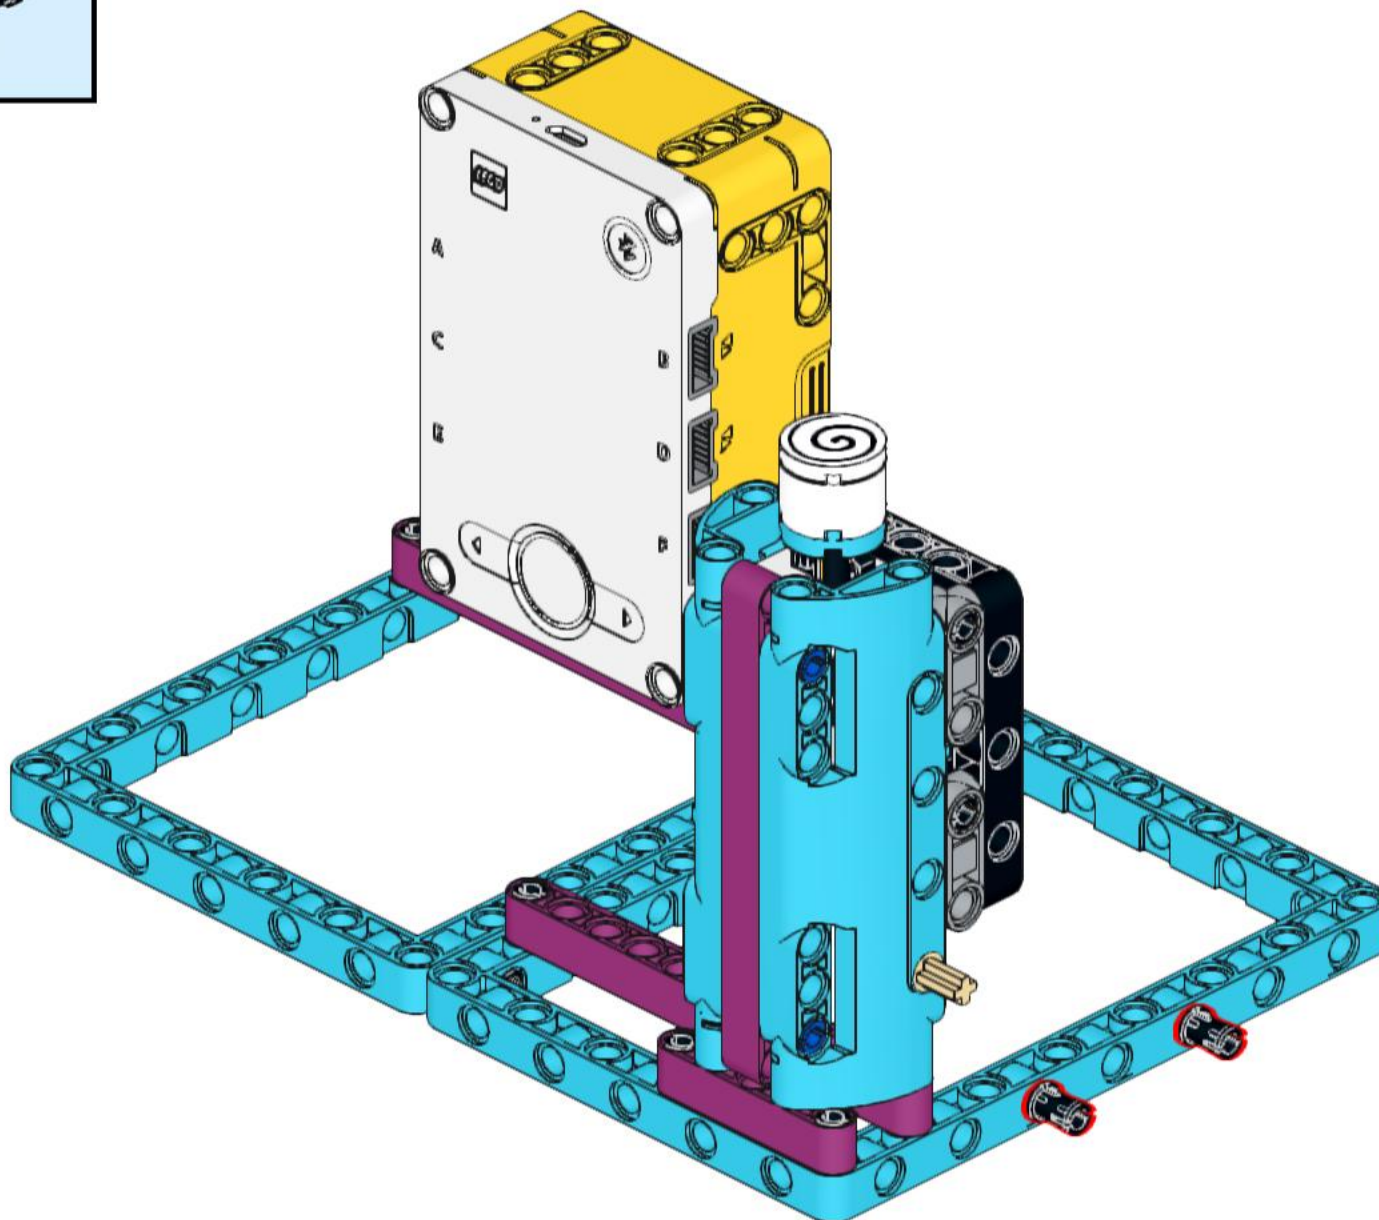



20

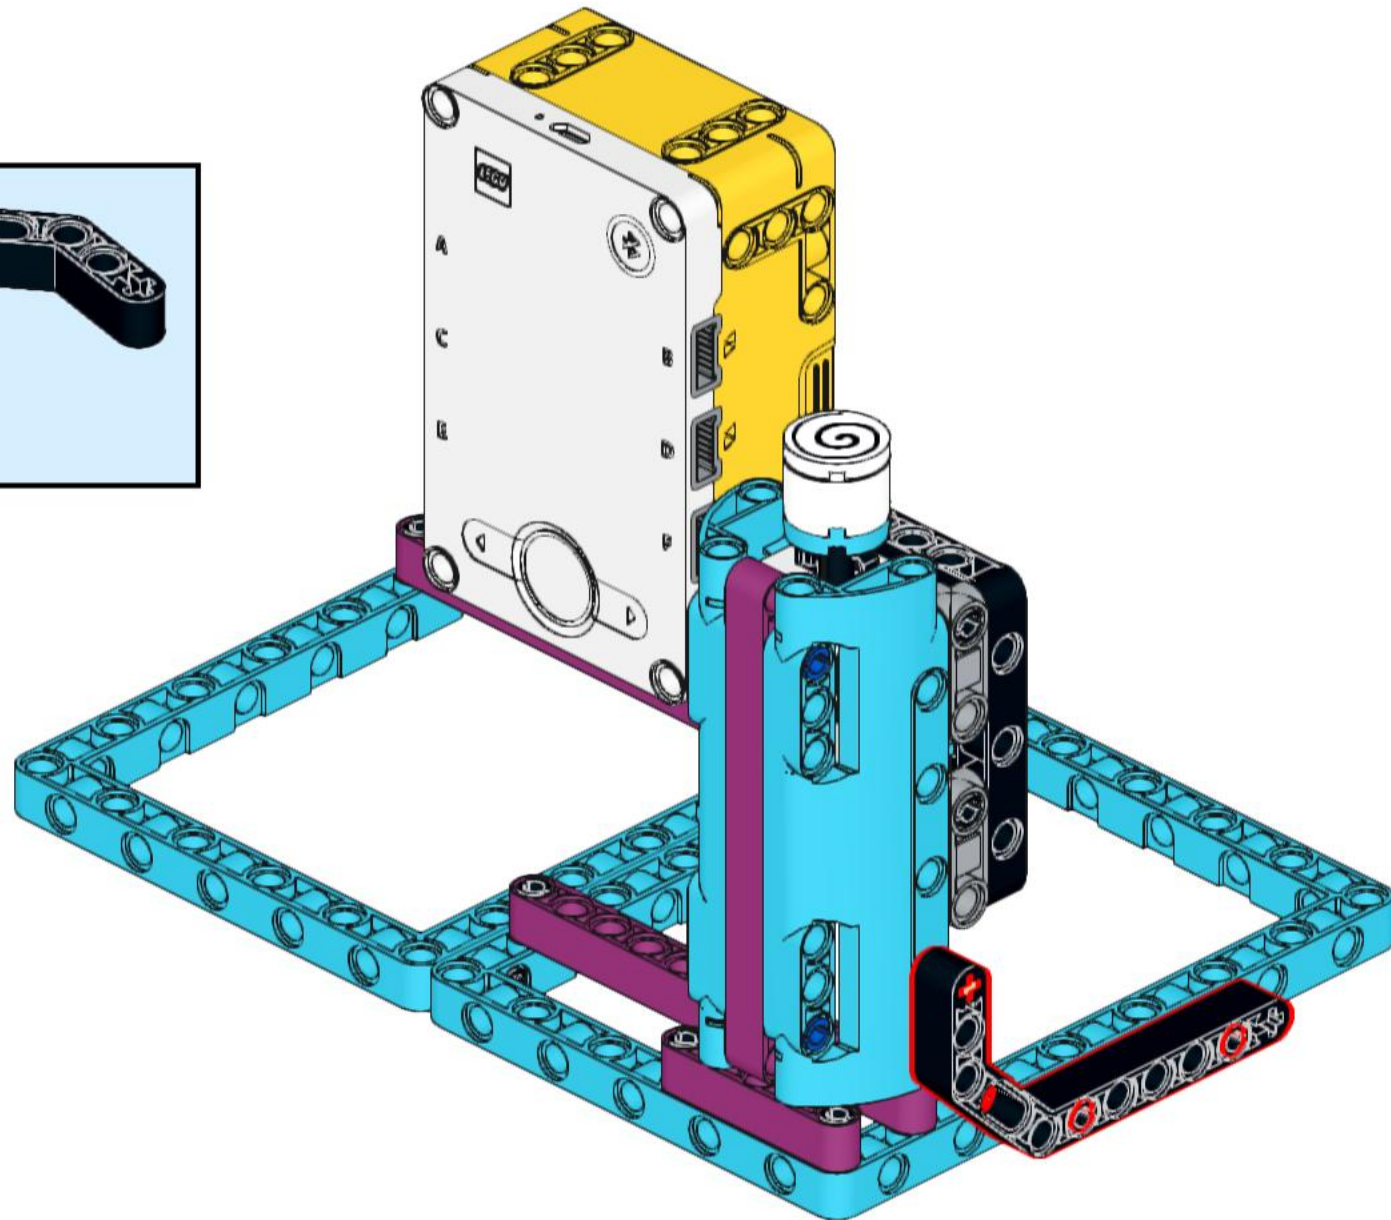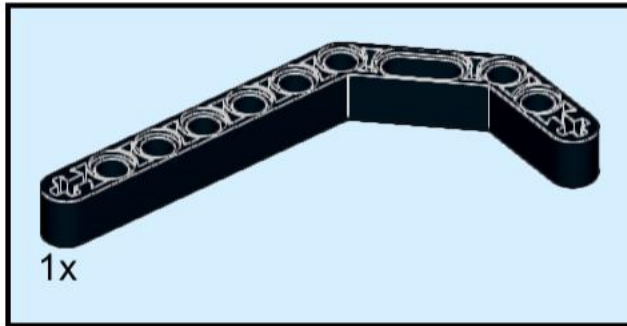


21

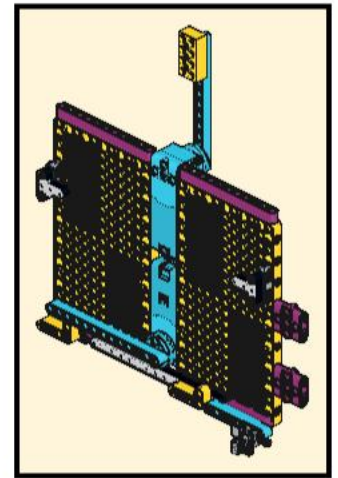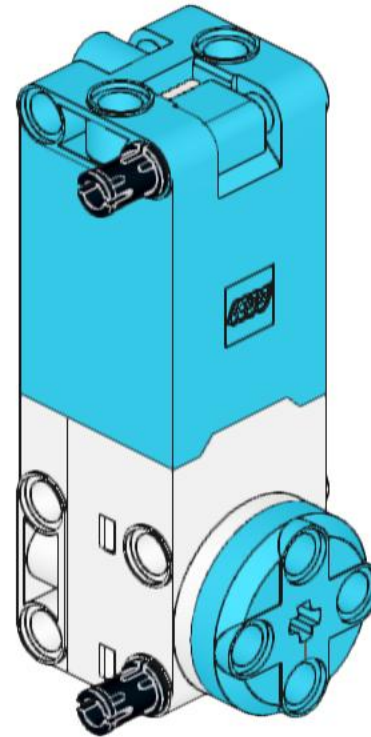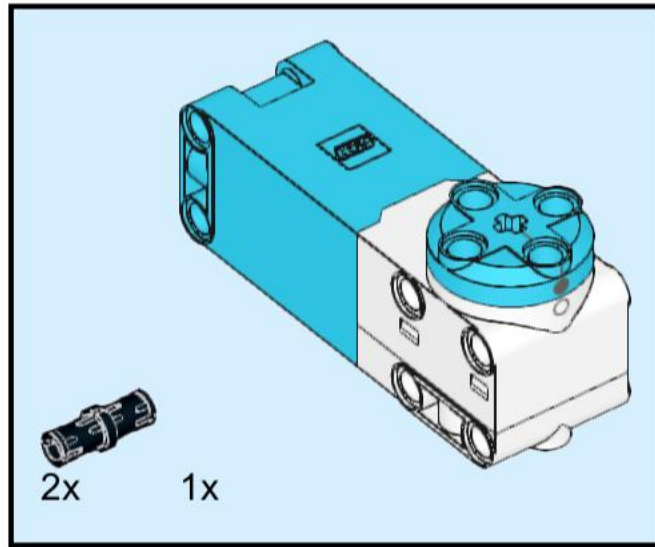



22

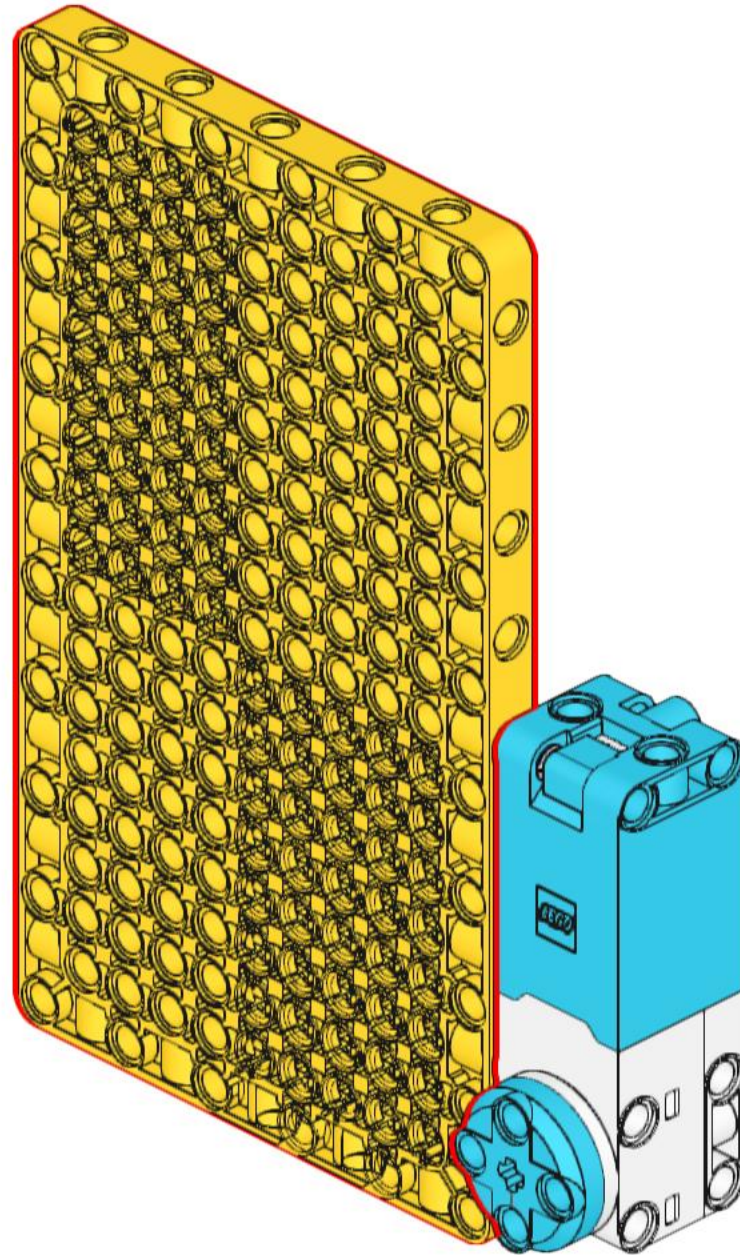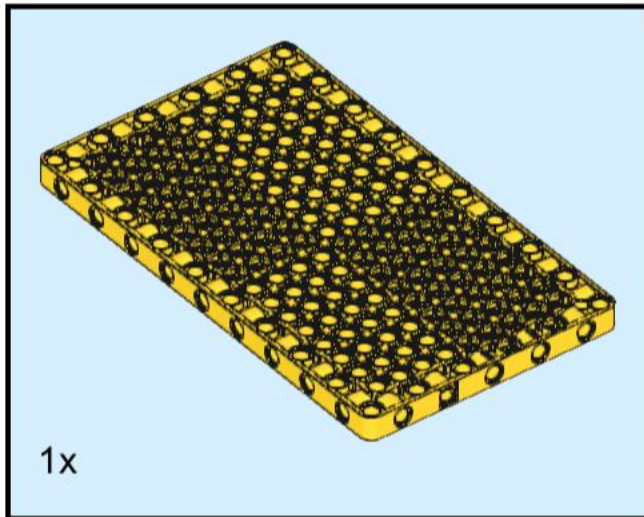


23

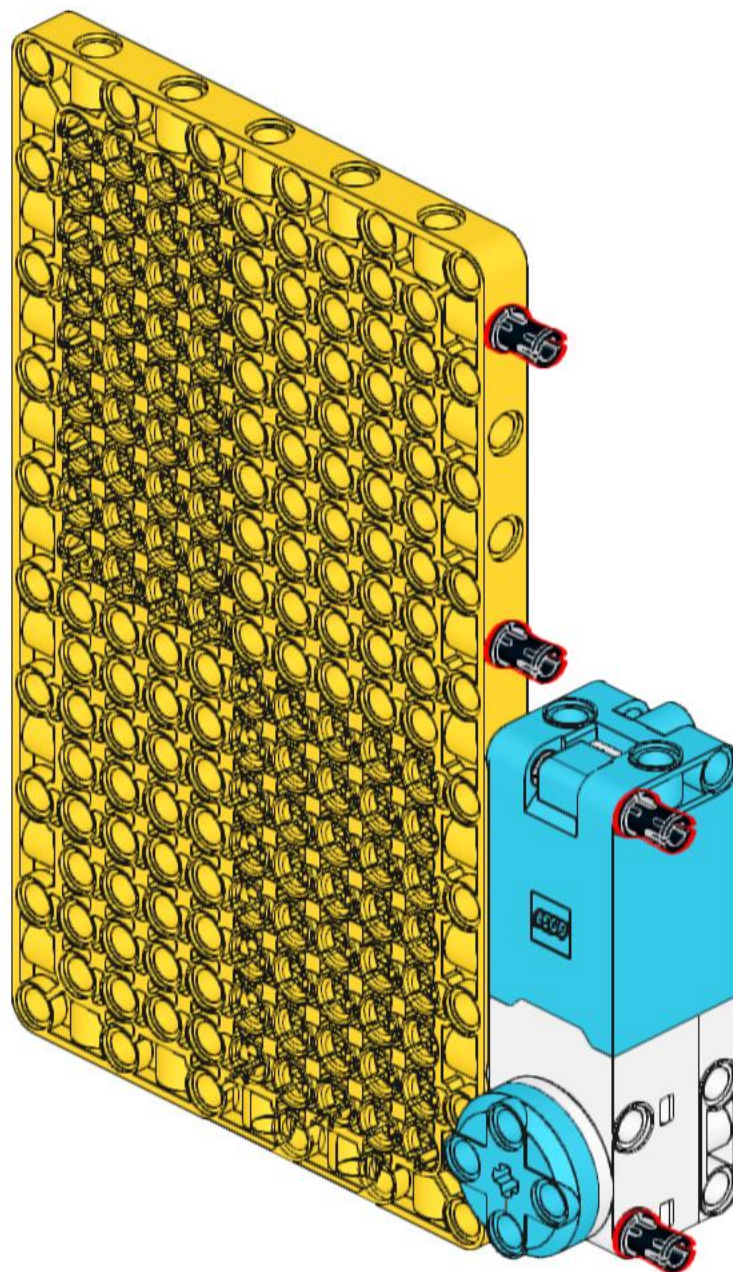



24

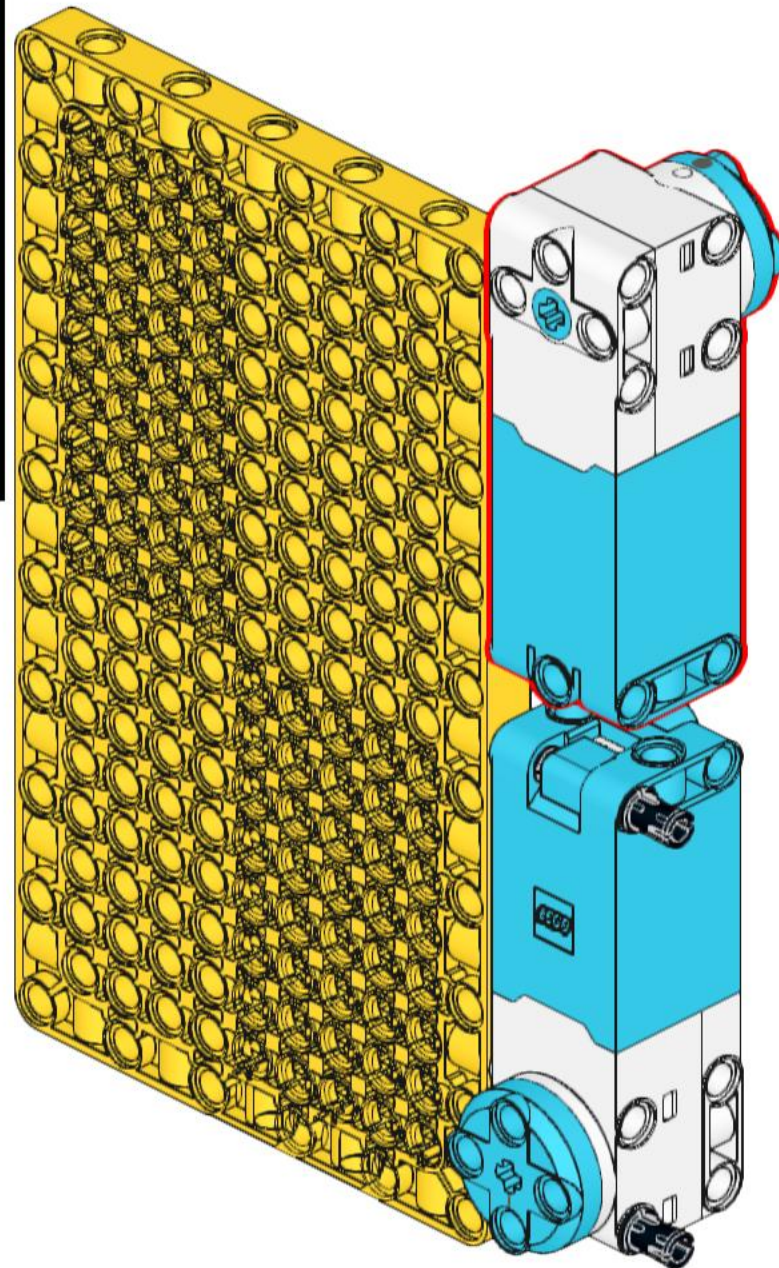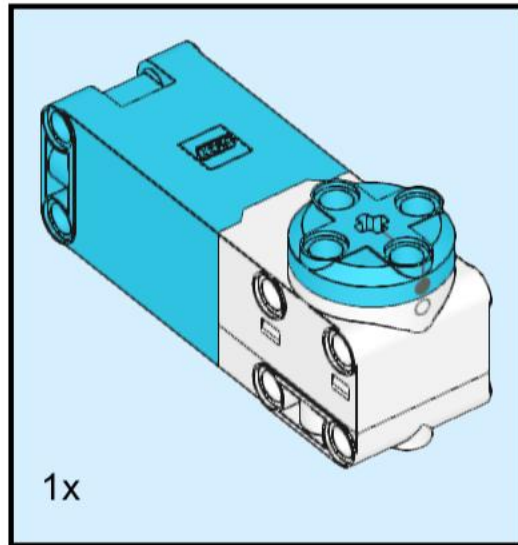


25

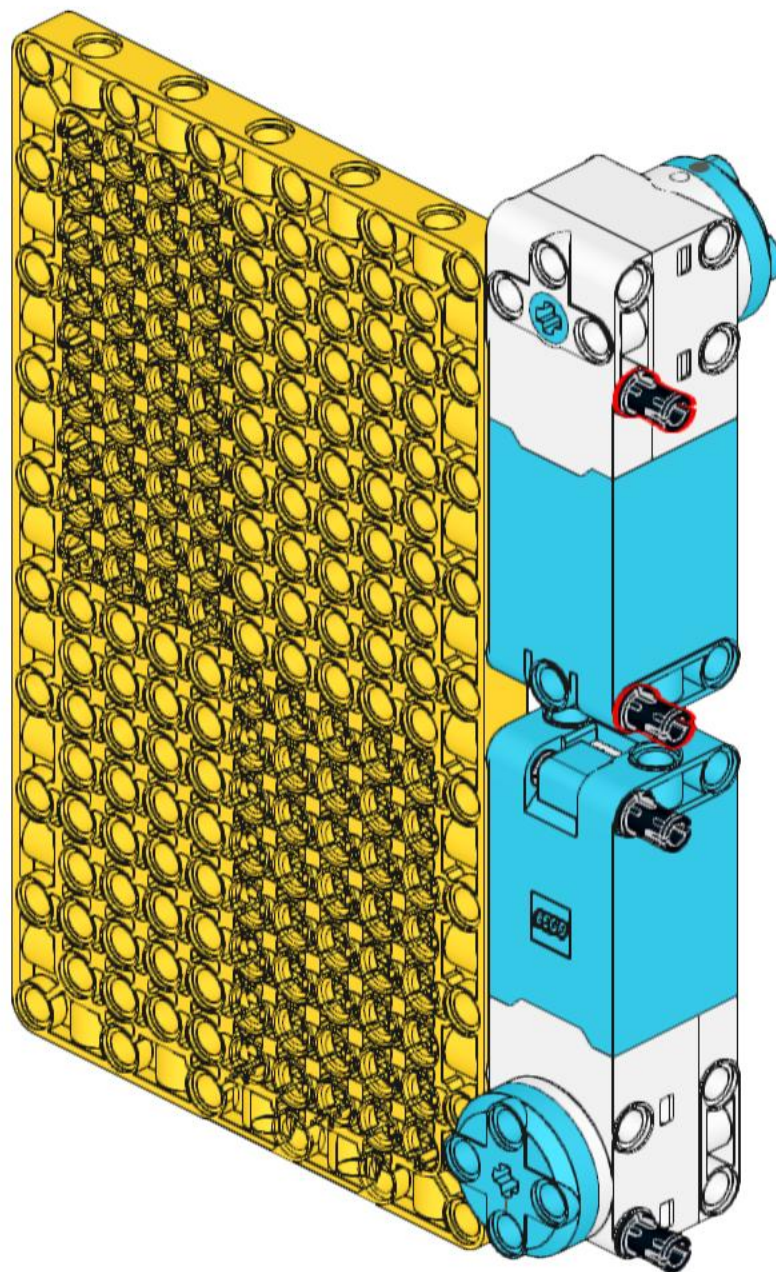



26

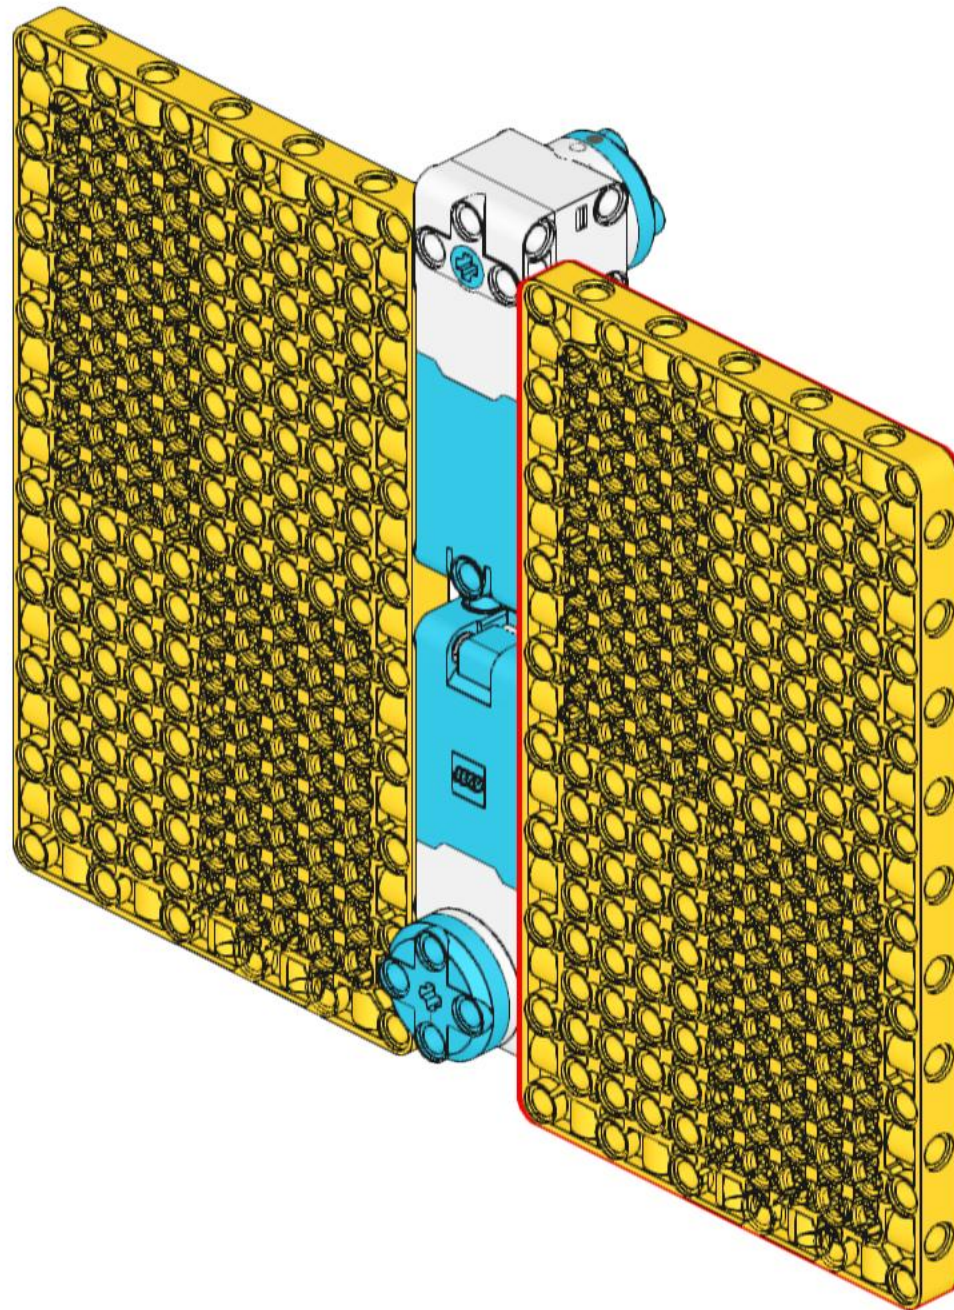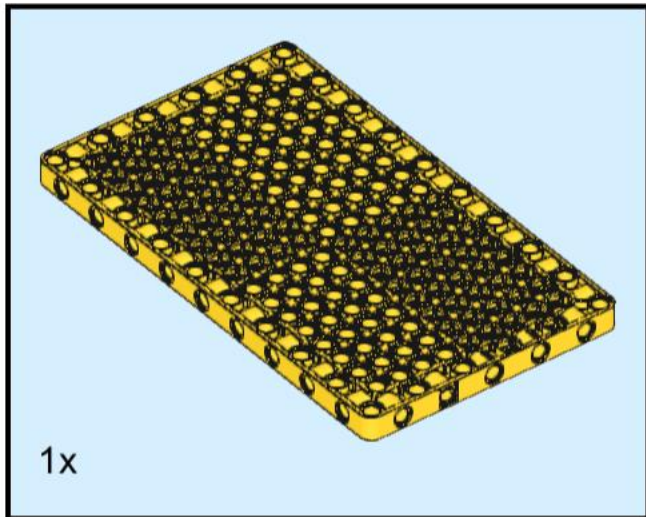


27

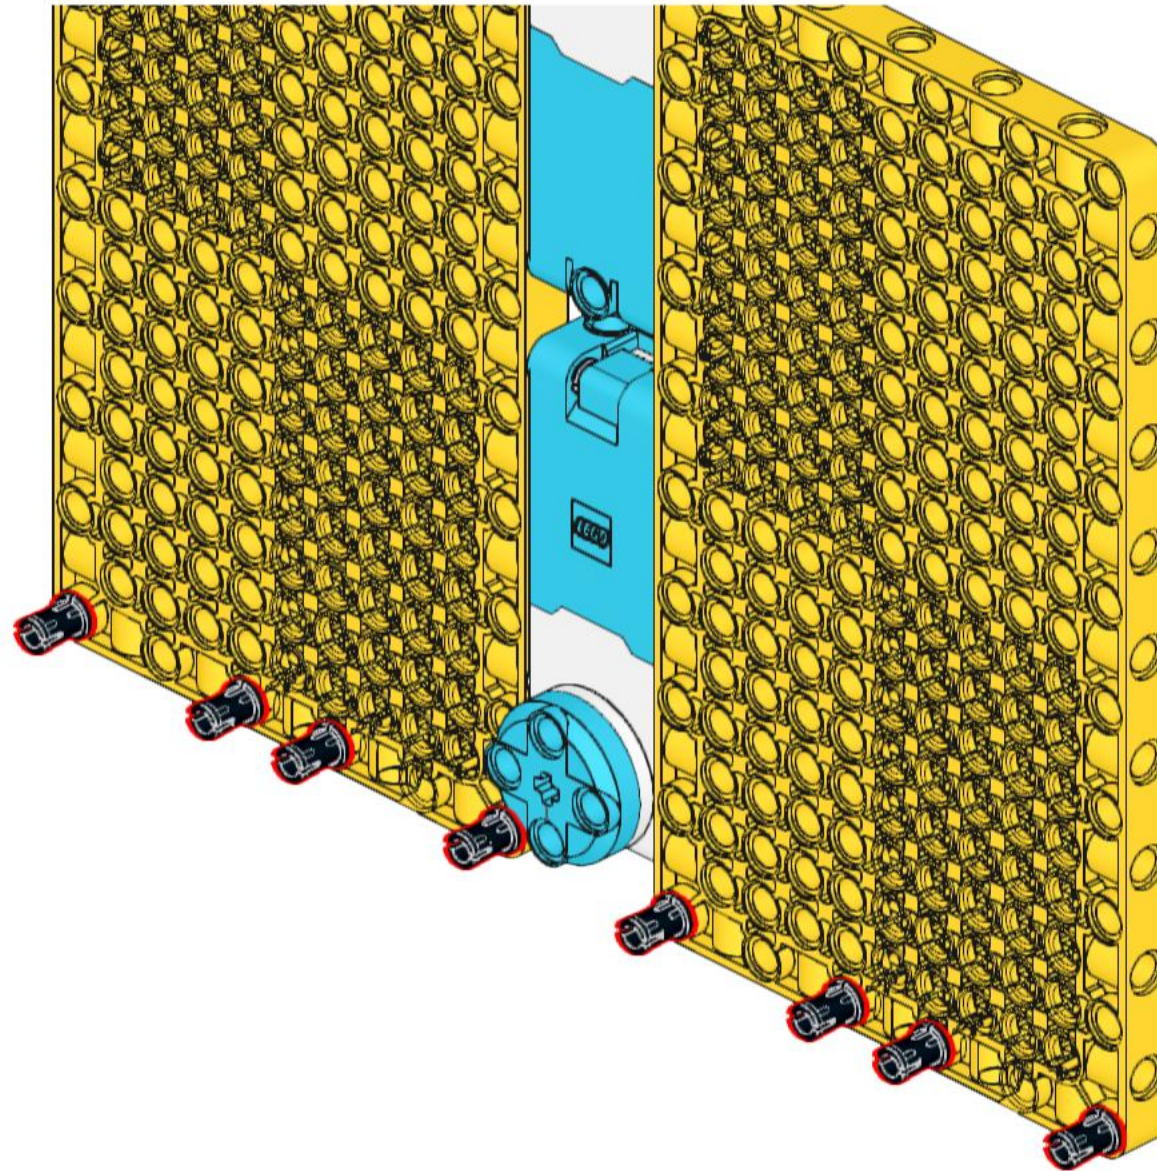



28

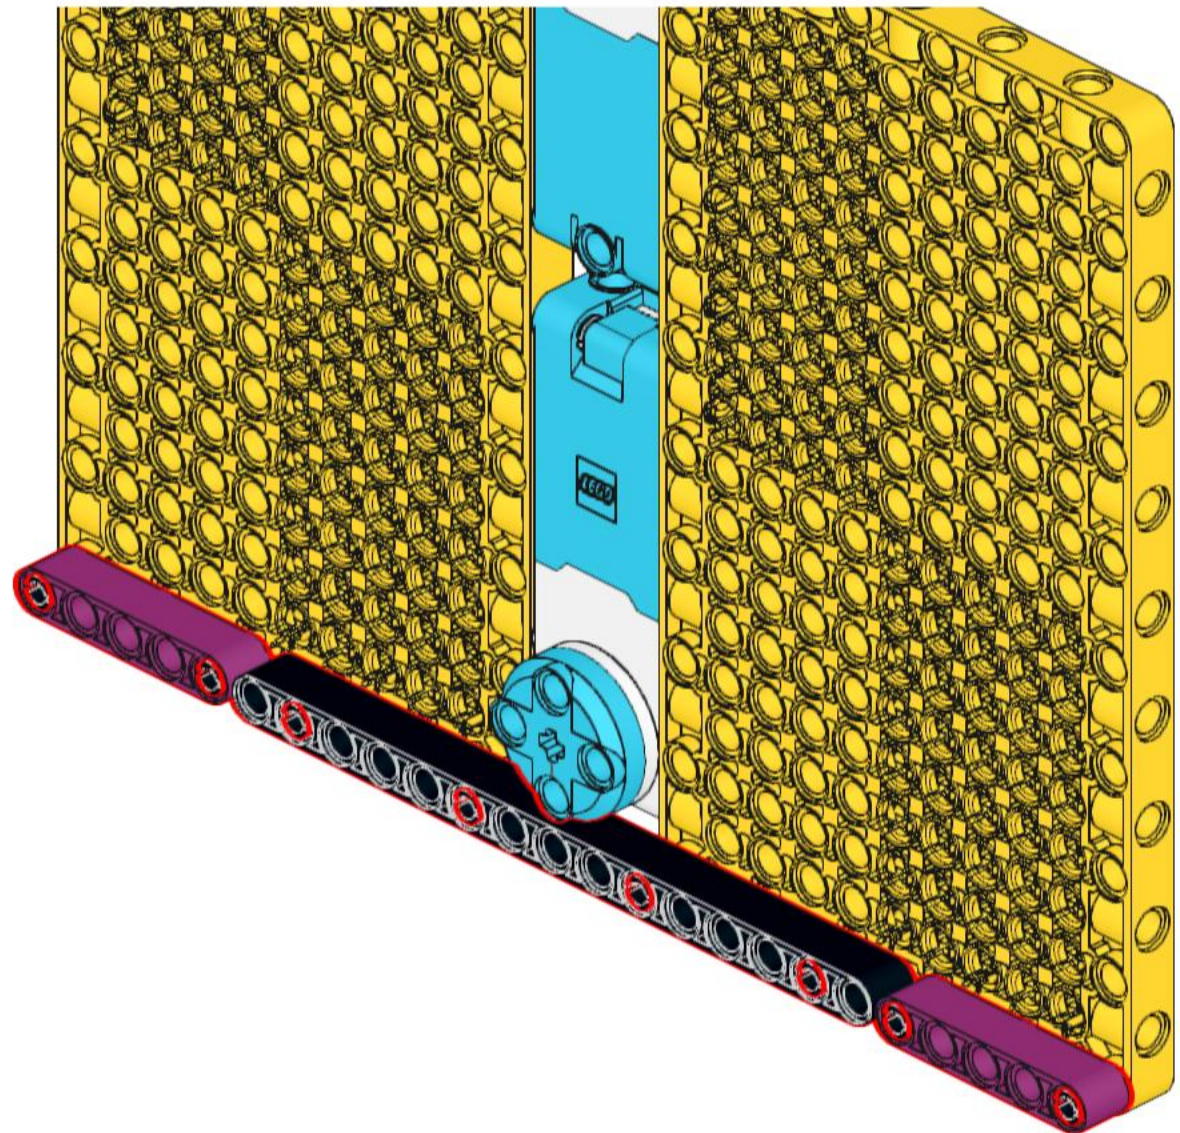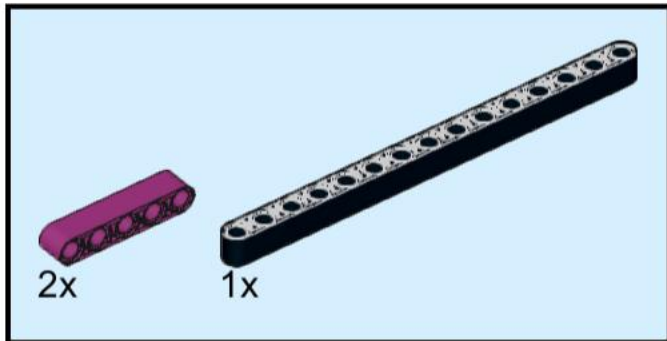




29

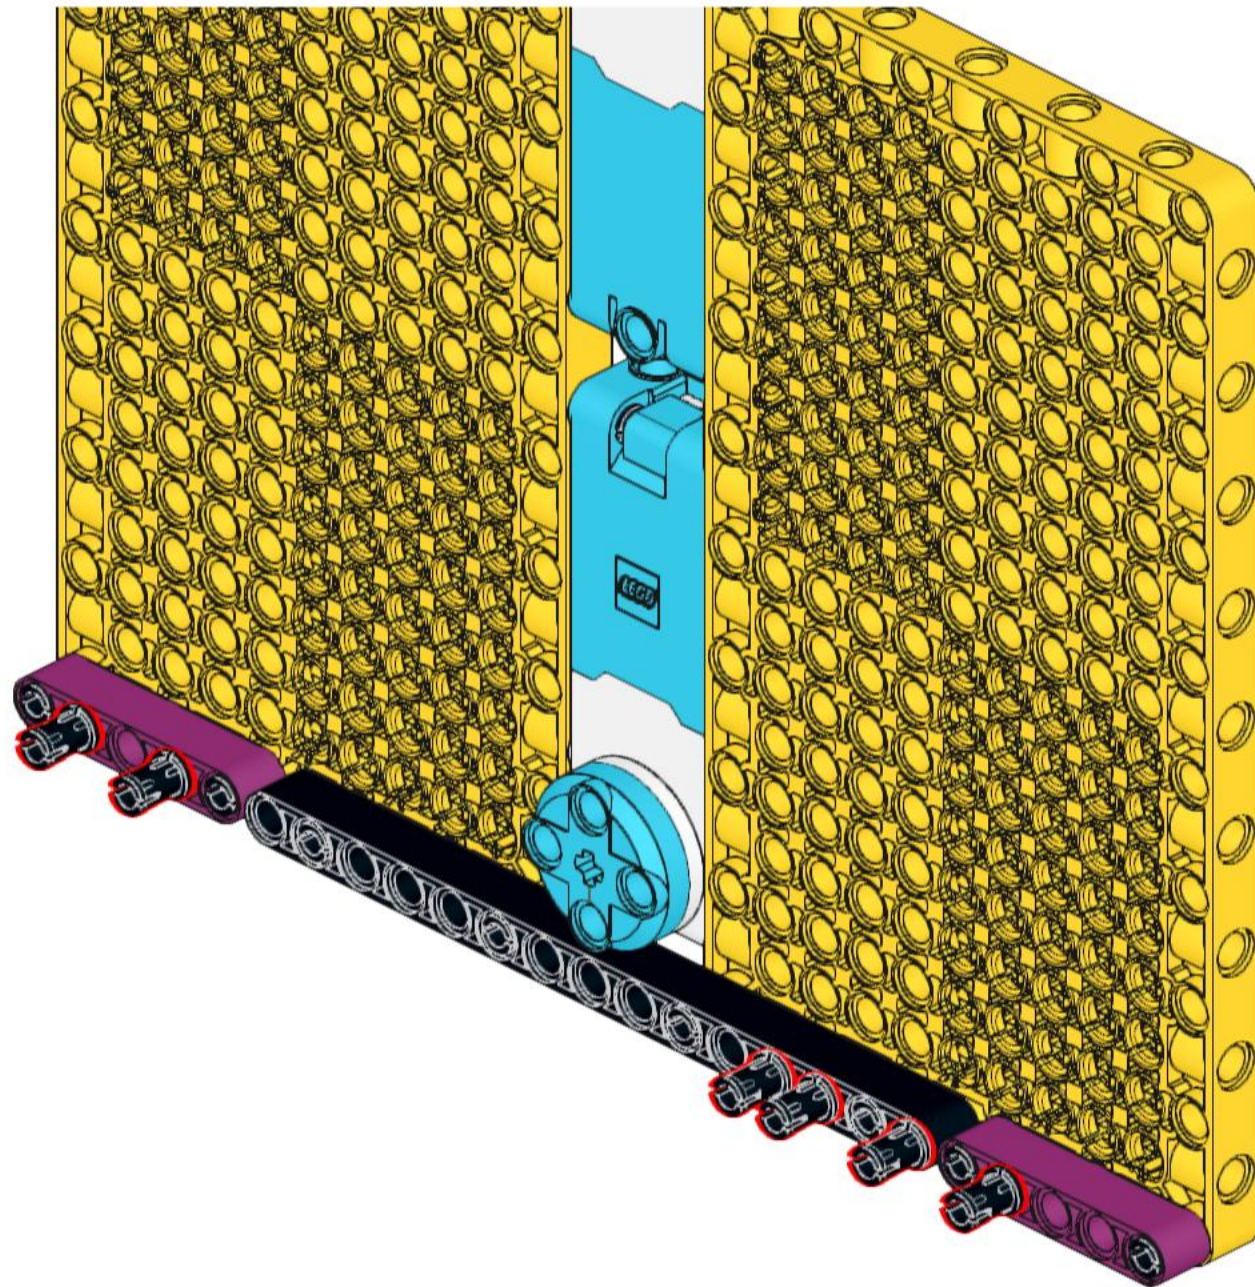

30


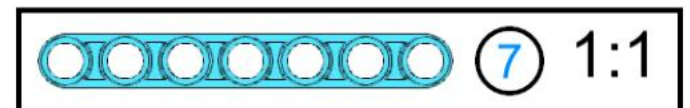
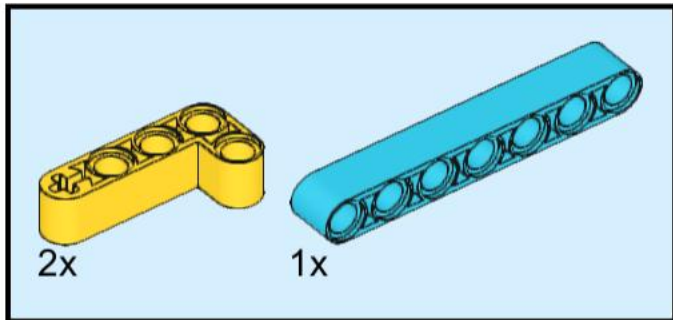


31

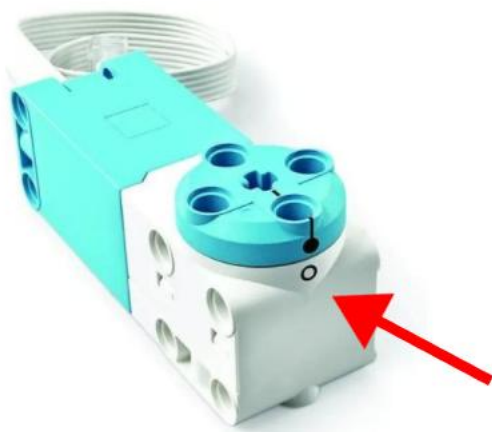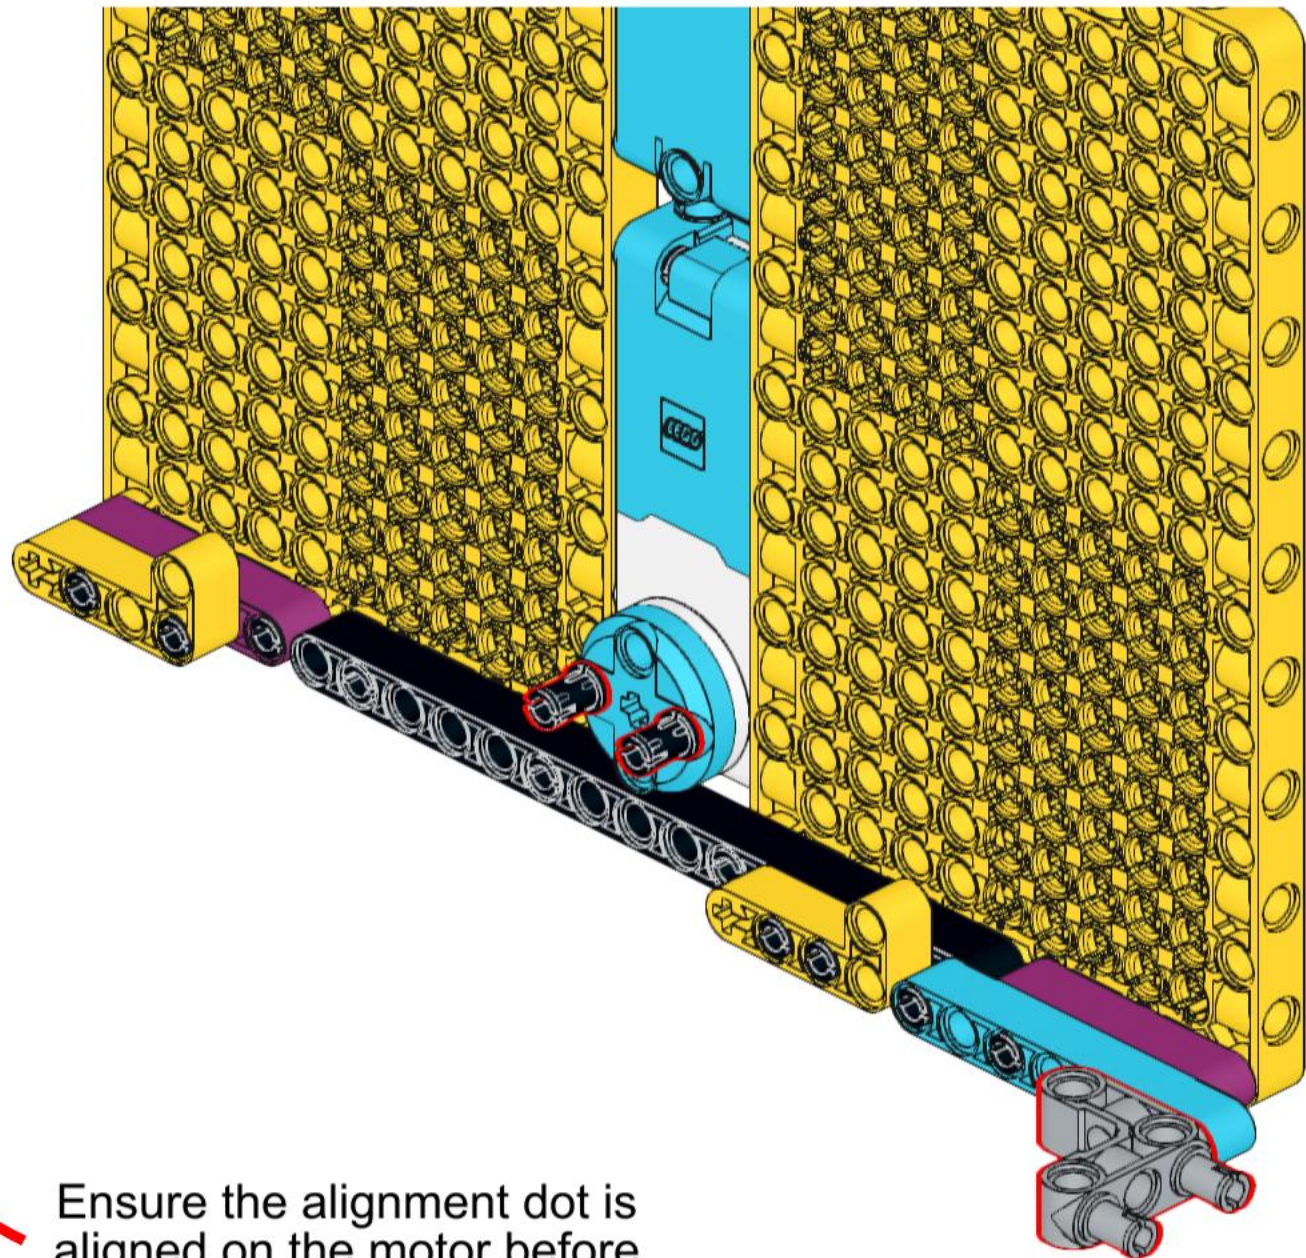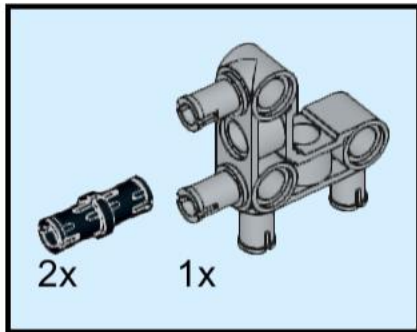



Ensure the alignment dot is aligned on the motor before adding the 2 black pins

32

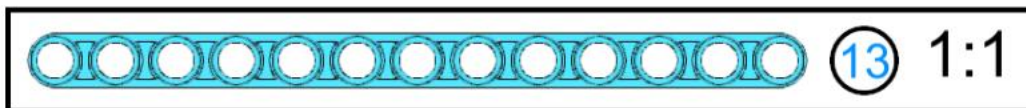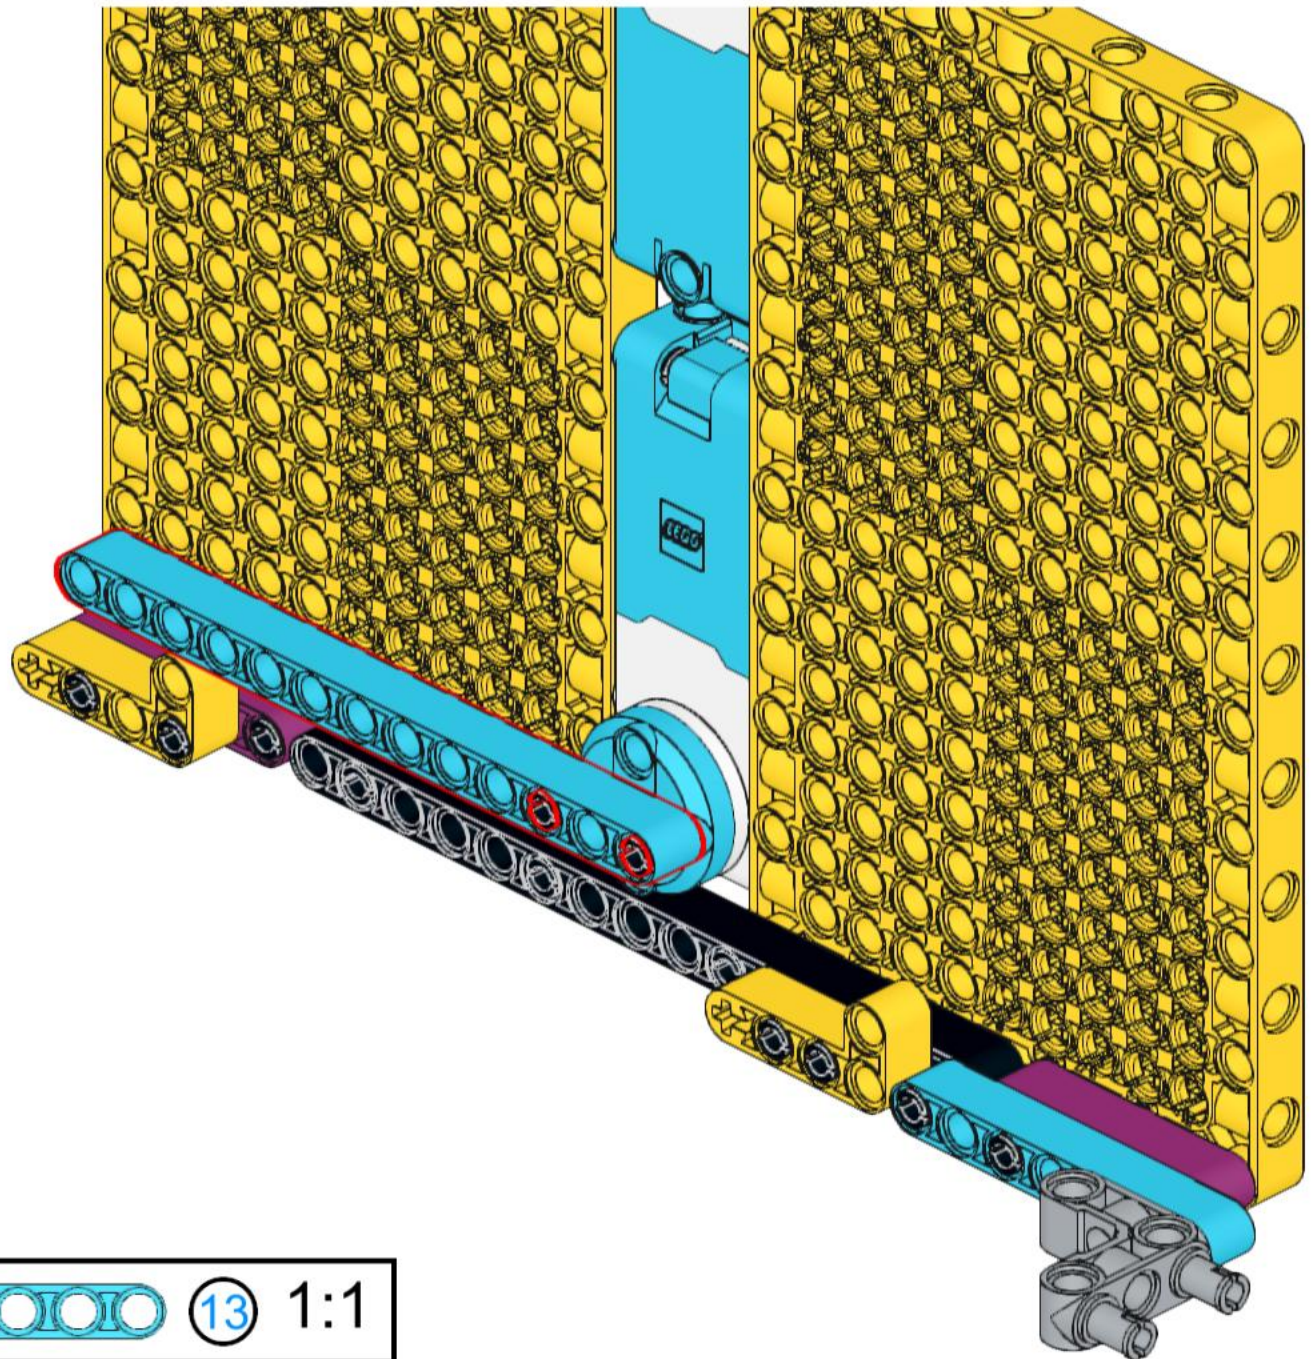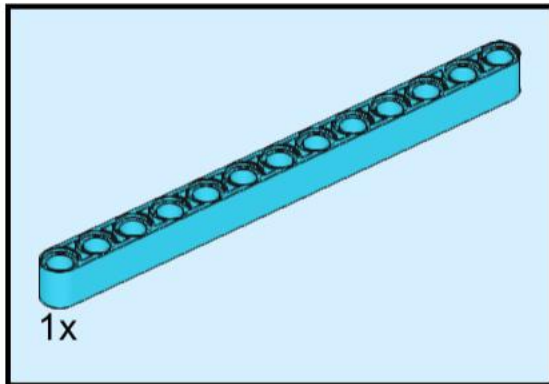


33


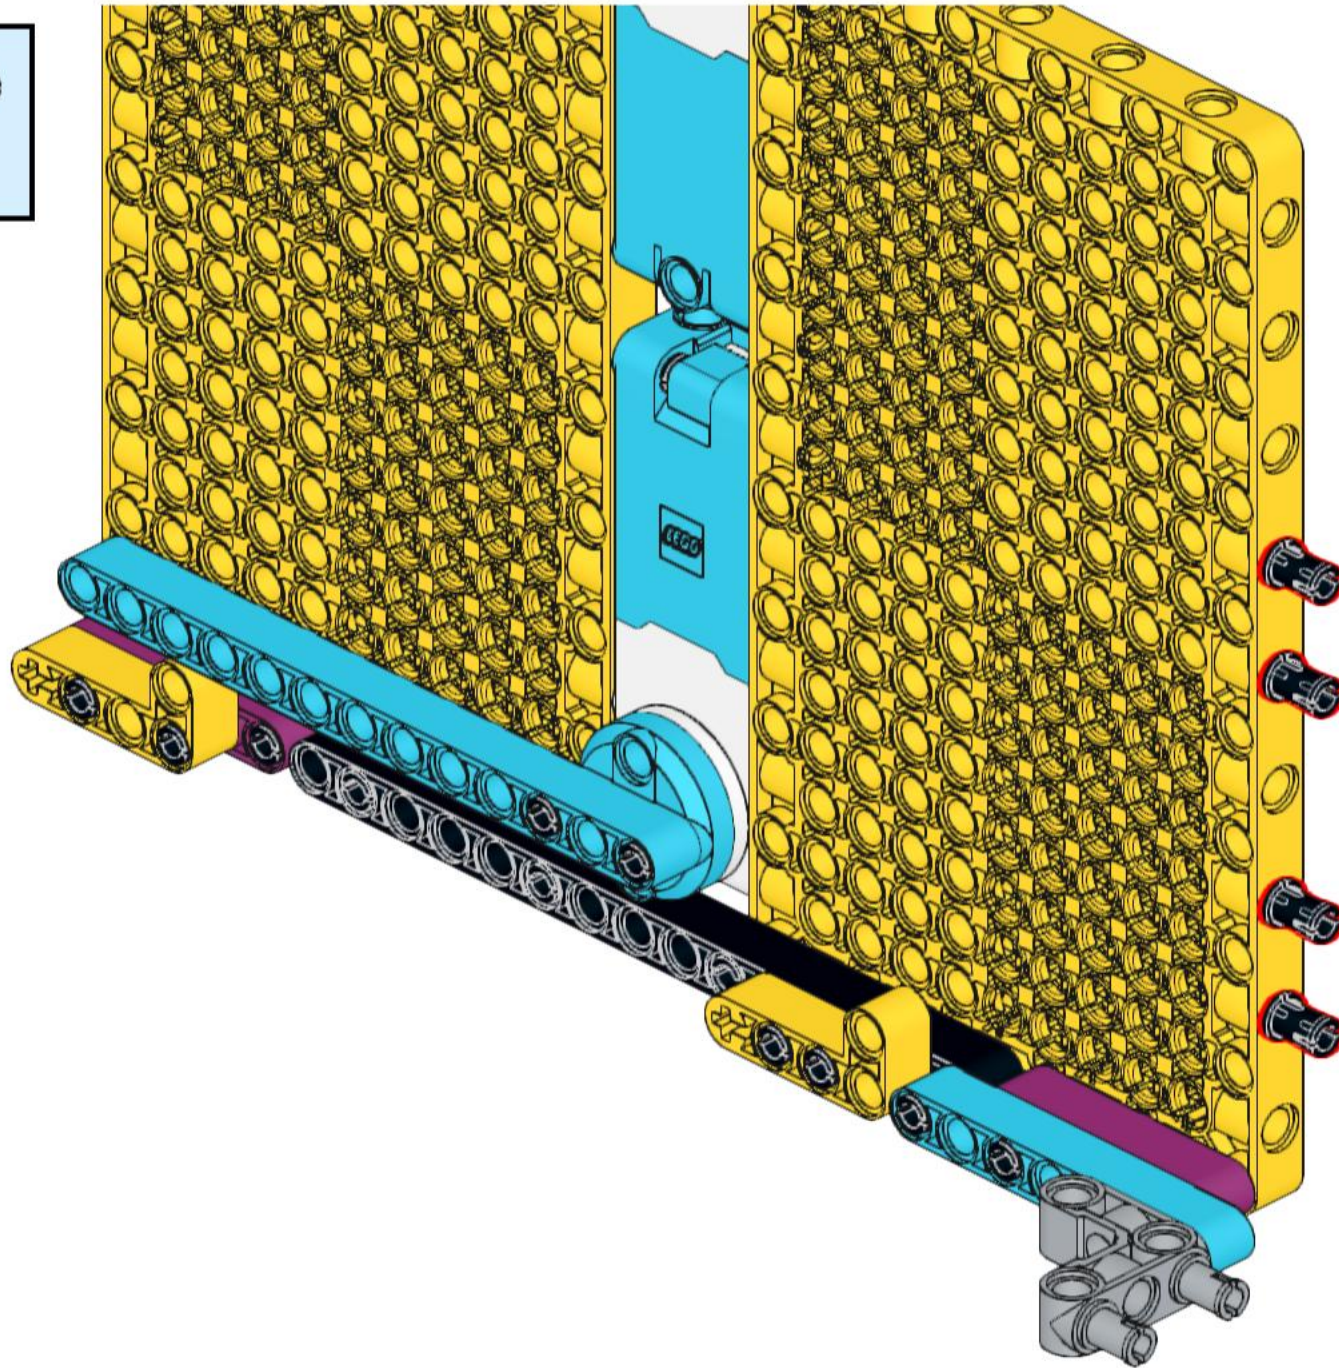


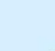


2x

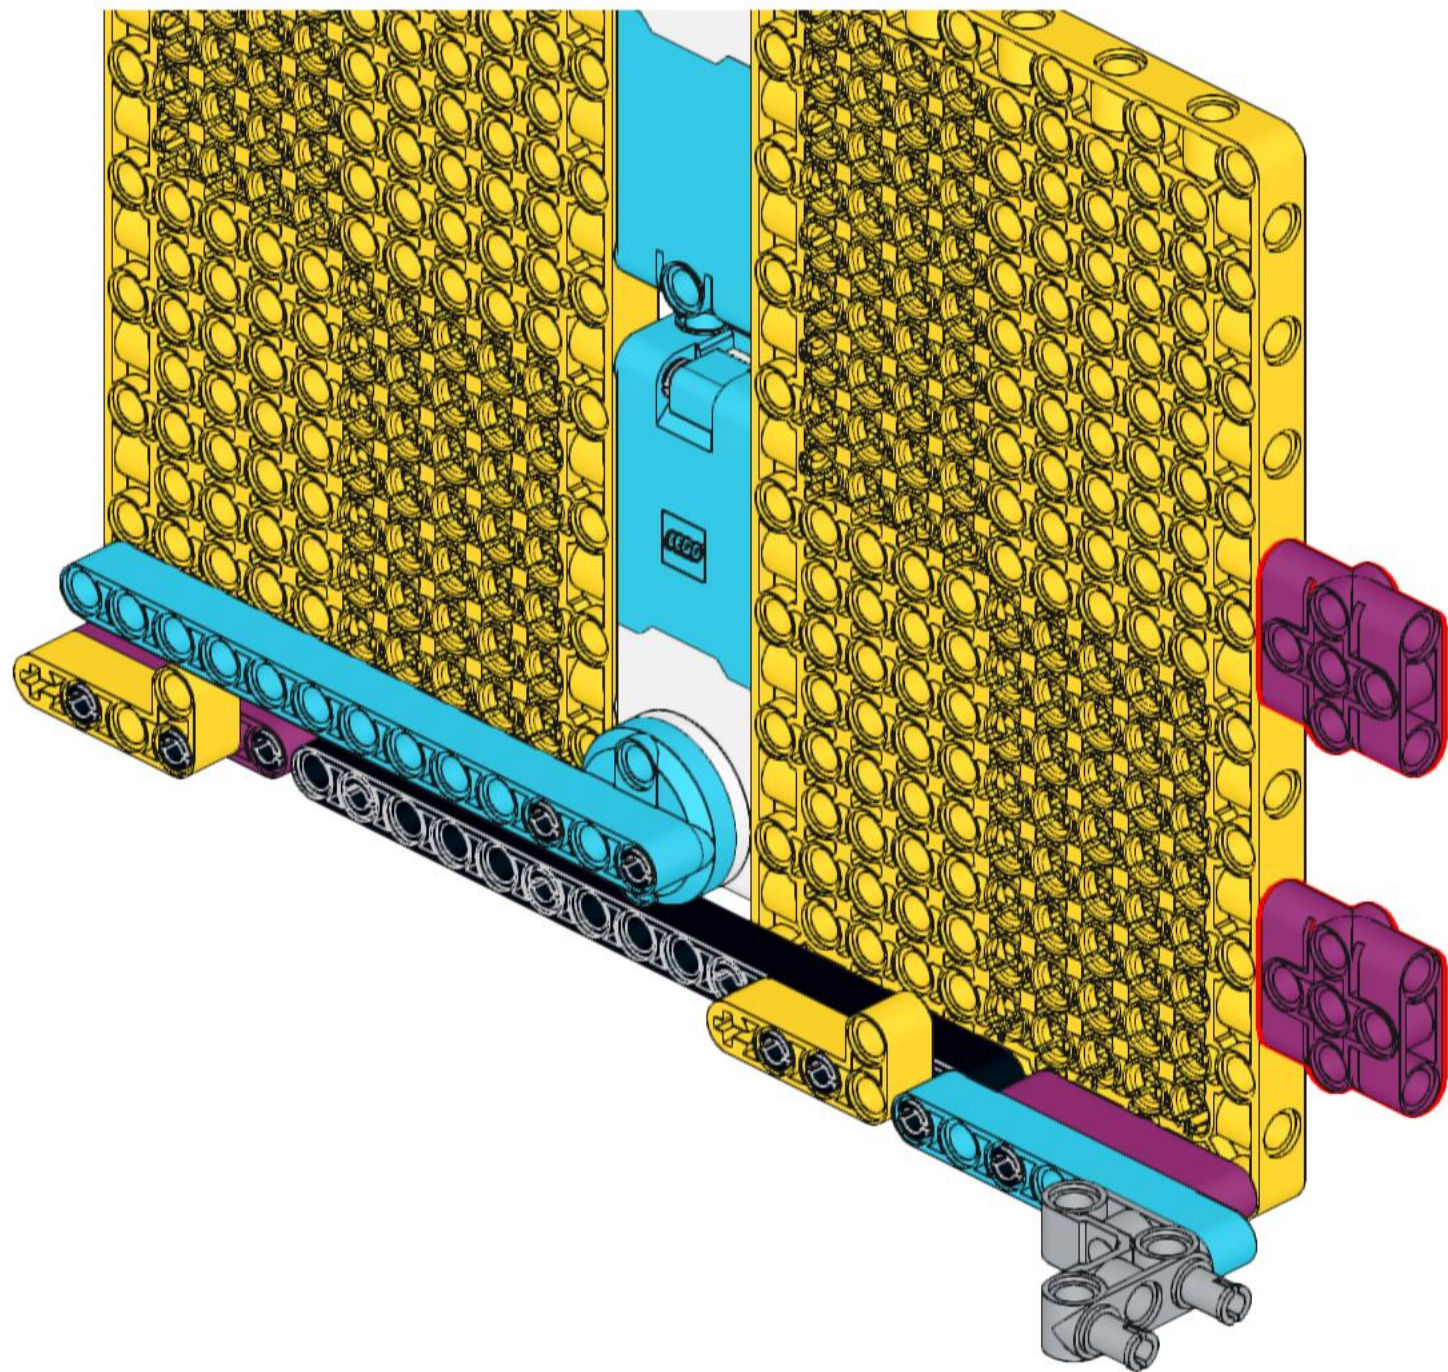


35

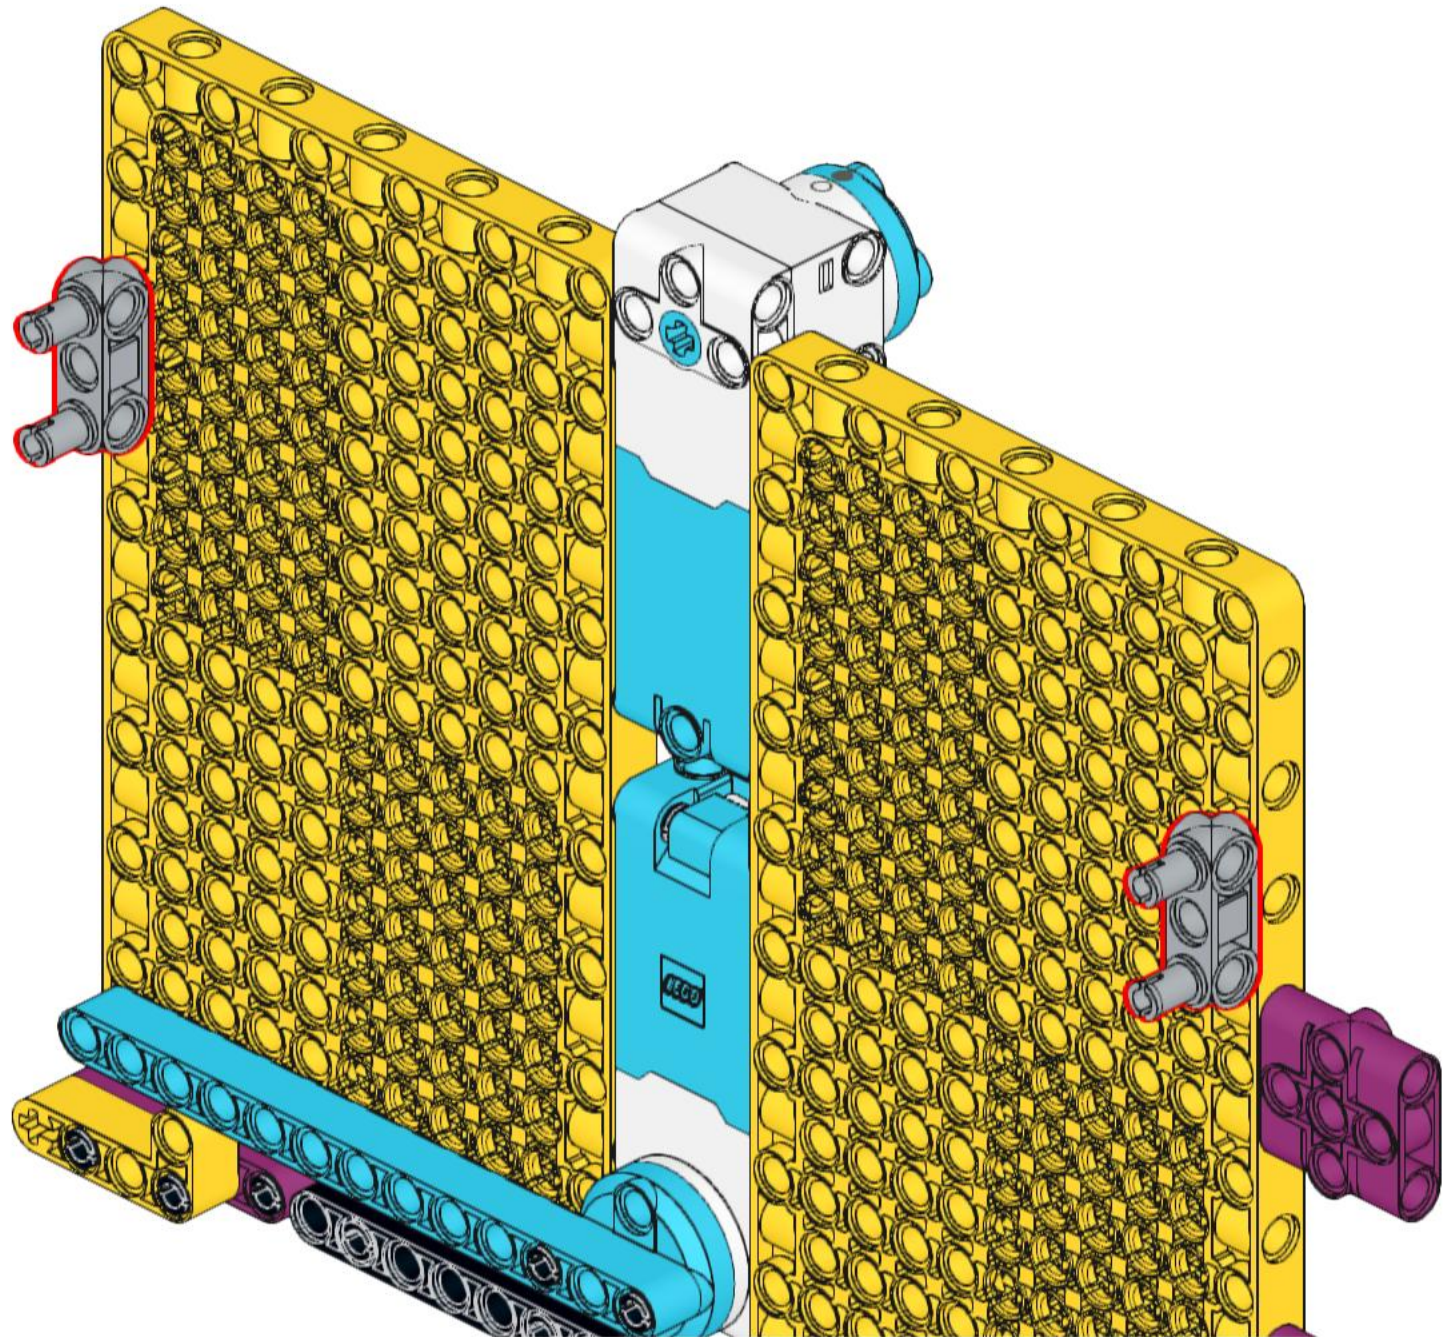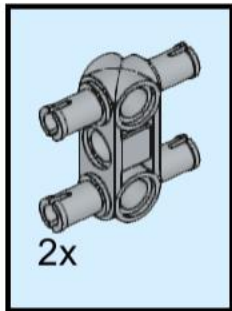







2x

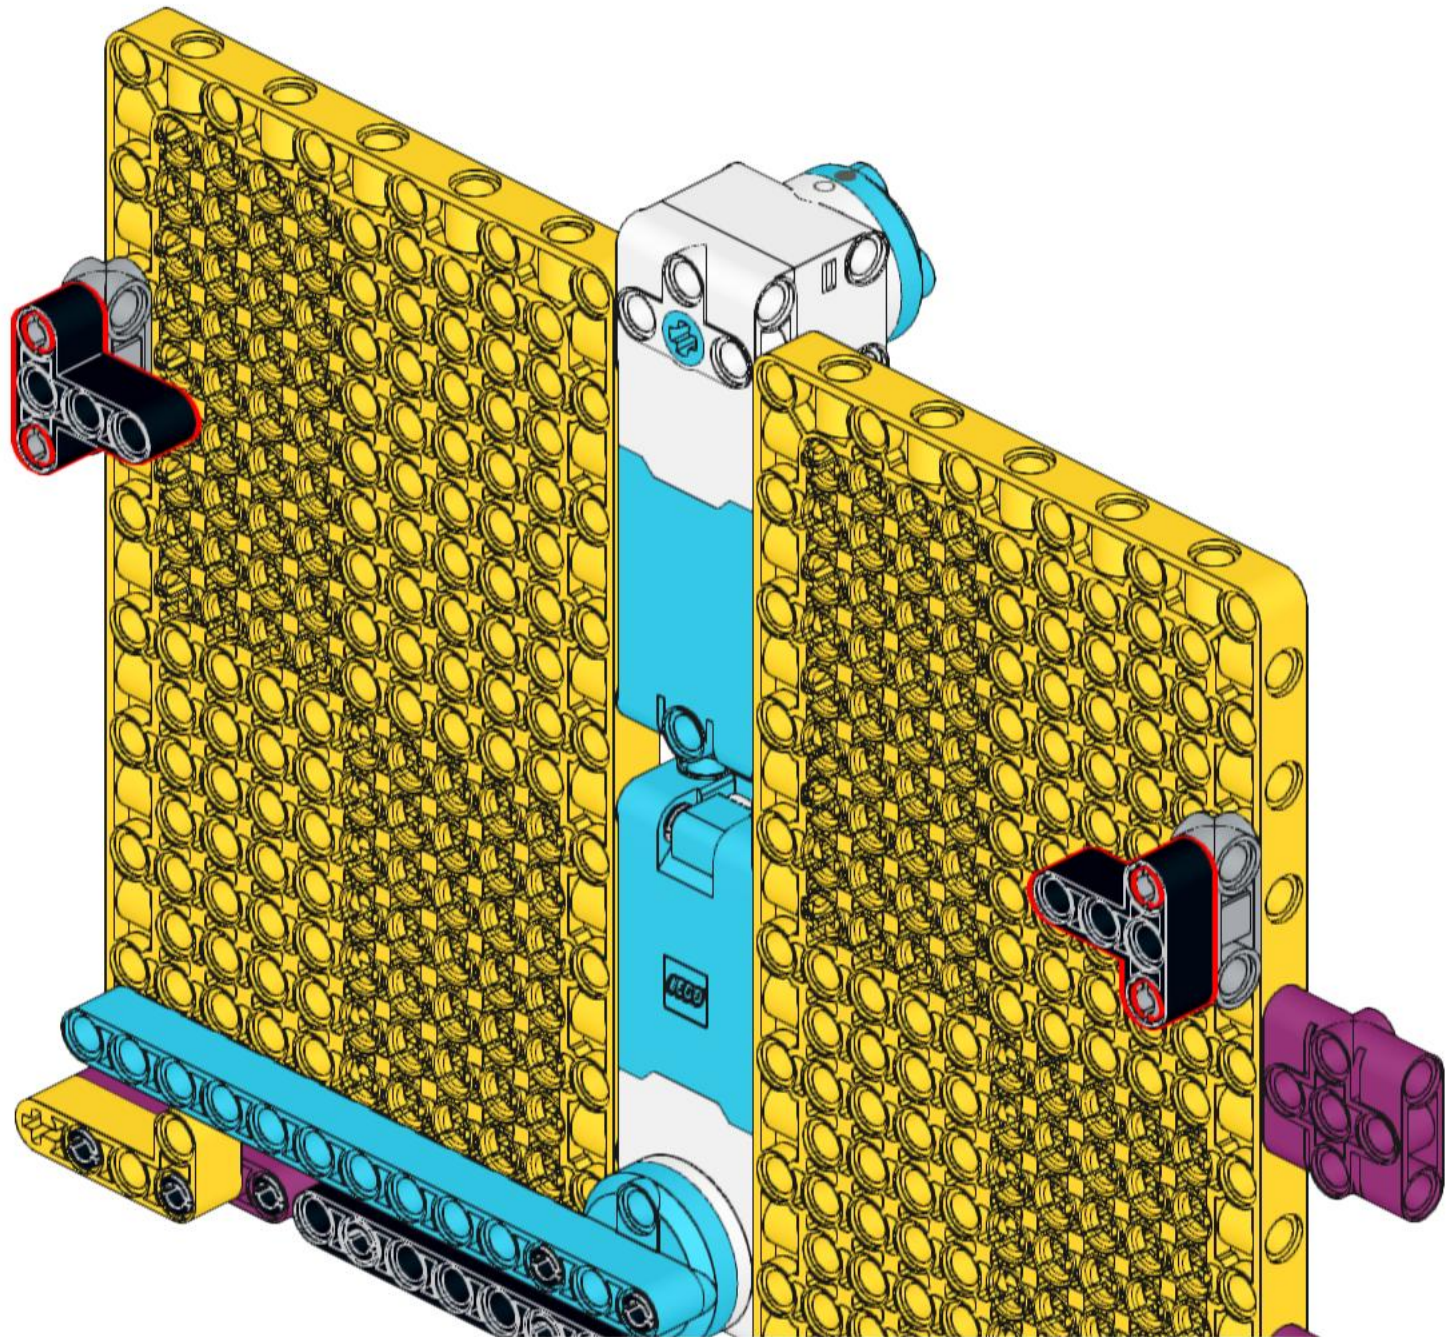


37

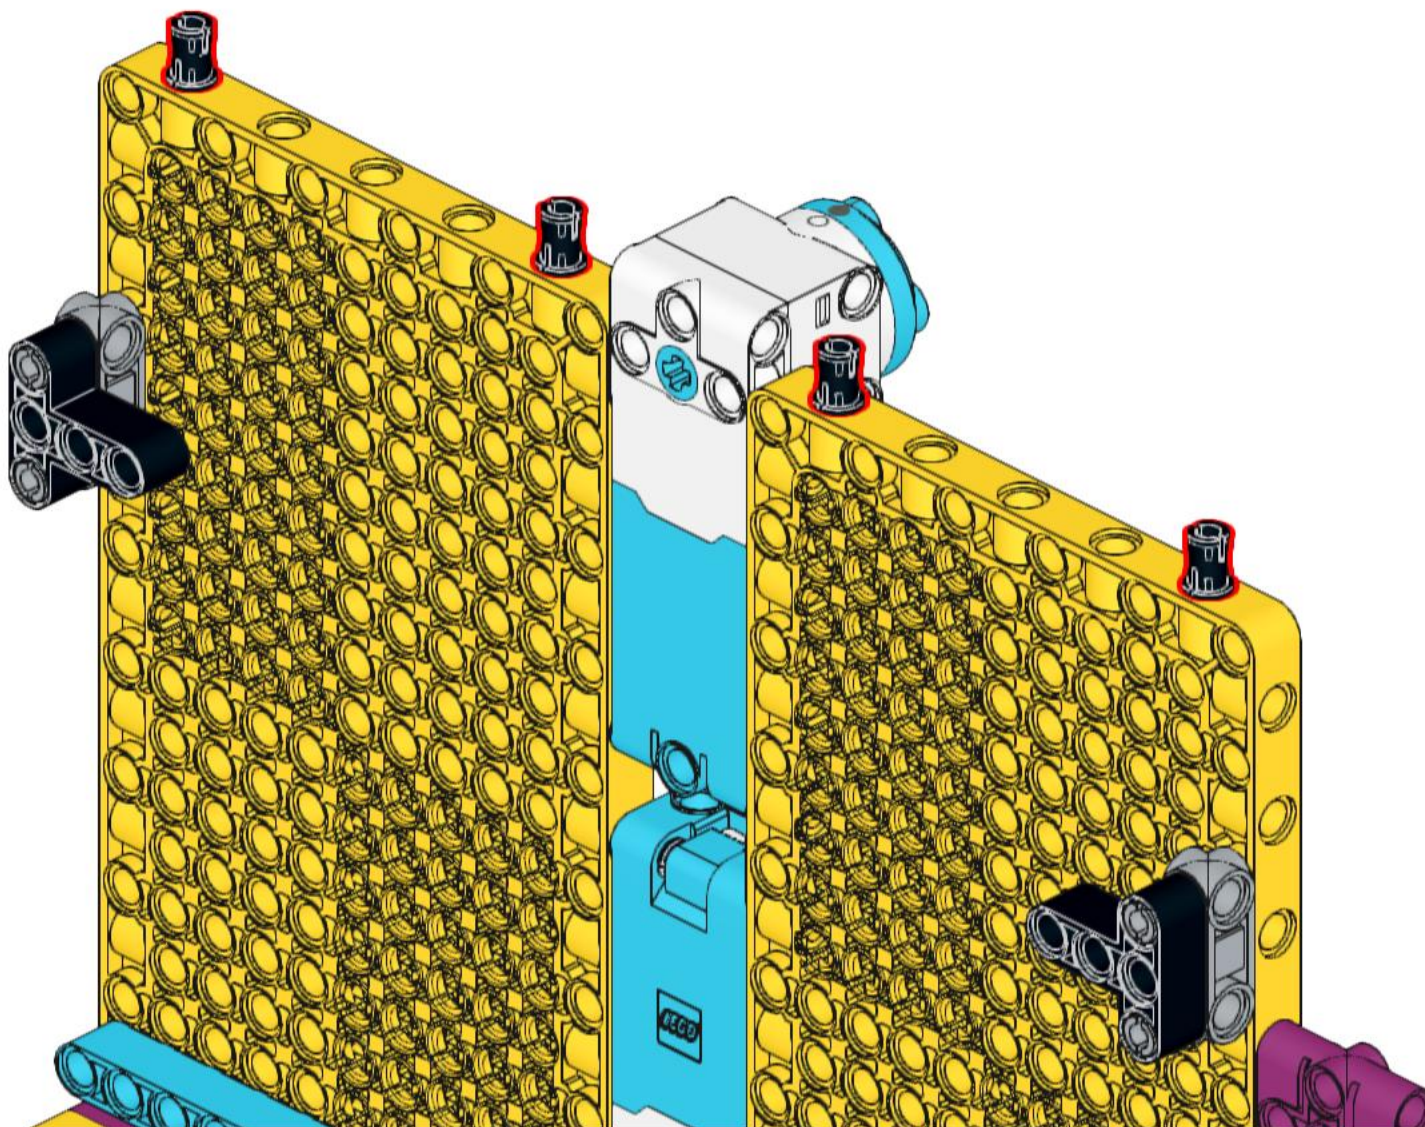




38

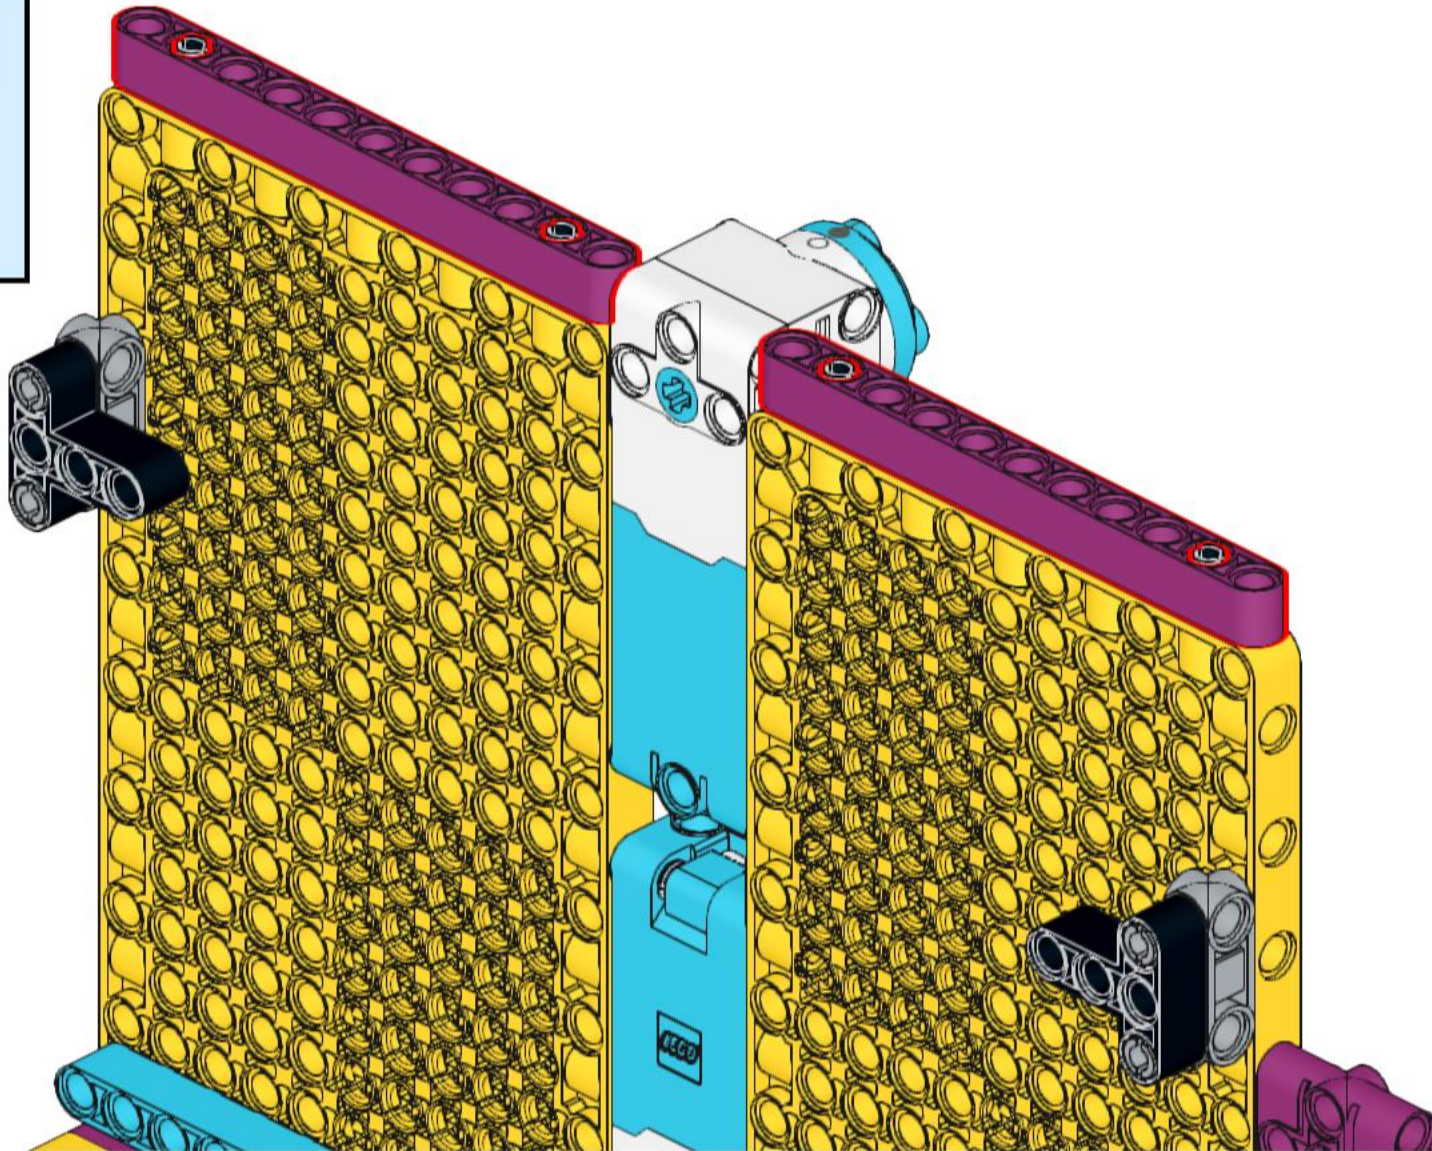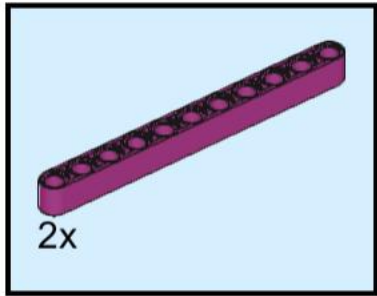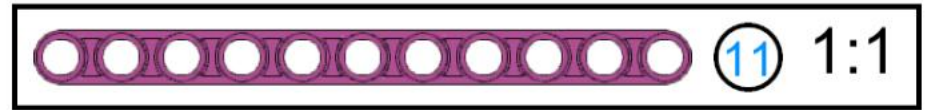



39

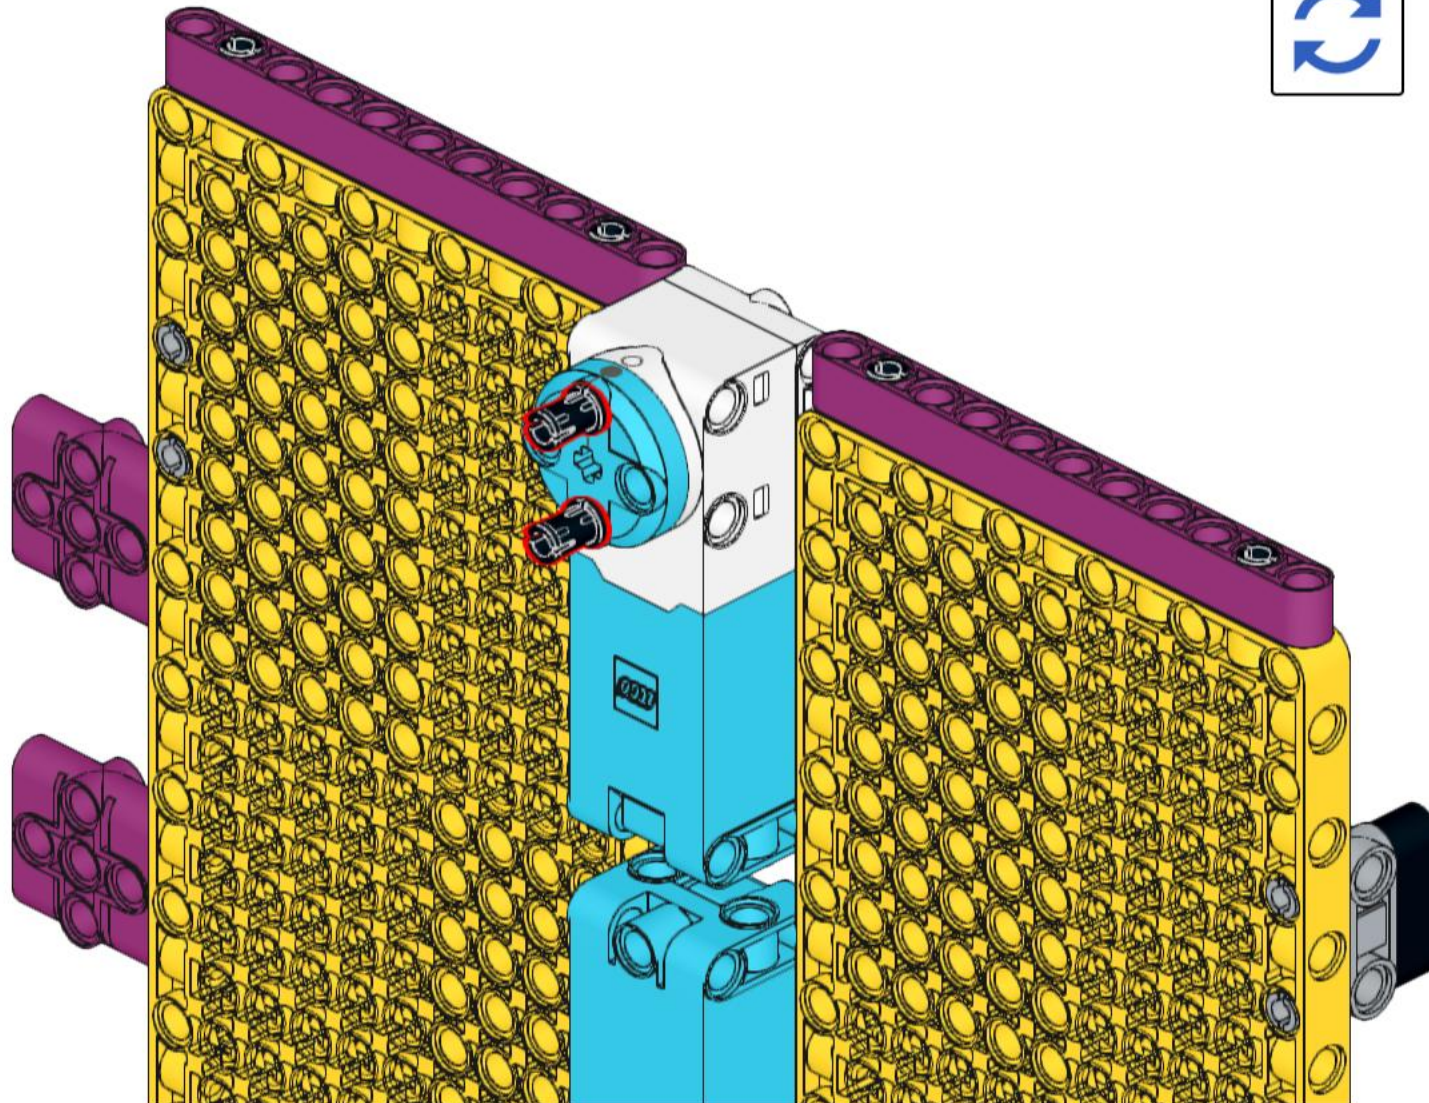



40

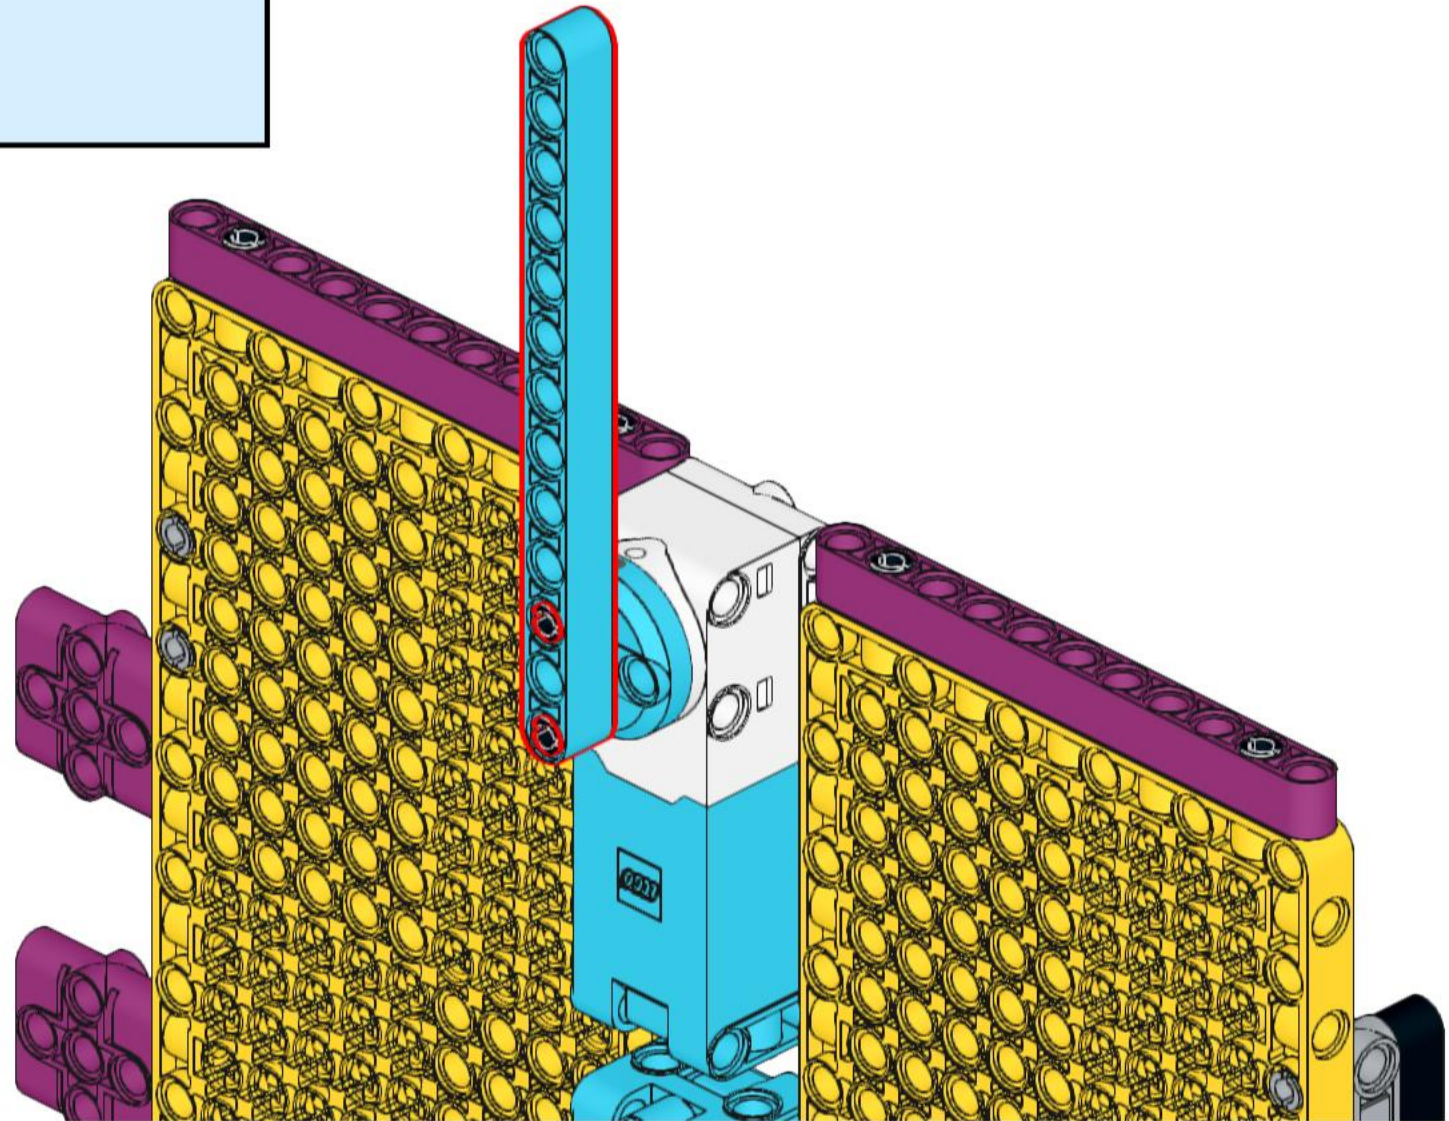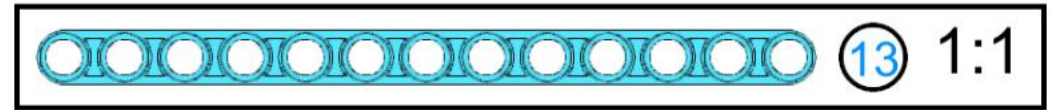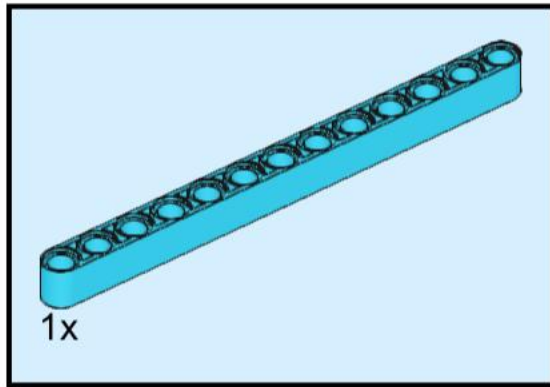

41

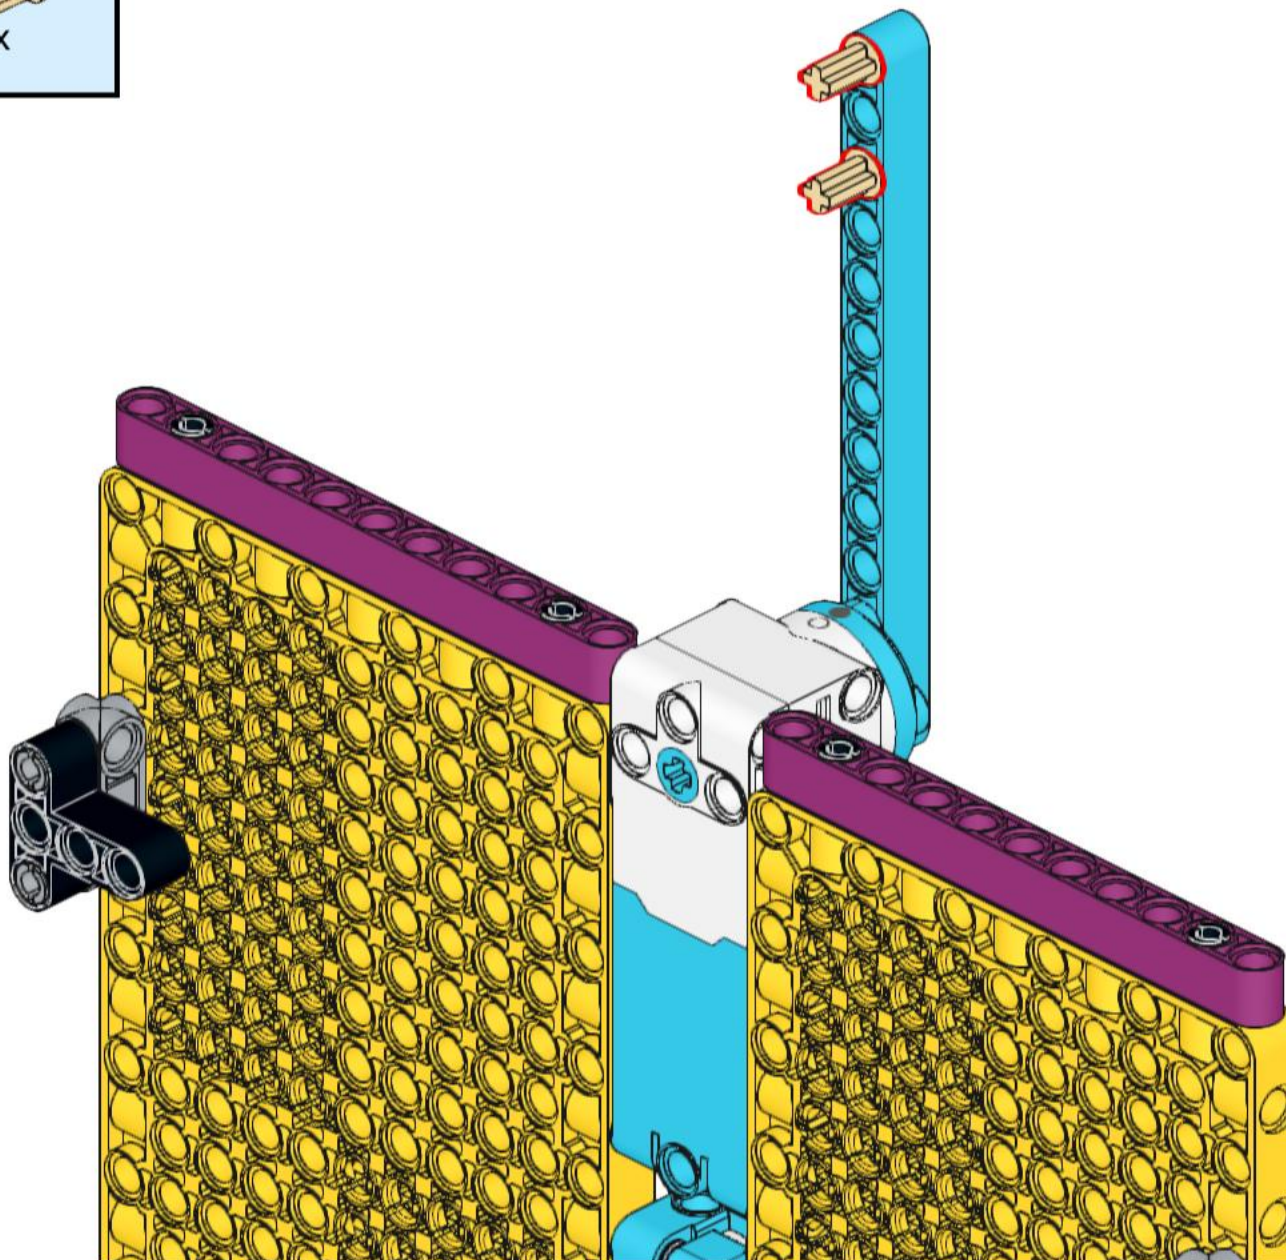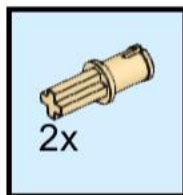


42

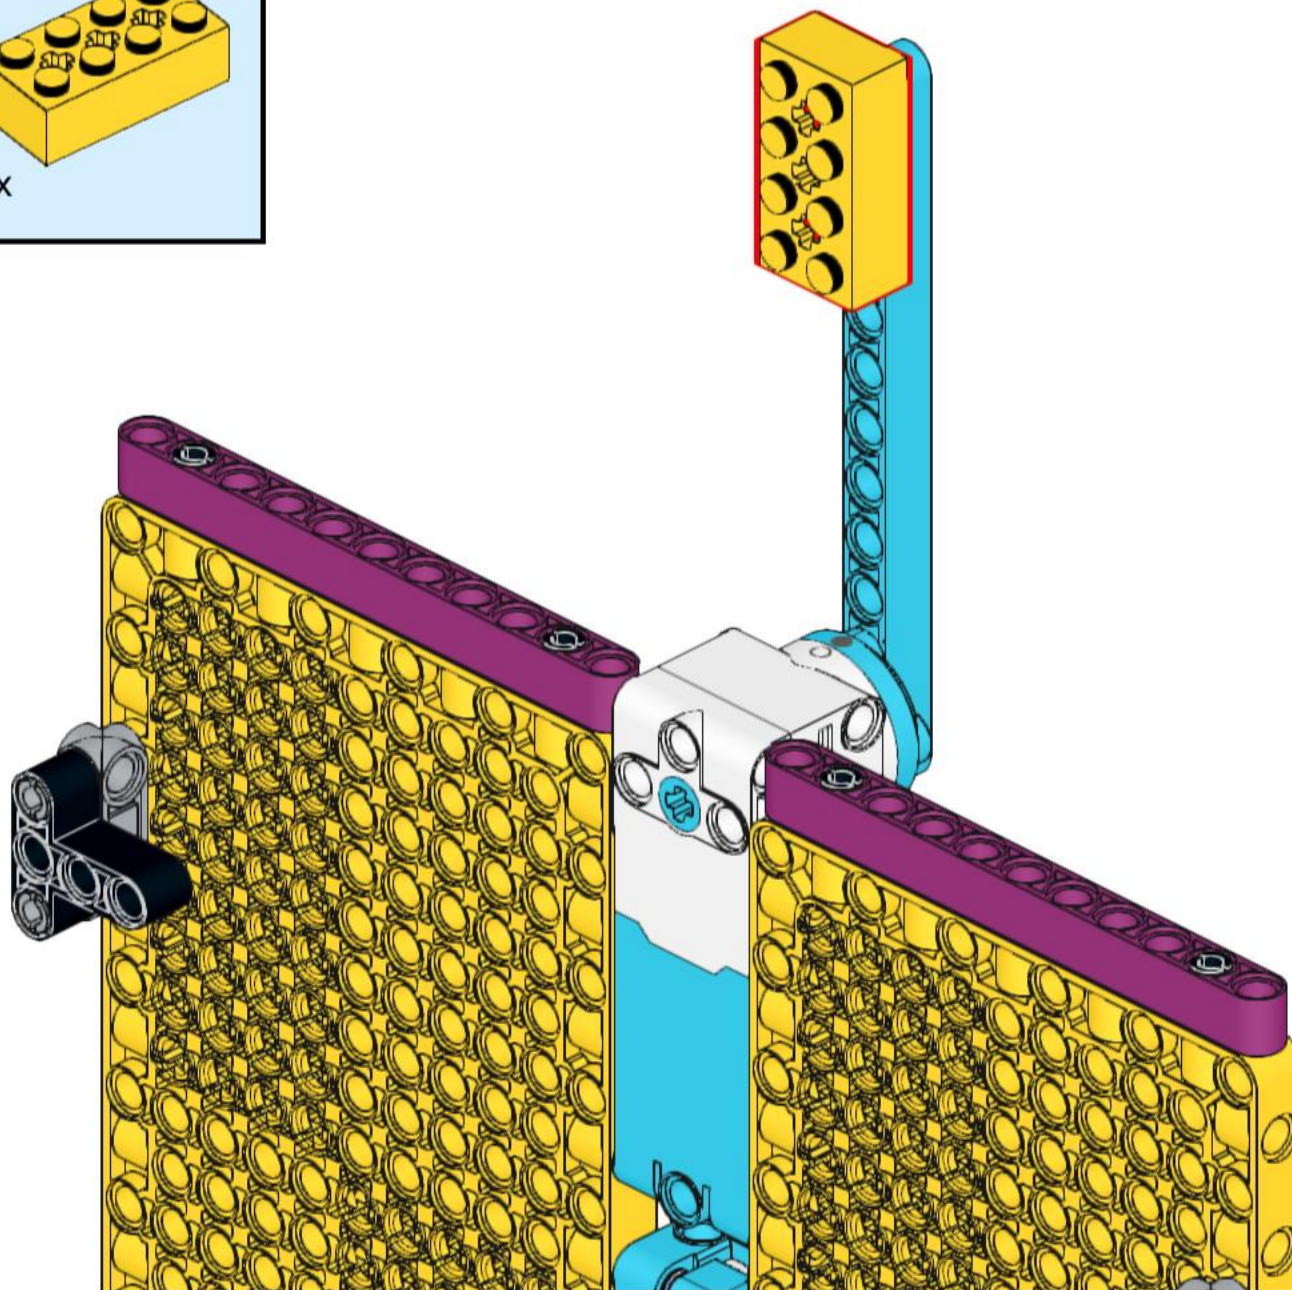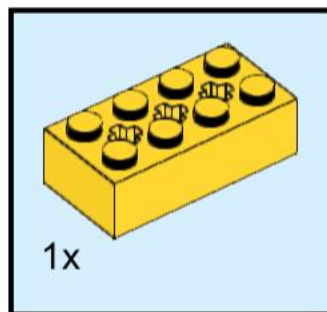

43

Connect the cable from the
bottom medium motor to
port A on the hub.

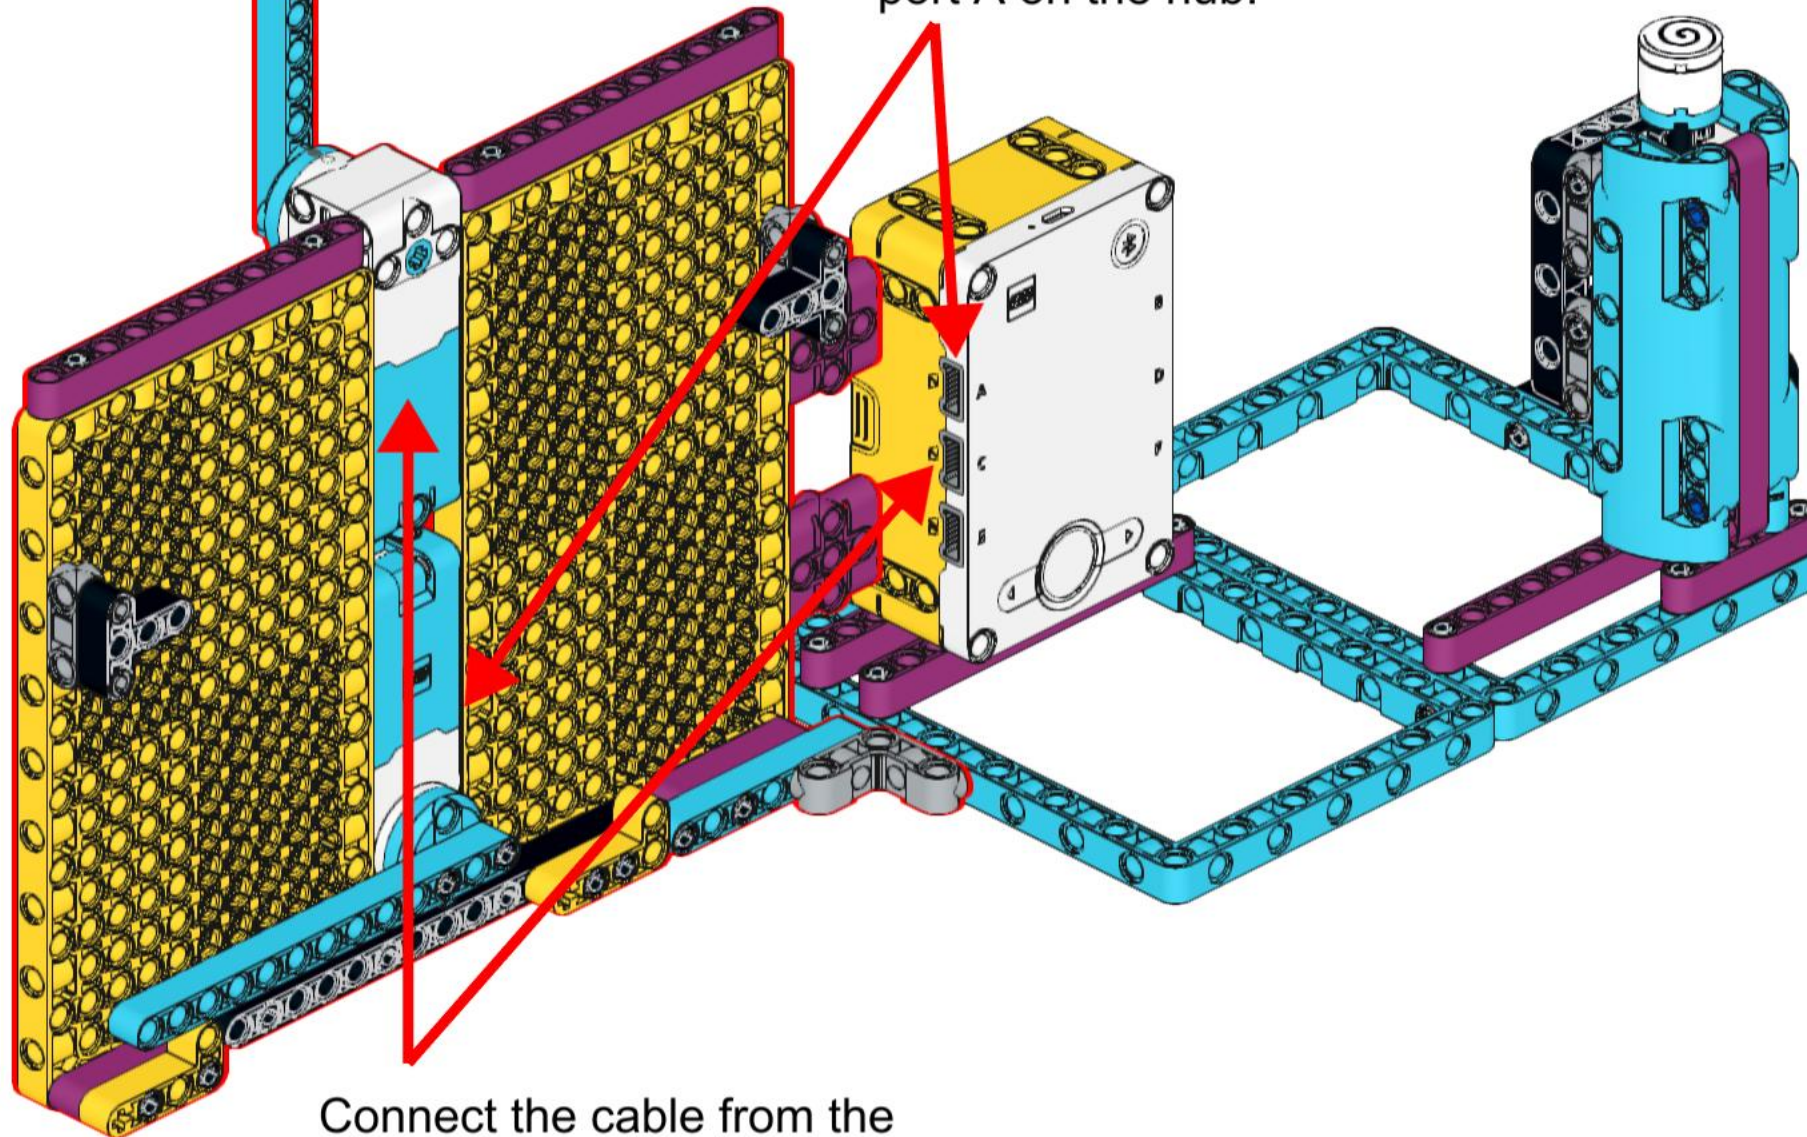

Connect the cable from the
top medium motor to port C
on the hub.

The final step is to print the thumb power and next thumb images. Cut them out using the outline as a guide. Slot the power meter image behind the blue pointer and black tabs. Attach the next thumb image to the yellow brick using some Blu-Tack. See the image below for reference.

