

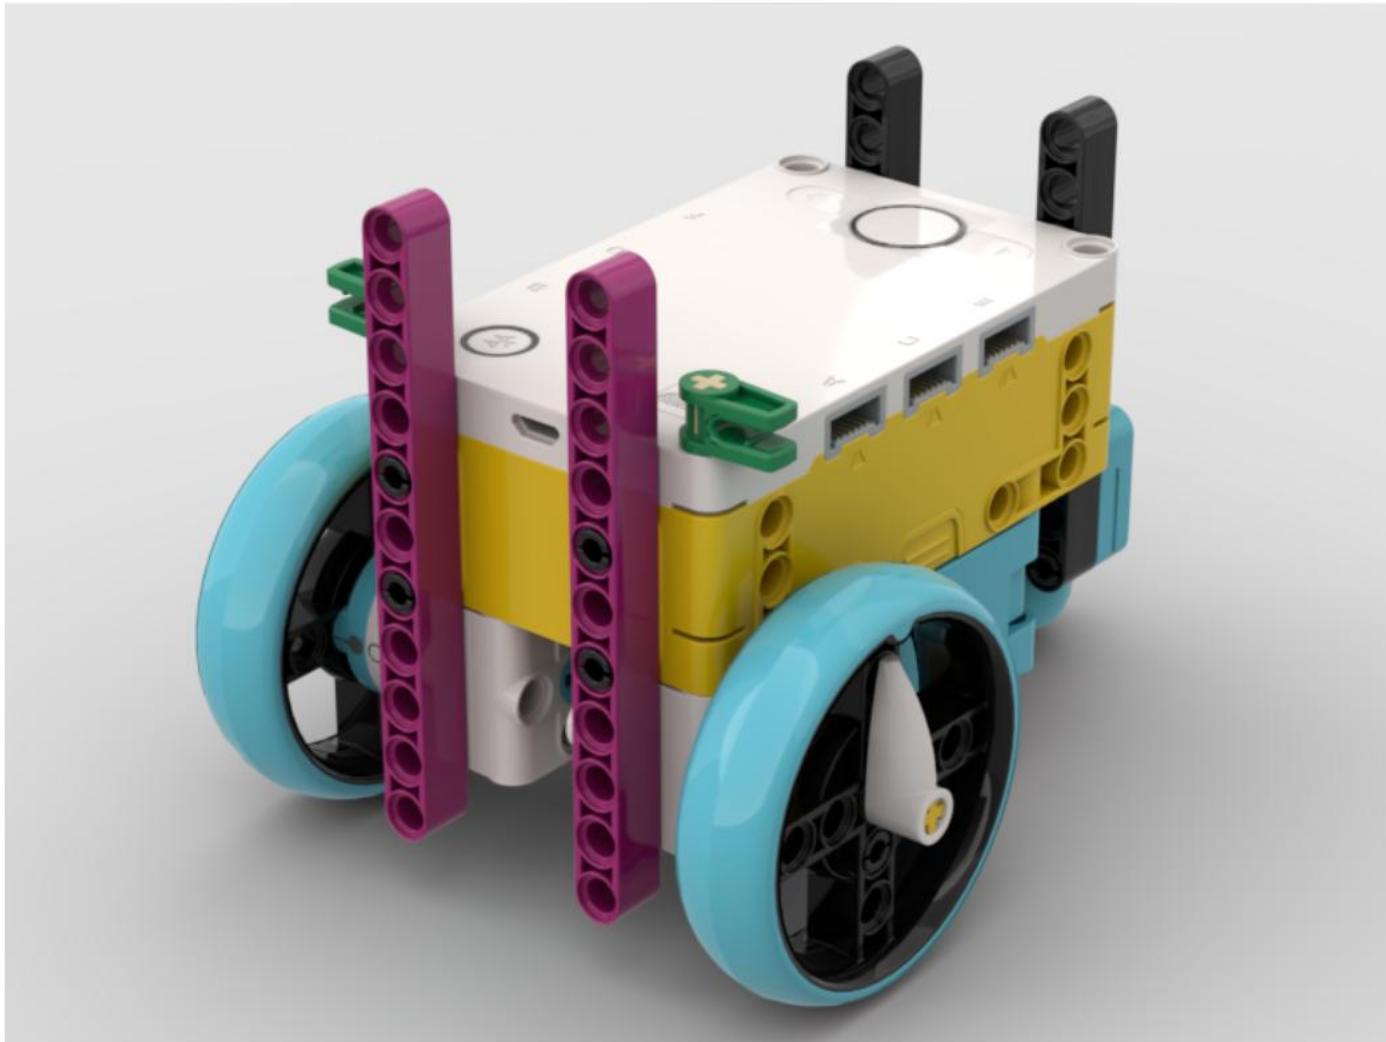


Robot Rescue Vehicle

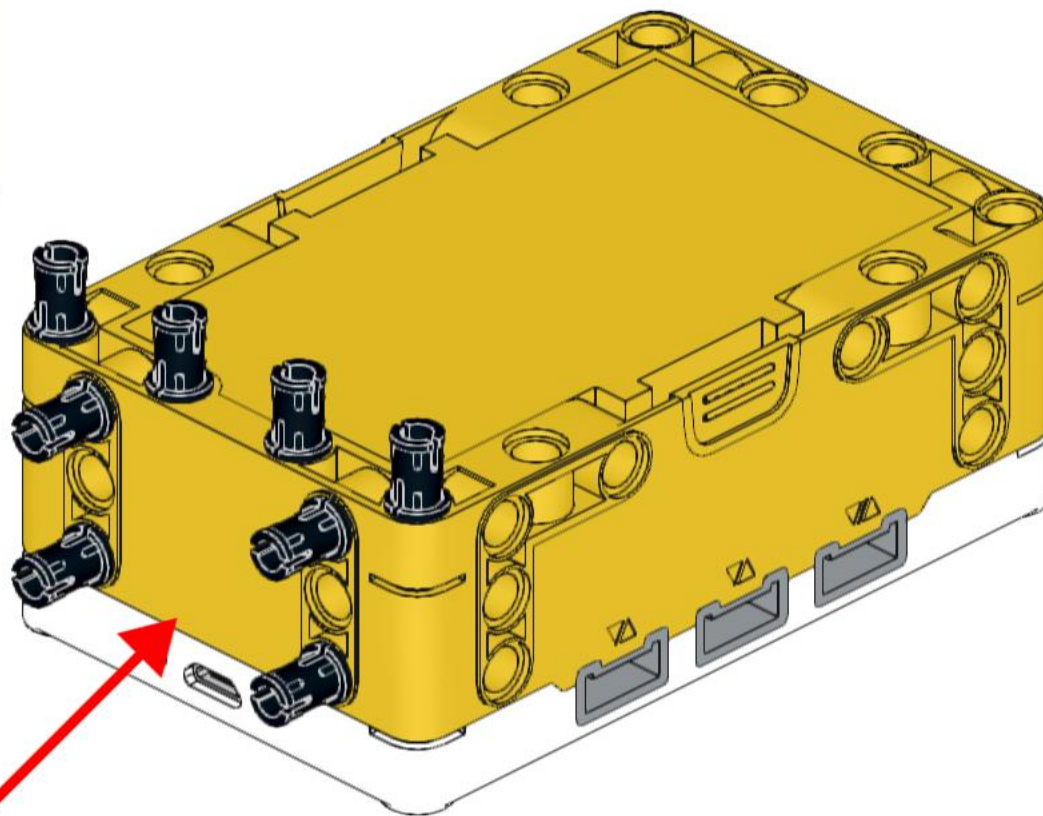



Building Instructions

1



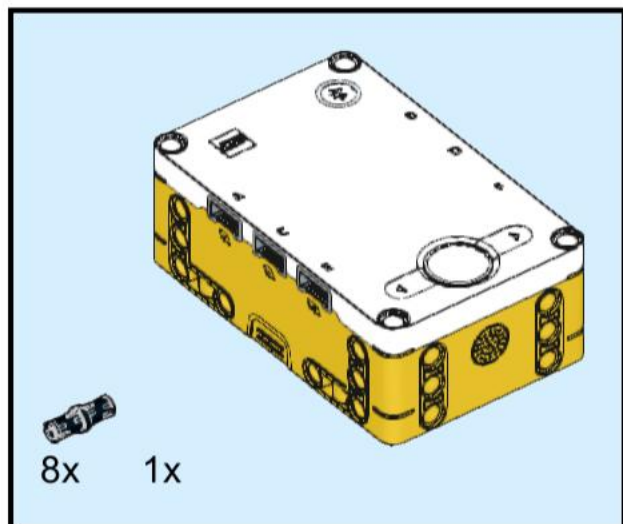


Ensure the charging
port is at this end
when you fit the pins.

2

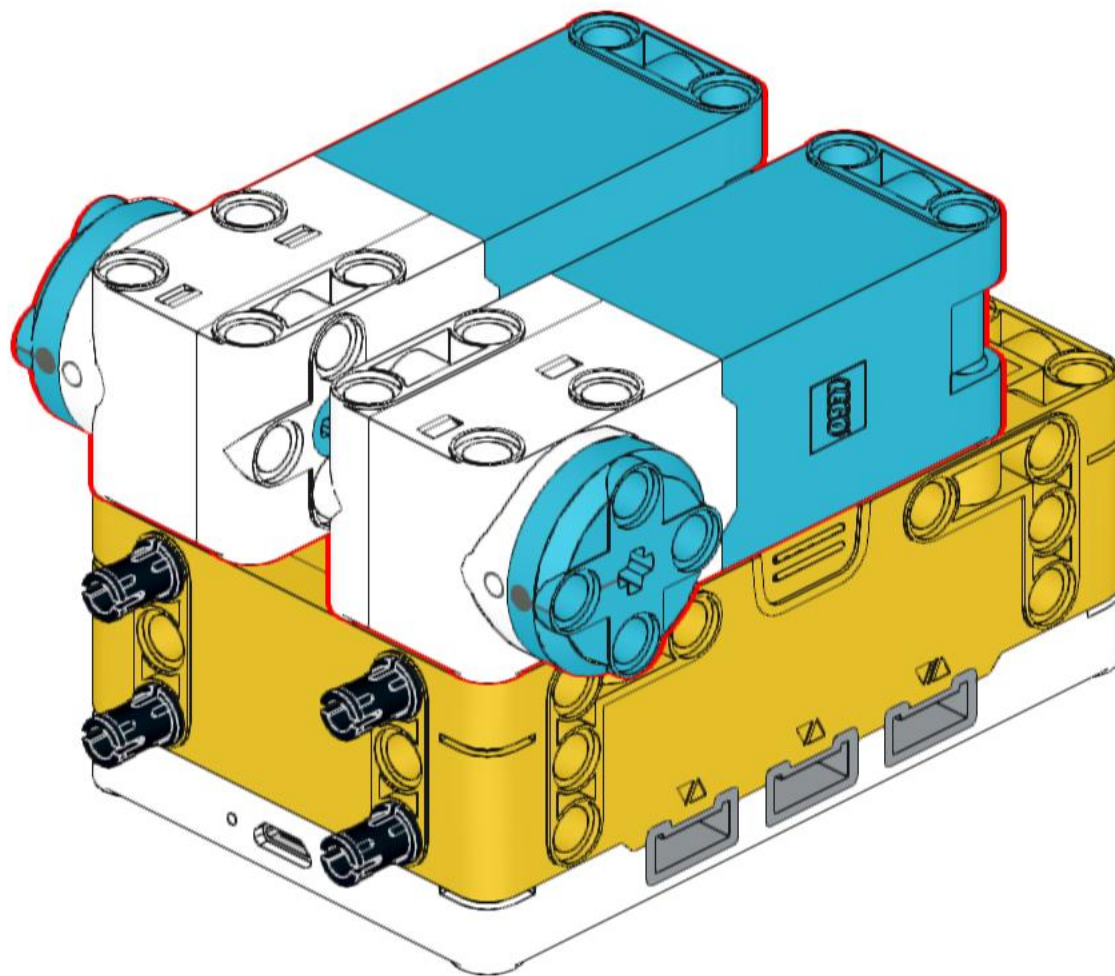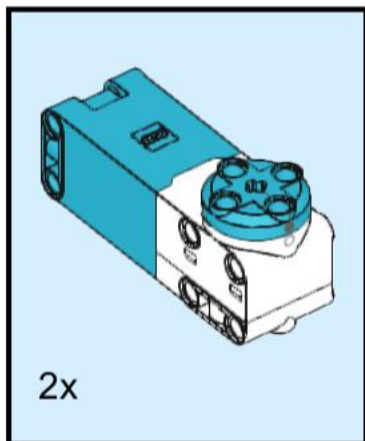


3

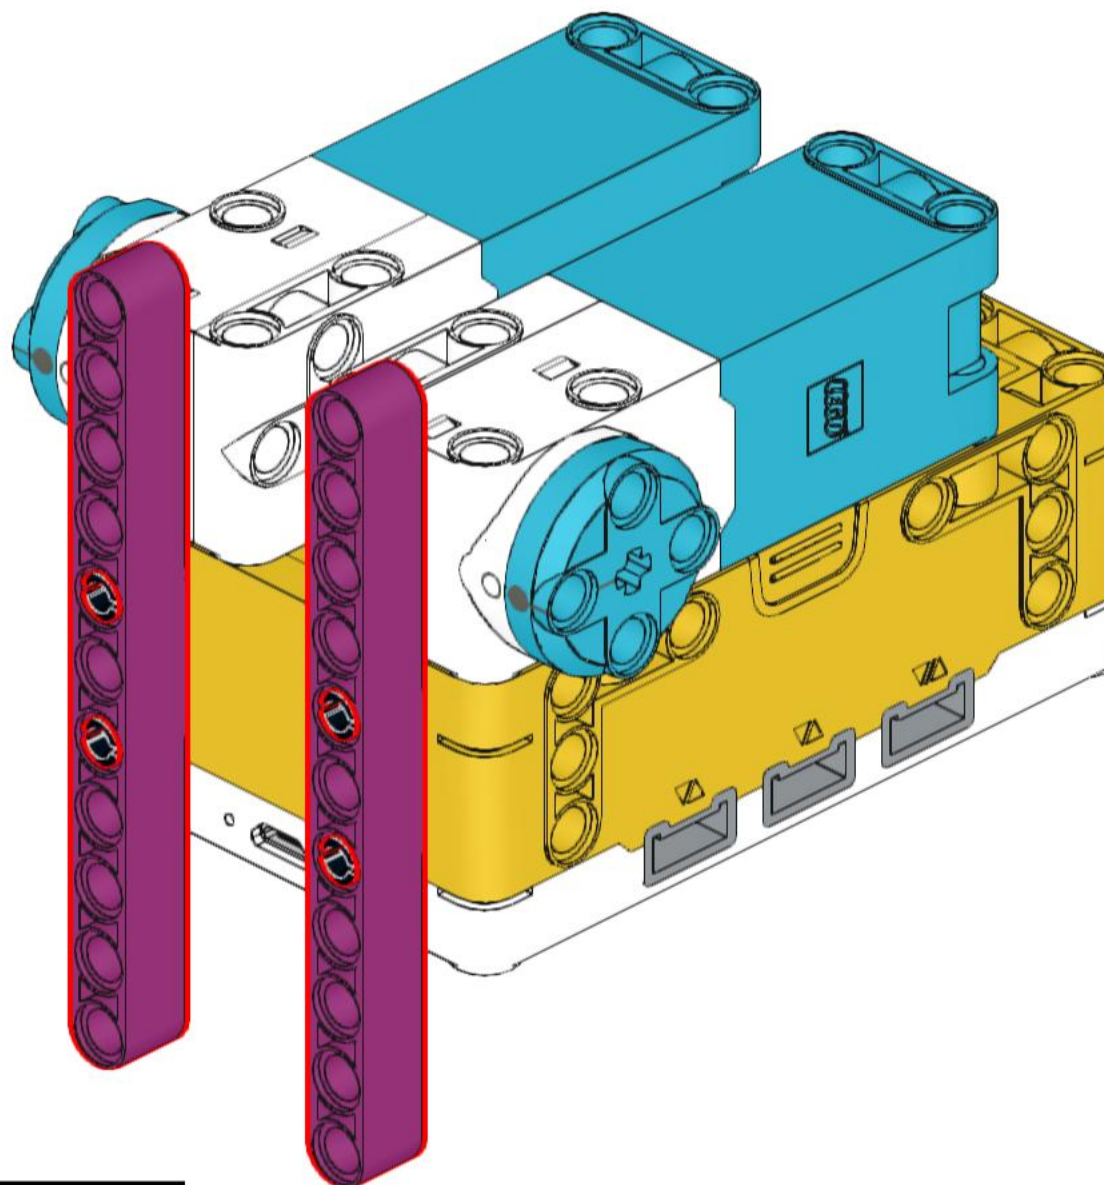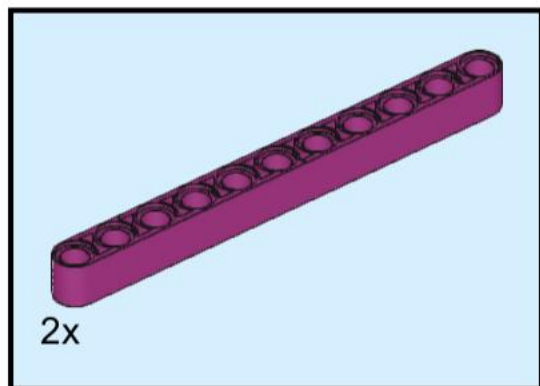



4

Connect
this motor
to port A

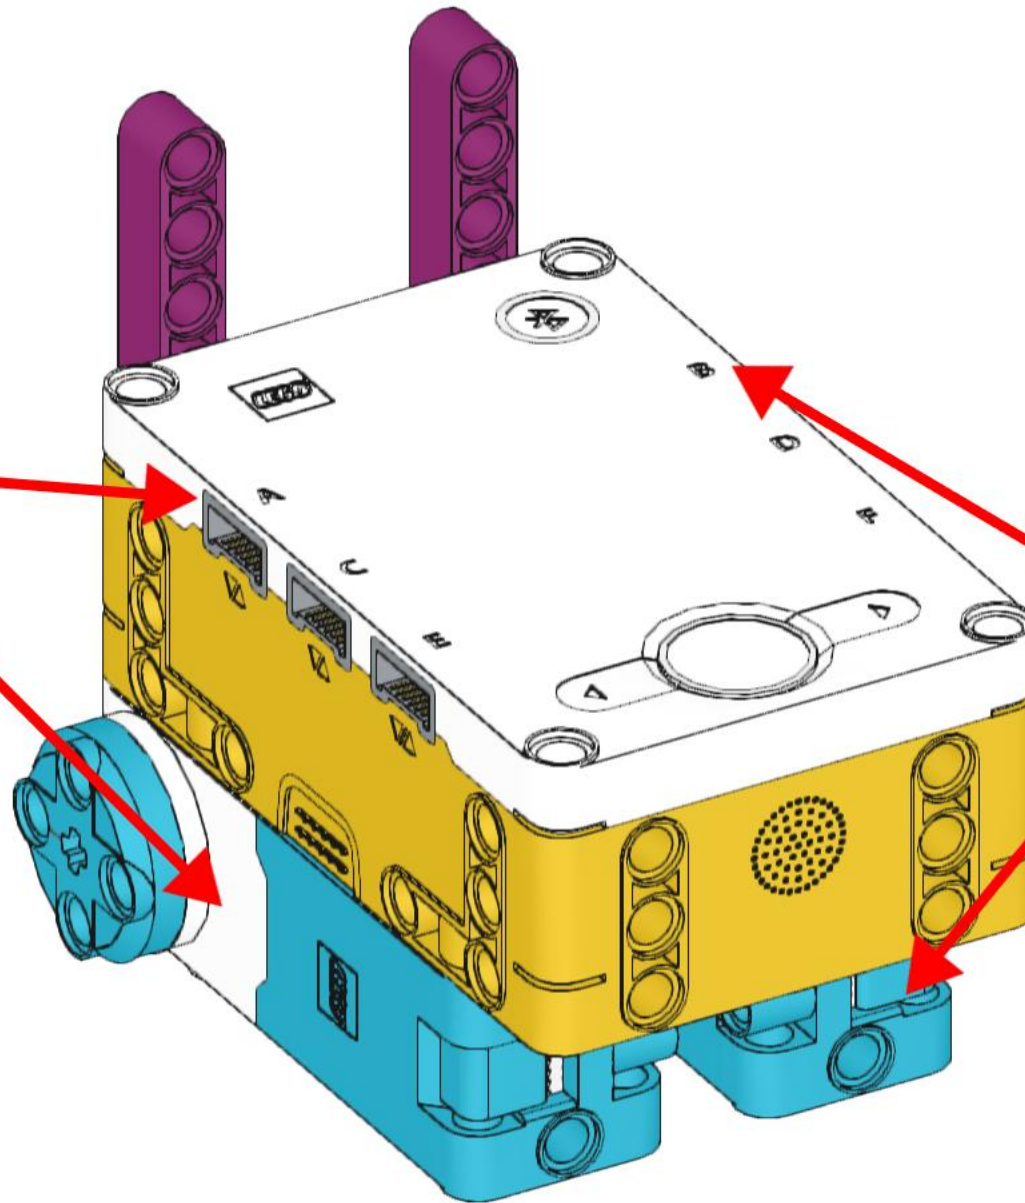


Connect
this motor
to port B



5

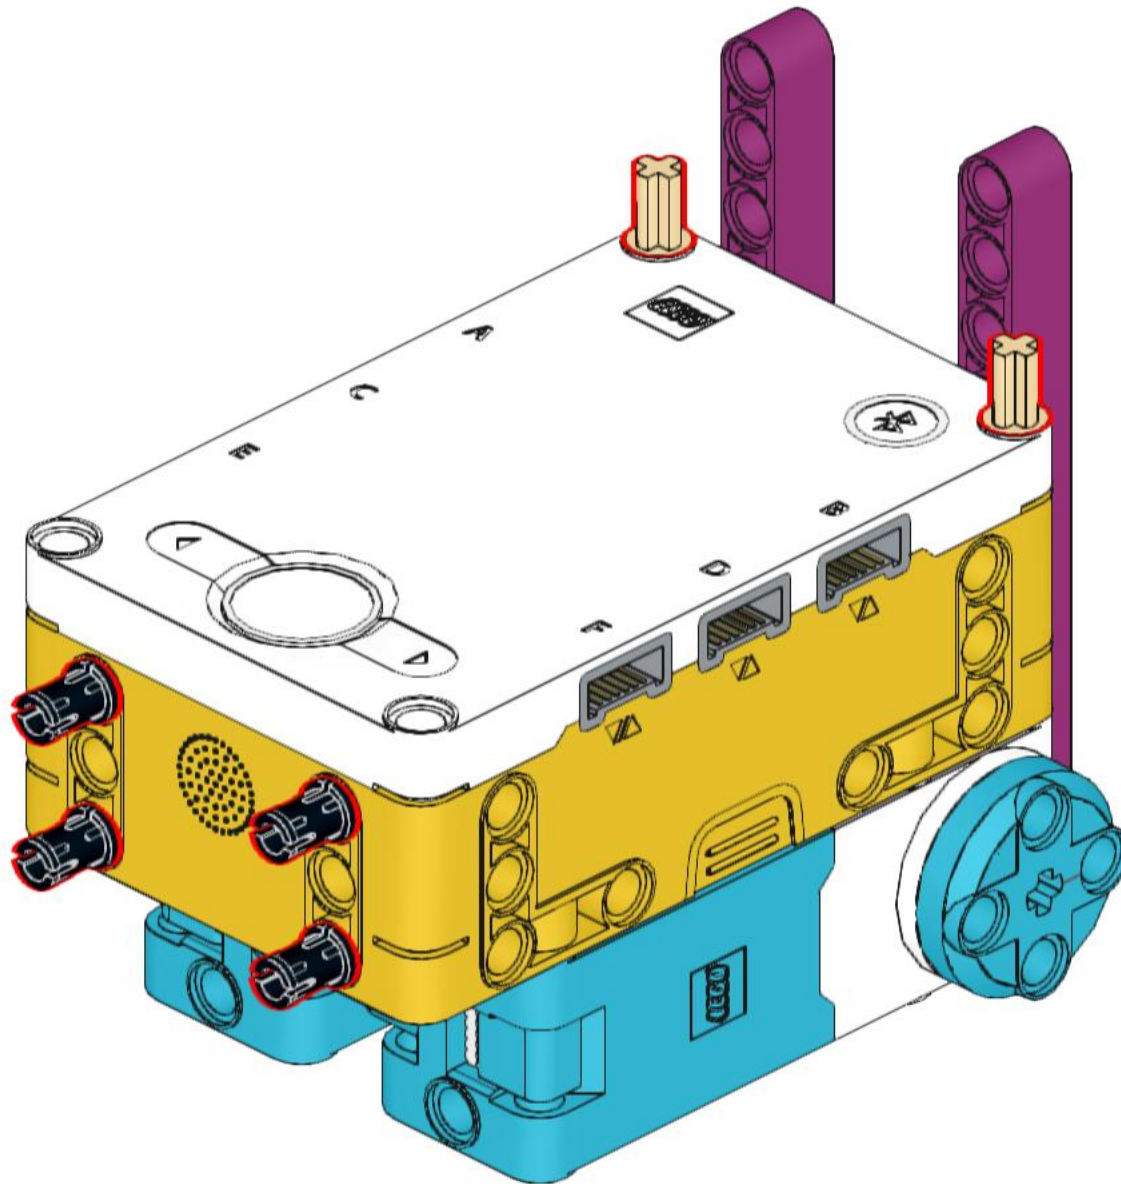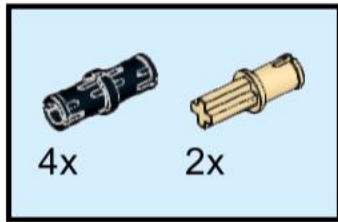


6

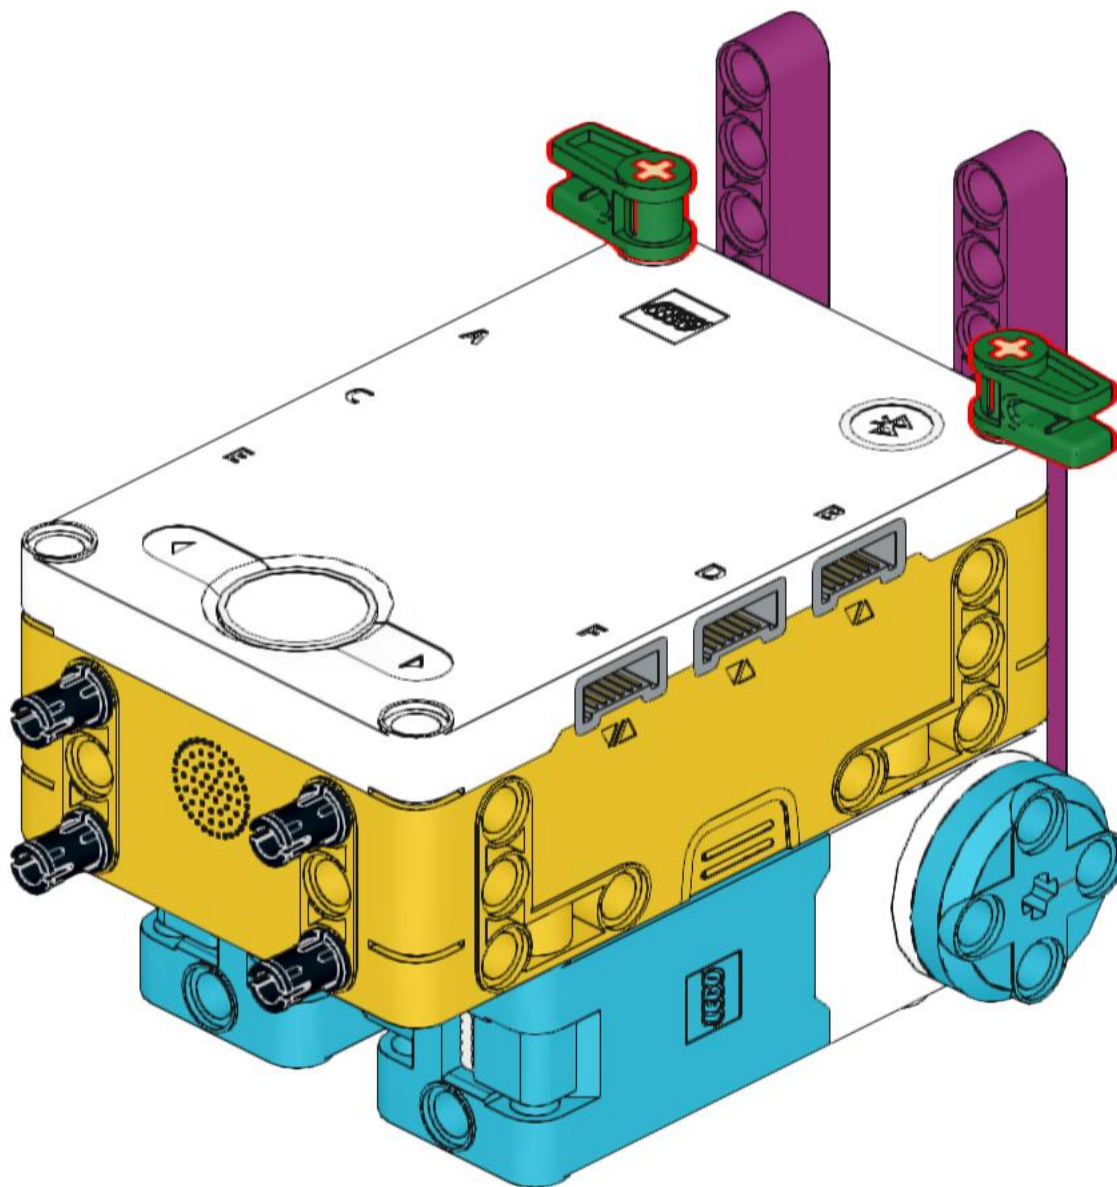



7

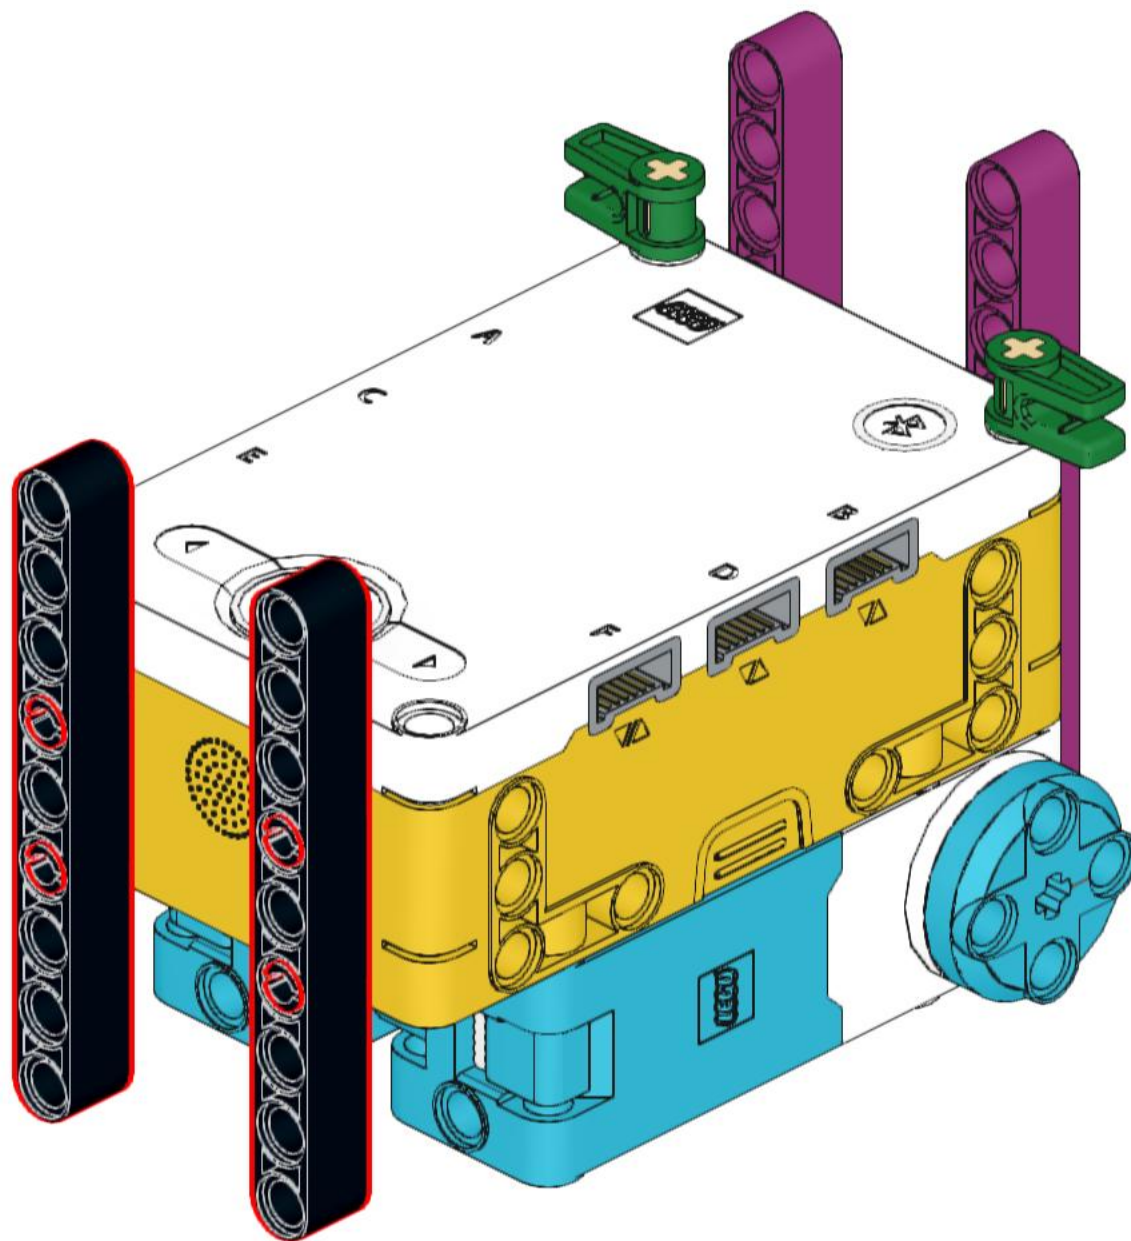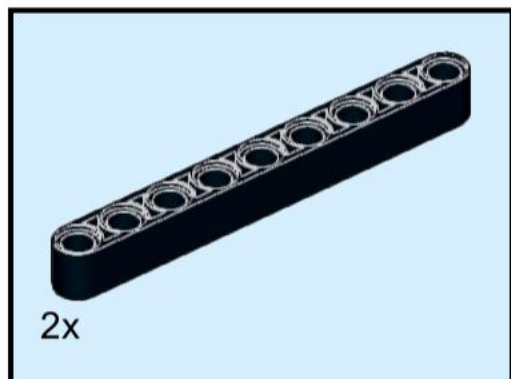



8

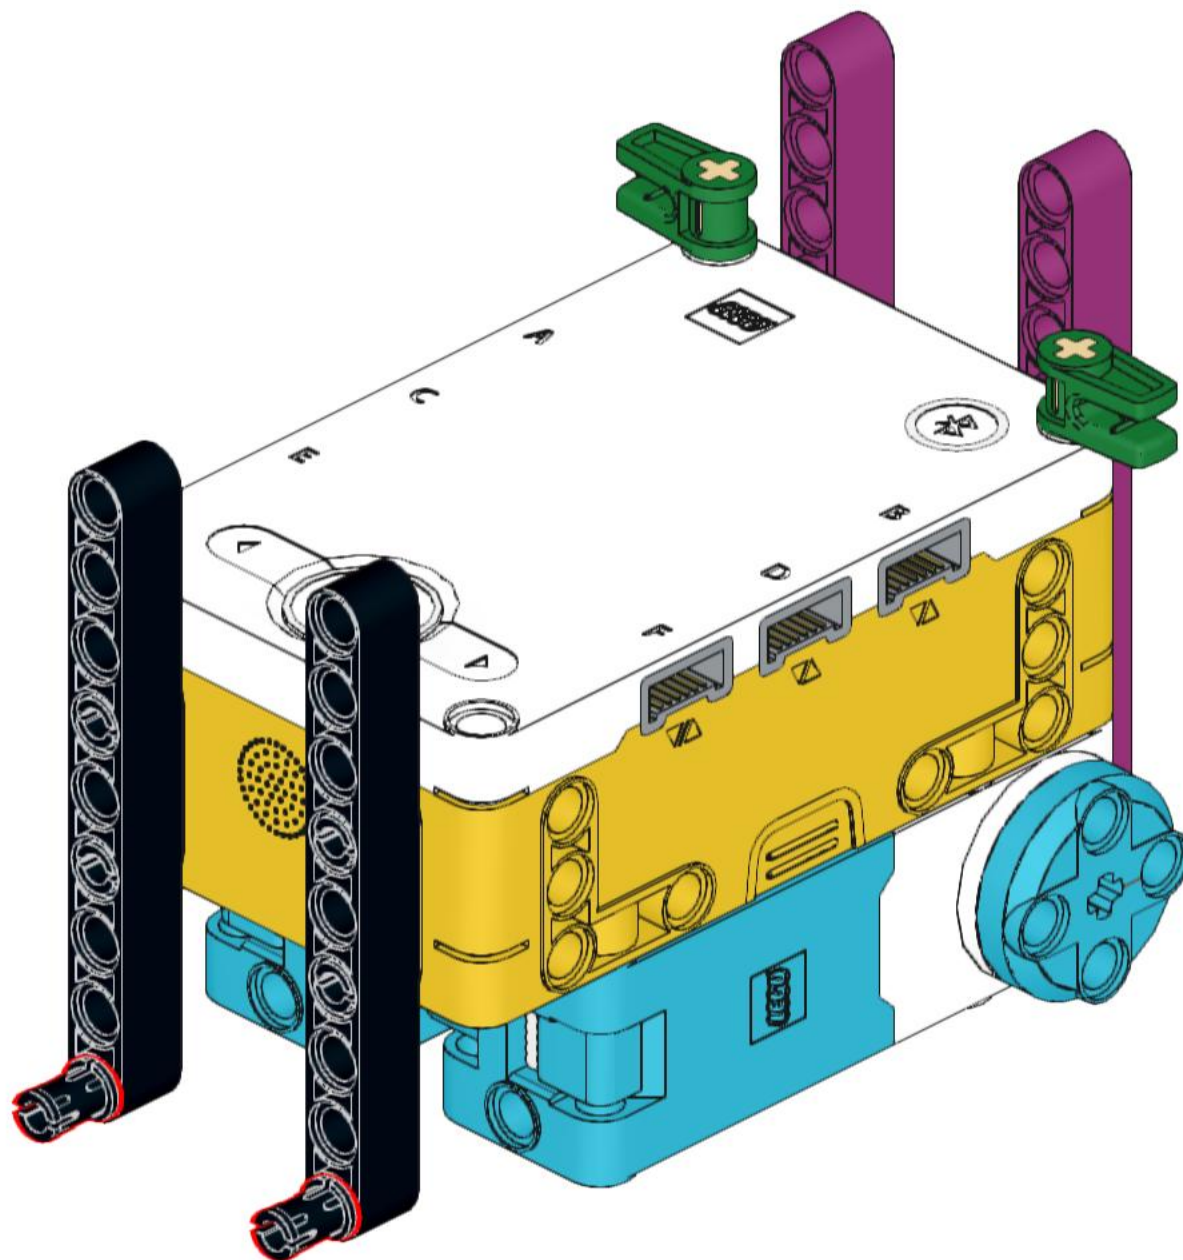



9

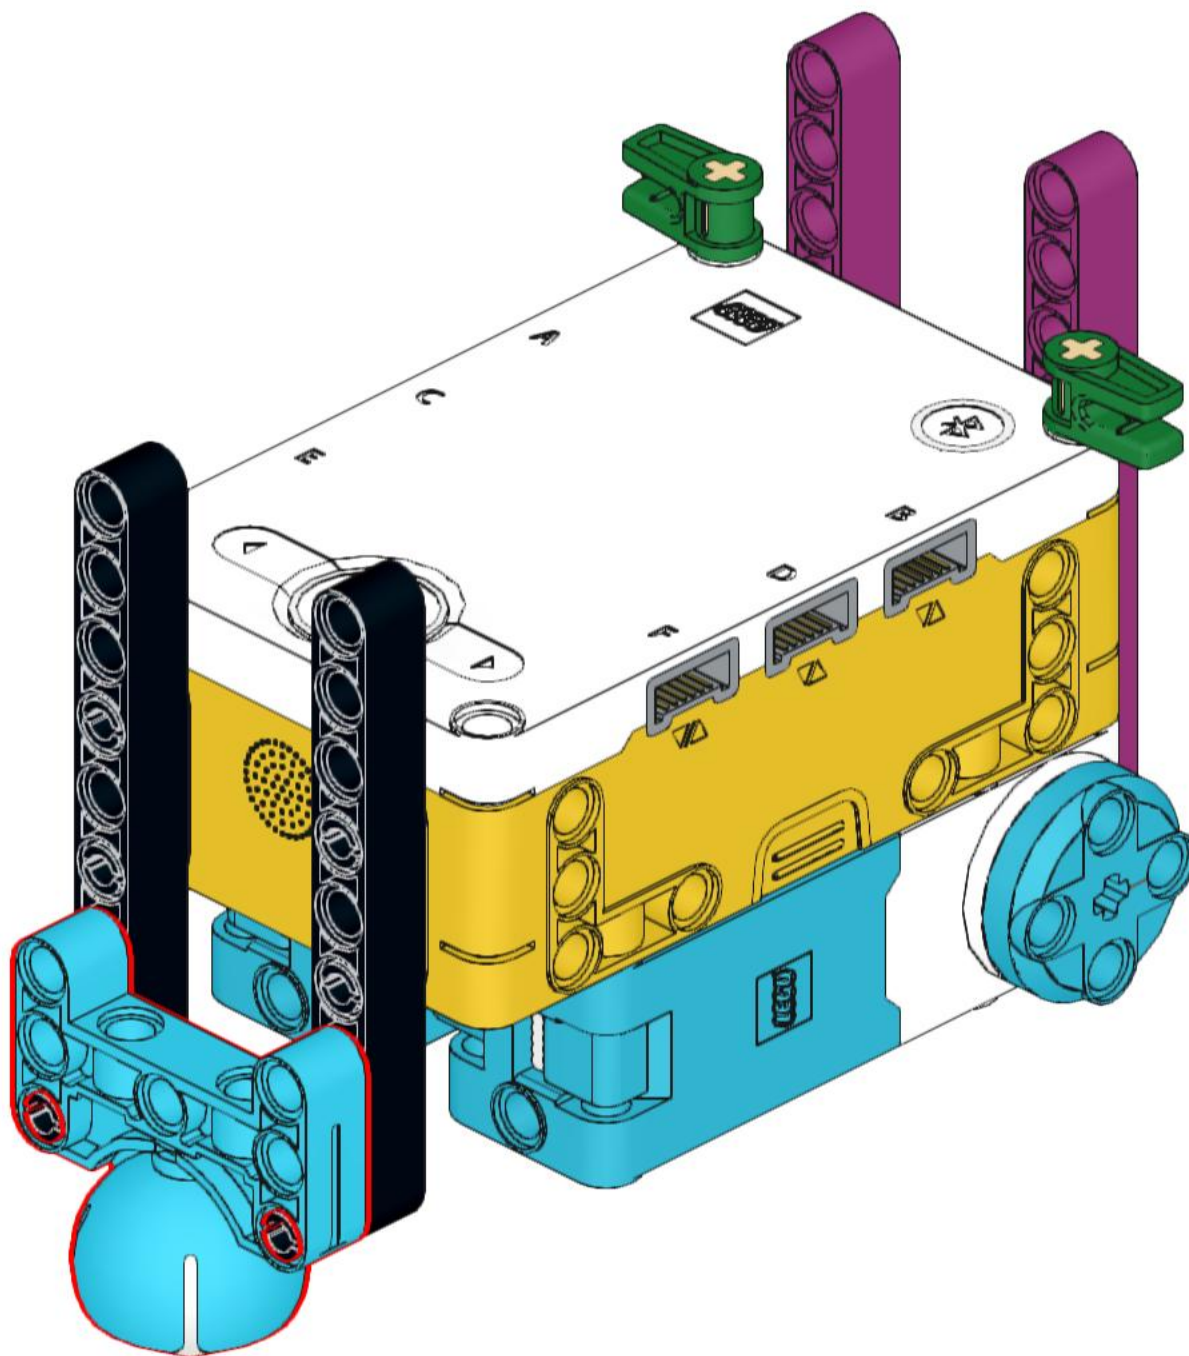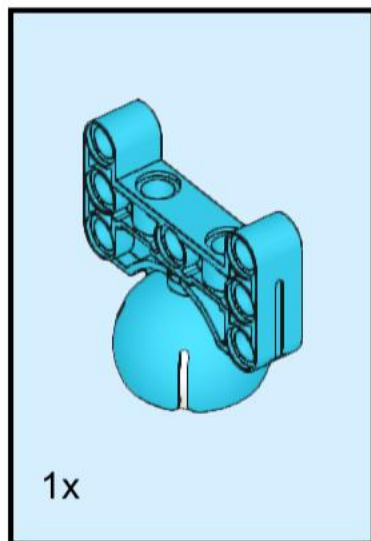



10

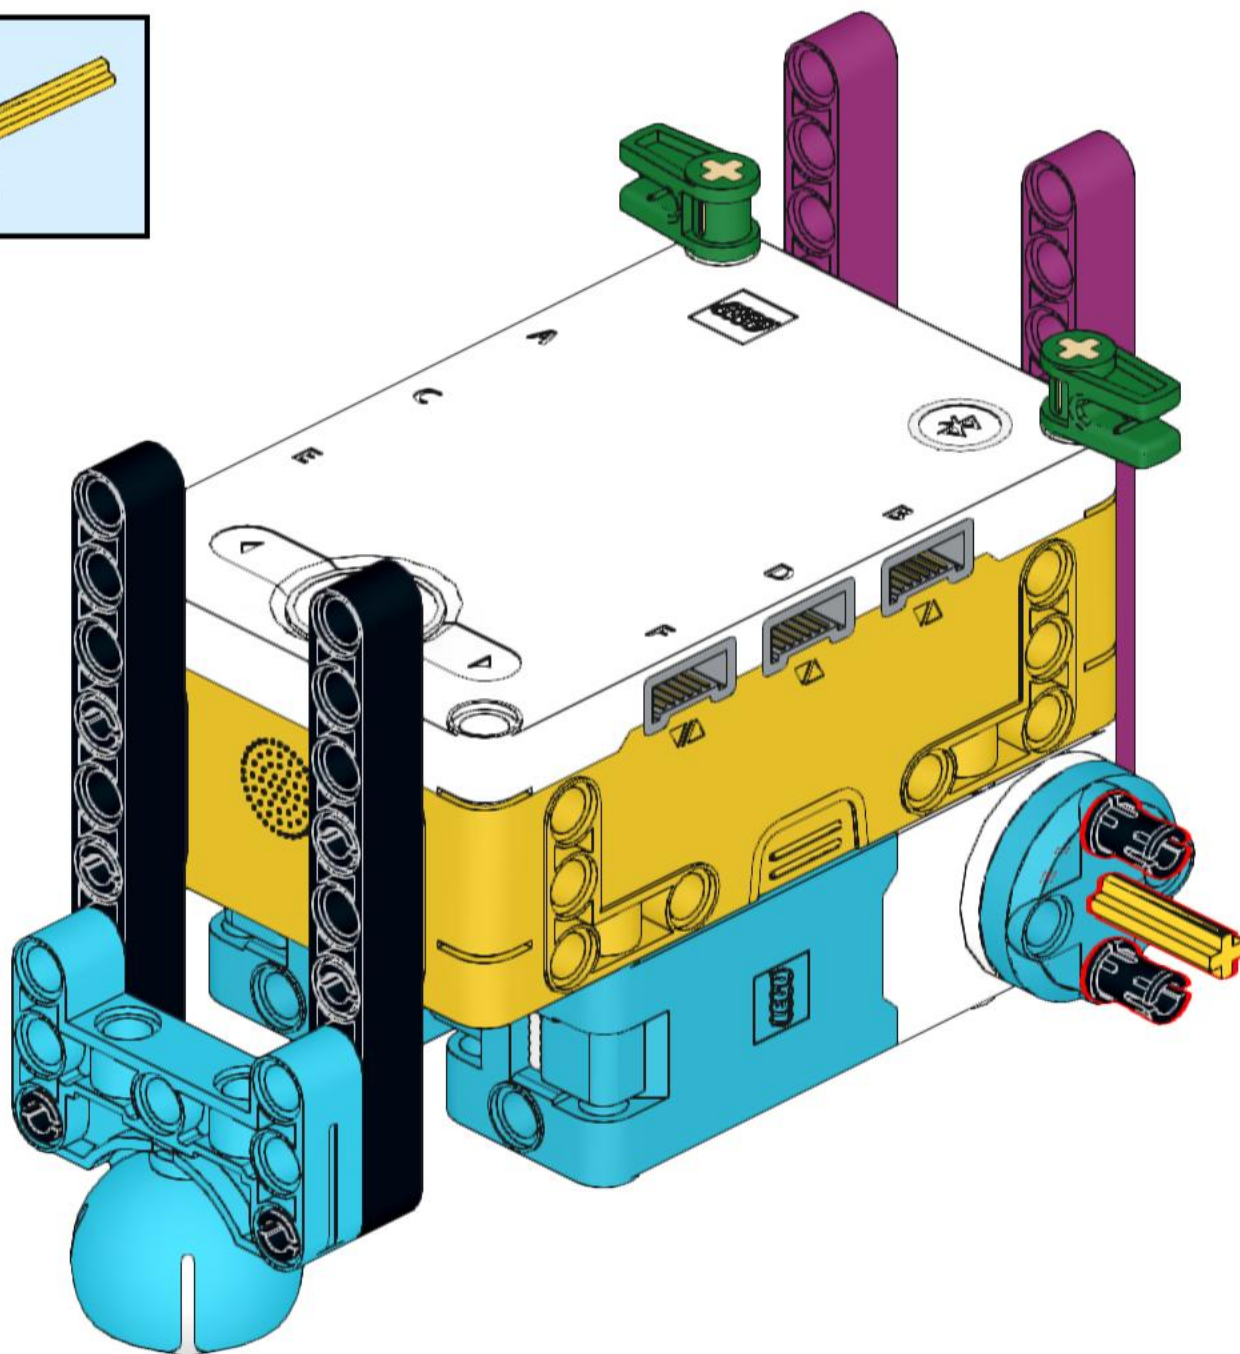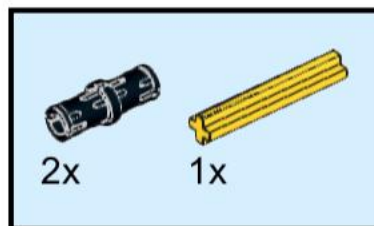



11

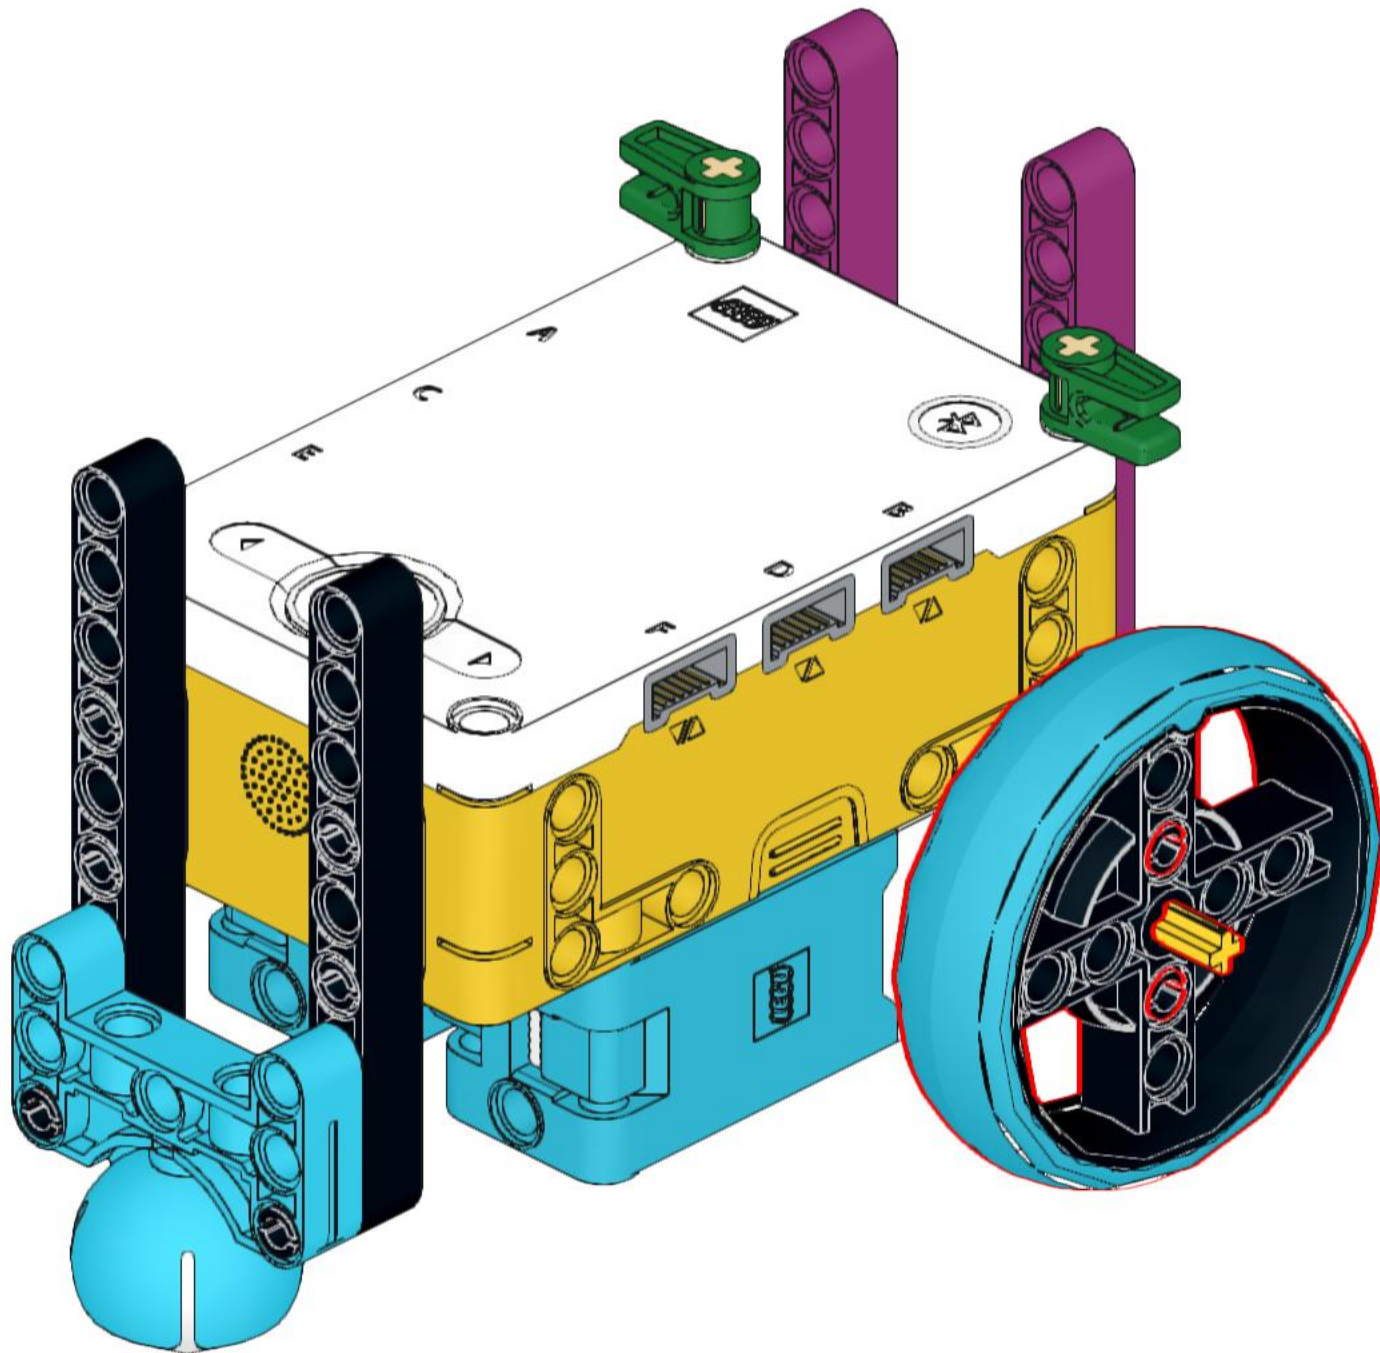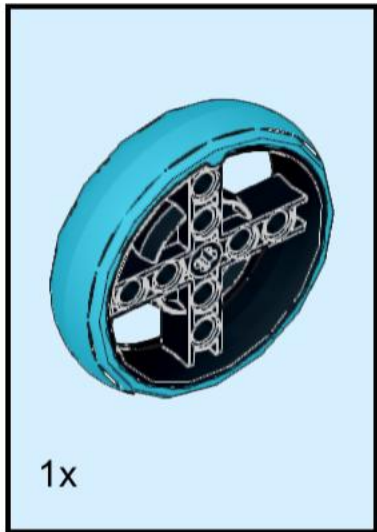



12

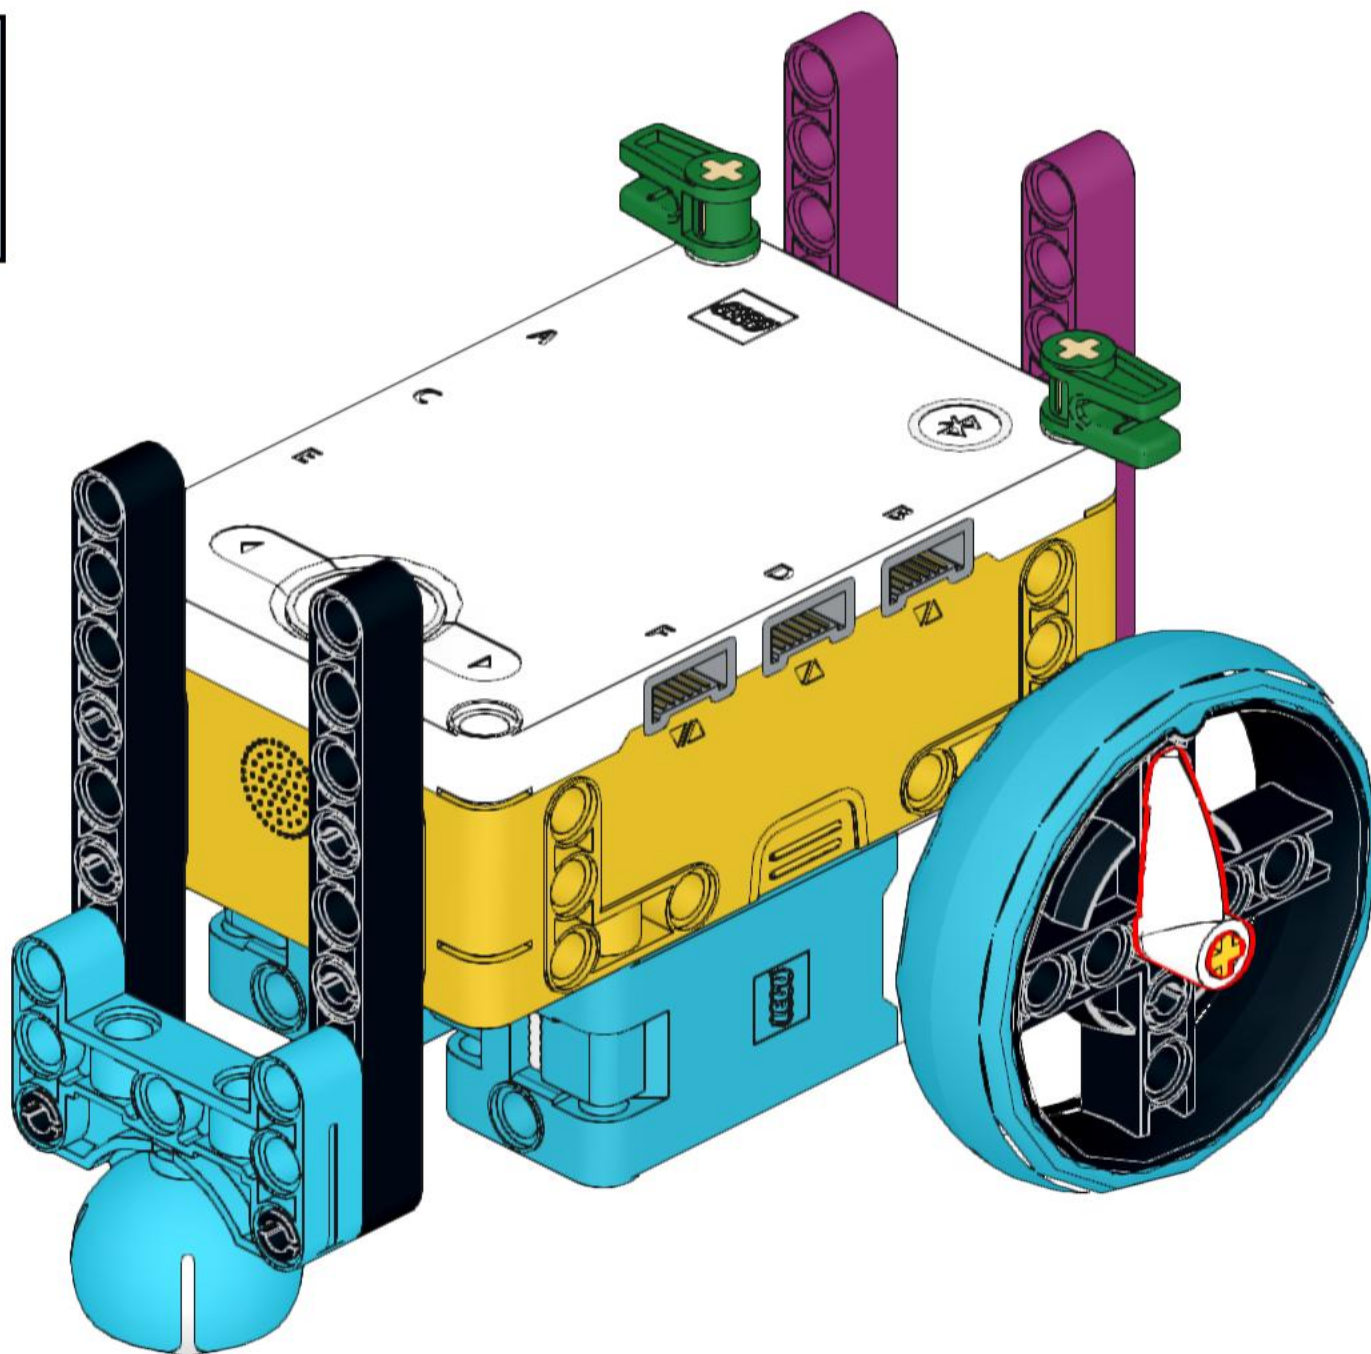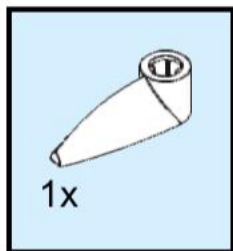



13

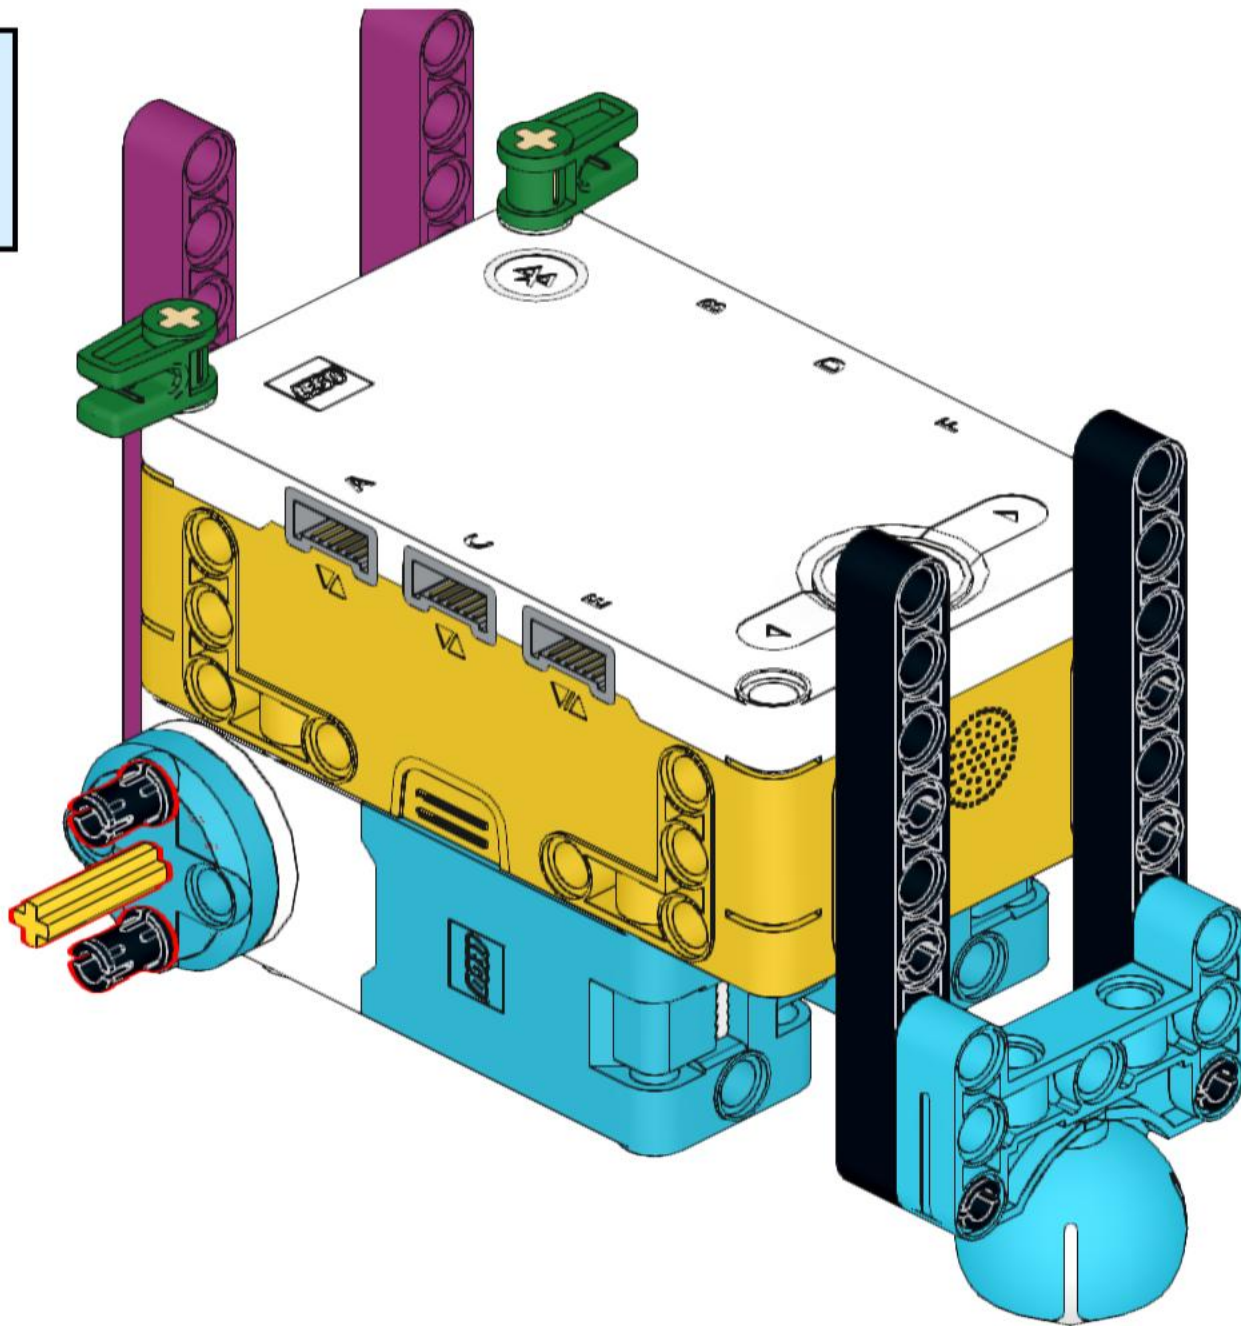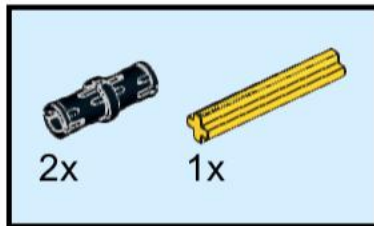

14

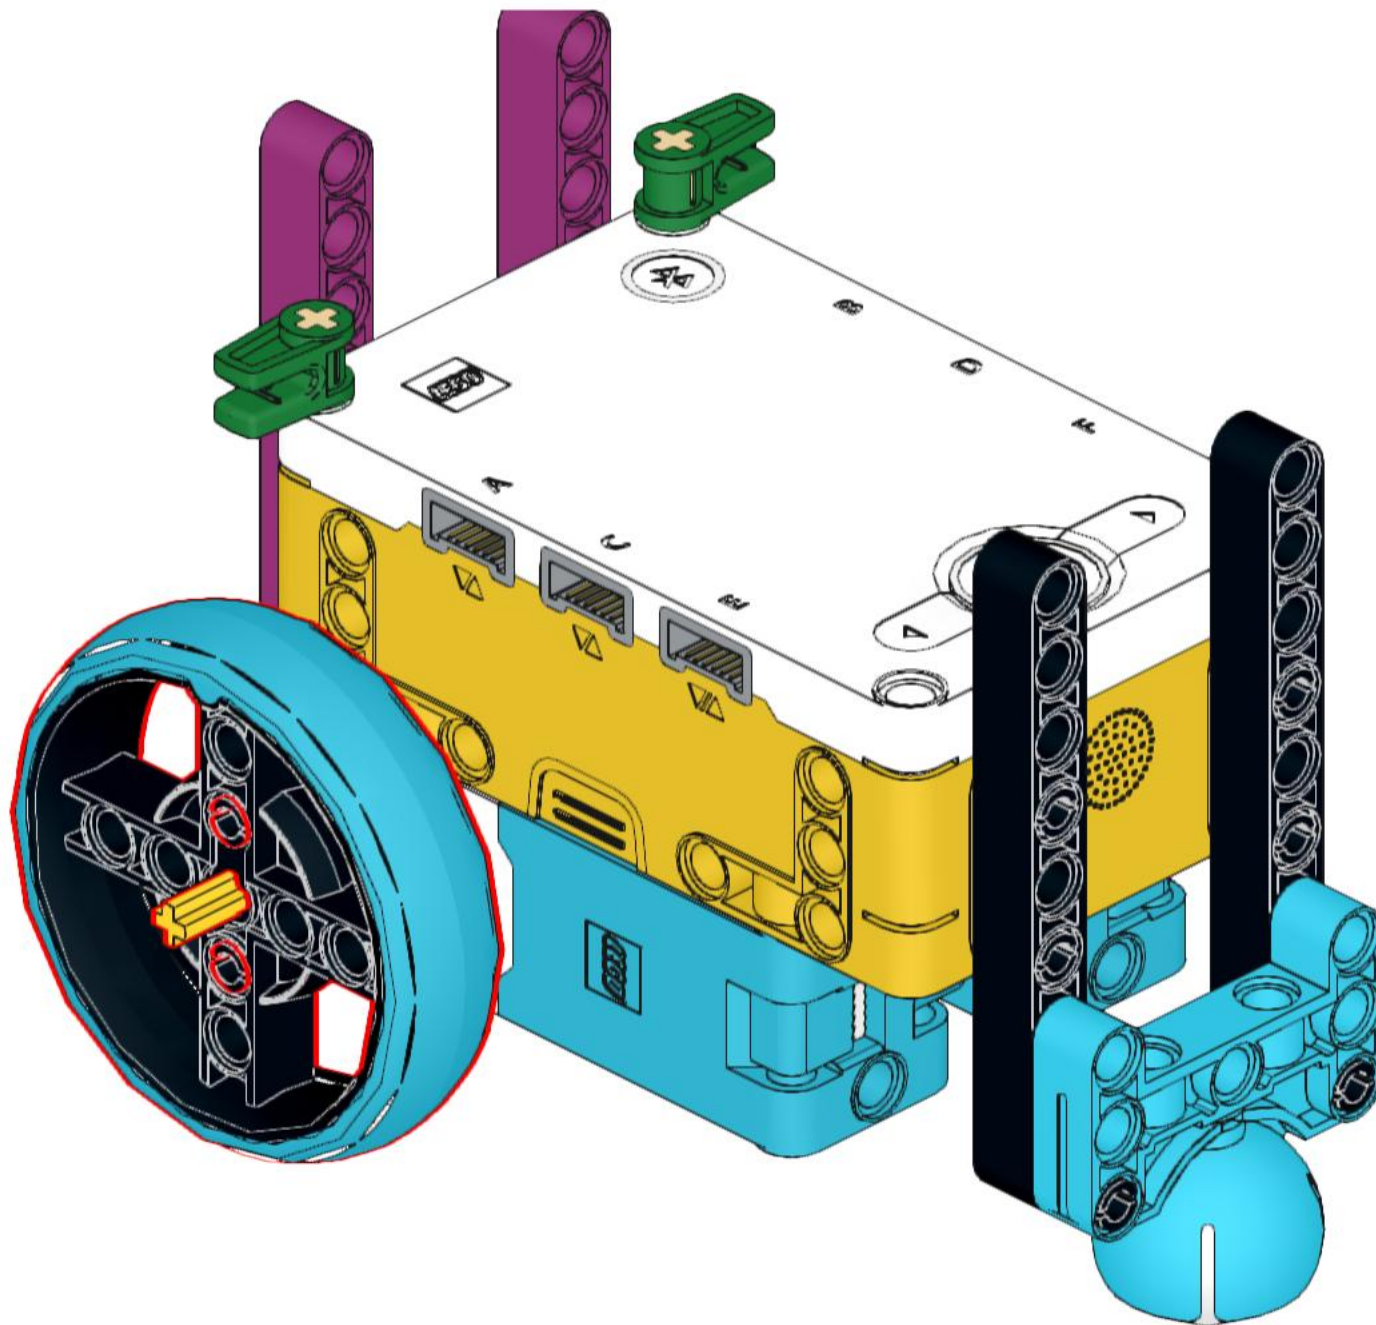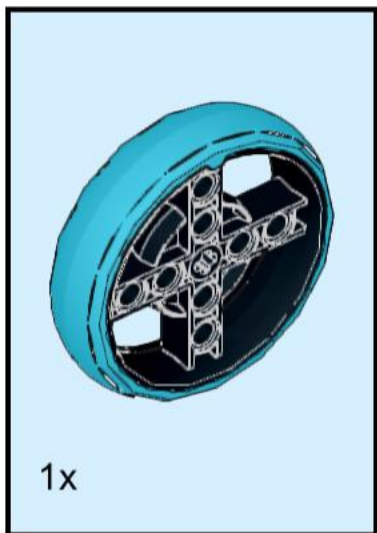

15

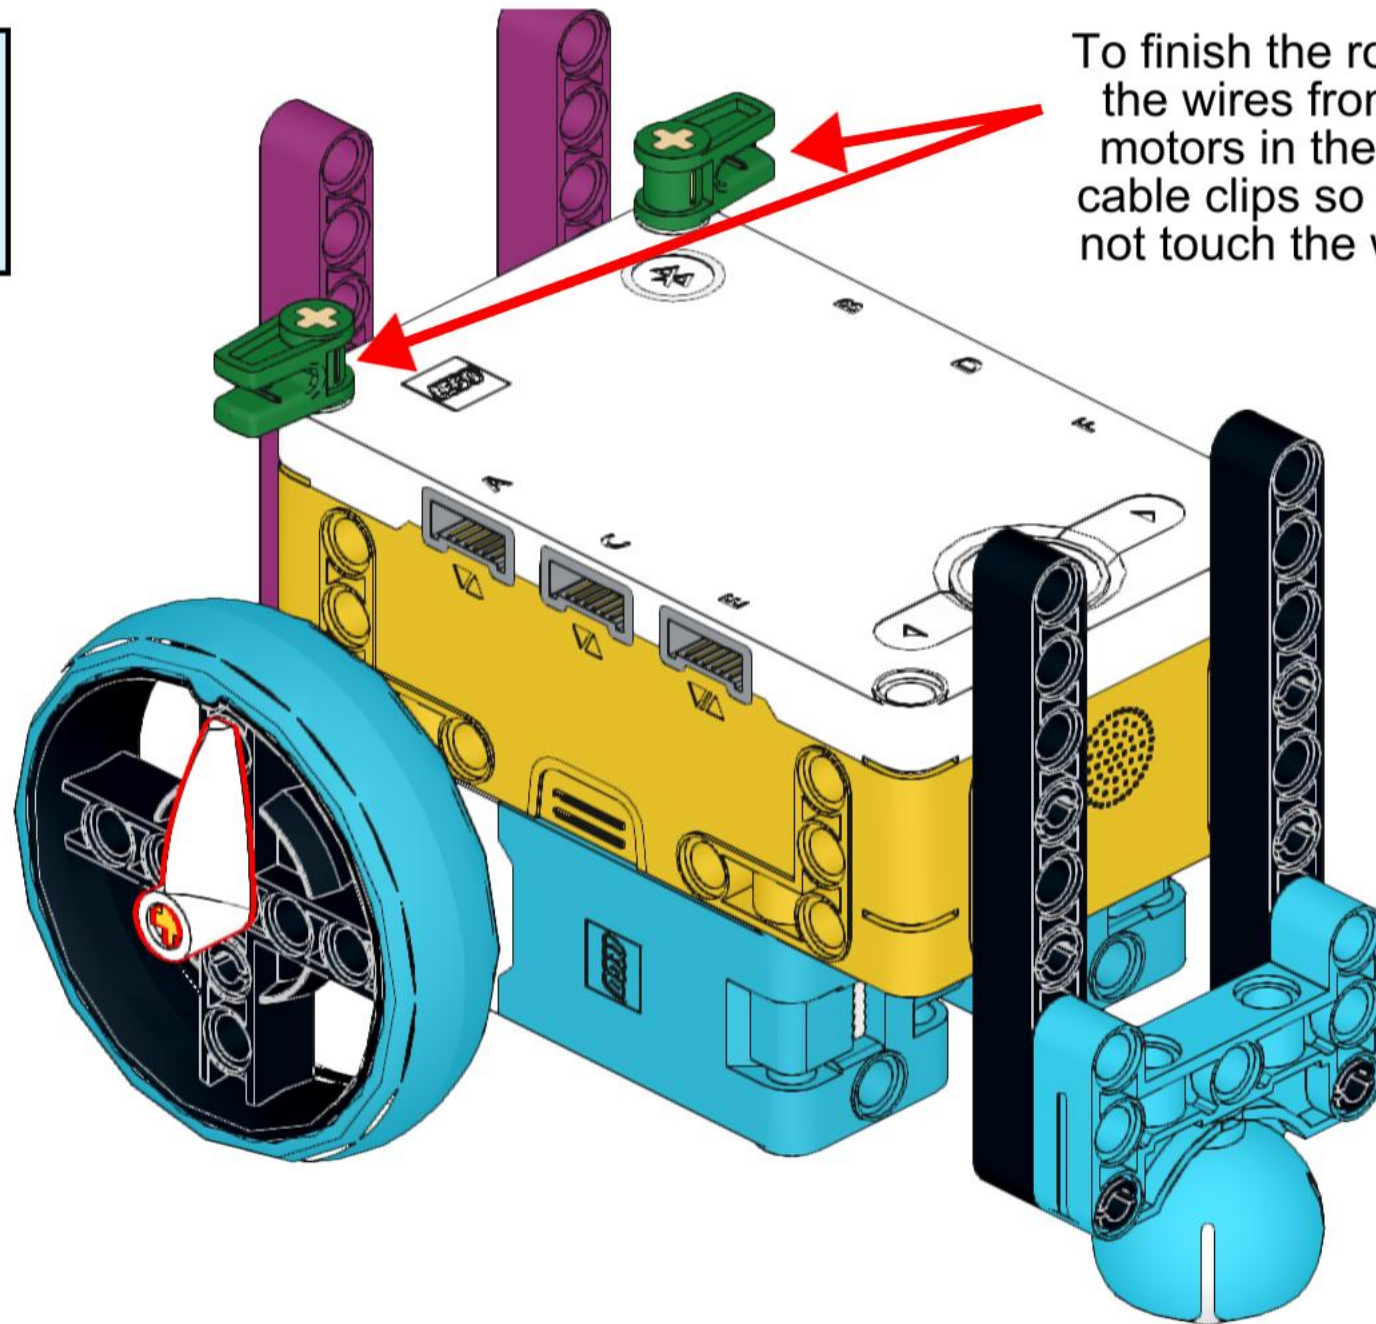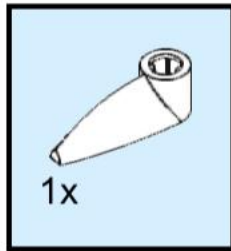

To finish the robot clip the wires from your motors in the green cable clips so they do not touch the wheels.